

Editor degli schemi elettrici

The KiCad Team

Editor degli schemi elettrici

The KiCad Team

Indice

.....	viii
1. Introduzione all'editor schemi elettrici di KiCad	1
1.1. Configurazione iniziale	1
1.2. The Schematic Editor User Interface	3
1.3. Navigating the editing canvas	3
1.4. Comandi da tastiera	4
1.5. Selection and the selection filter	5
1.6. Left toolbar display controls	6
2. Creazione e modifica di schemi elettrici	7
2.1. Introduzione	7
2.2. Schematic editing operations	7
2.3. Grids and snapping	9
2.4. Editing object properties	11
2.5. Working with symbols	12
2.5.1. Placing symbols	12
2.5.2. Placing power symbols	14
2.5.3. Moving symbols	14
2.5.4. Editing symbol properties	14
2.5.5. Alternate pin functions	18
2.5.6. Updating and exchanging symbols	19
2.5.7. Comparing symbols between schematic and library	23
2.5.8. Symbol Fields Table	26
2.6. Reference Designators and Symbol Annotation	28
2.6.1. Auto-annotation	29
2.6.2. Strumento di annotazione	29
2.7. Connessioni elettriche	31
2.7.1. Wires	31
2.7.2. Labels	34
2.7.3. Buses	37
2.7.4. Power Symbols	41
2.7.5. Net name assignment rules	42
2.7.6. PWR_FLAG	43
2.7.7. No-connection flag	43
2.7.8. Hidden Power Pins	43
2.8. Net classes	44
2.8.1. Managing net classes in Schematic Setup	44
2.8.2. Graphically assigning net classes in the schematic	47
2.9. Component classes	49
2.10. Graphics and text	50
2.10.1. Text and text boxes	51
2.10.2. Tables	53
2.10.3. Graphic Shapes	57
2.10.4. Bitmap Images	58
2.10.5. Bulk editing text and graphics	59
2.10.6. Blocco del titolo del foglio	61
2.11. Schematic editing convenience functions	63
2.11.1. Pin helpers	63

2.11.2. Converting between object types	63
2.11.3. Swapping objects	64
2.12. Schematic Setup	64
2.12.1. Schematic formatting	64
2.12.2. Field name templates	66
2.12.3. BOM presets	67
2.12.4. ERC violation severity and pin conflicts map	67
2.12.5. Net classes	70
2.12.6. Bus alias definitions	71
2.12.7. Variabili di testo	72
2.12.8. Embedding files	72
2.12.9. Importing settings	74
2.13. Opening legacy schematics	75
2.13.1. Opening KiCad 5.0 and 5.1 schematics	75
2.13.2. Opening pre-5.0 schematics	78
3. Schemi elettrici gerarchici	79
3.1. Introduzione	79
3.2. Adding sheets to a design	79
3.3. Navigating between sheets	81
3.4. Electrical connections between sheets	82
3.4.1. Label overview	82
3.4.2. Hierarchical sheet pins	82
3.4.3. Syncing sheet pins	84
3.5. Hierarchical design examples	85
3.5.1. Simple hierarchy	86
3.5.2. Gerarchia complessa	86
3.5.3. Gerarchia piatta	87
4. Inspecting a schematic	88
4.1. Find tool	88
4.2. Search panel	89
4.3. Net highlighting	90
4.4. Net navigator	90
4.5. Cross-probing from the PCB	91
4.6. Electrical rules checking	92
4.6.1. ERC example	94
4.6.2. Per-net ERC markers	95
4.6.3. Power pins and power flags	95
4.6.4. ERC Configuration	98
4.6.5. List of ERC checks	100
4.6.6. User-definable ERC violations	105
4.6.7. File rapporto ERC	105
5. Assigning Footprints	107
5.1. Assigning Footprints in Symbol Properties	107
5.1.1. Assigning Footprints with the Symbol Fields Table	109
5.2. Assigning Footprints While Placing Symbols	110
5.3. Assigning Footprints with the Footprint Assignment Tool	111
5.3.1. Footprint Assignment Tool Overview	112
5.3.2. Manually Assigning Footprints with the Footprint Assignment Tool	113
5.3.3. Automatically Assigning Footprints with the Footprint Assignment Tool	114

5.3.4. Visualizzazione dell'impronta corrente	116
6. Forward and back annotation	119
6.1. Update PCB from Schematic (forward annotation)	119
6.1.1. Options	120
6.1.2. Re-linking symbols and footprints	121
6.2. Update Schematic from PCB (back annotation)	123
6.2.1. Options	124
6.2.2. Back annotation with CMP files	125
7. Generating Outputs	126
7.1. Printing	126
7.1.1. Printing options	126
7.2. Plotting	126
7.2.1. Plotting options	127
7.2.2. Interactive PDF features	128
7.3. Generating a bill of materials	129
7.3.1. BOM contents	129
7.3.2. BOM format	131
7.3.3. Legacy BOM generation	131
7.3.4. BOM export from PCB editor	134
7.4. Generating a Netlist	134
7.4.1. Formati di netlist	135
7.4.2. Esempi netlist	139
8. Symbols and Symbol Libraries	144
8.1. Managing symbol libraries	144
8.1.1. Configurazione iniziale	145
8.1.2. Managing Table Entries	145
8.1.3. Path Variable Substitution	146
8.1.4. Modelli di utilizzo	147
8.1.5. Migrating symbol libraries to KiCad format	147
8.1.6. Rimappatura dei vecchi progetti	147
8.2. Creating and editing symbols	148
8.2.1. Symbol Editor overview	148
8.2.2. Browsing, modifying, and saving symbols	152
8.2.3. Creating a new symbol library	153
8.2.4. Creating a new symbol	153
8.2.5. Editing Symbol Properties	155
8.2.6. Campi del simbolo	157
8.2.7. Footprint Filters	158
8.2.8. Embedding files	158
8.2.9. Symbol Units and Alternate Body Styles	159
8.2.10. Symbol Graphics	161
8.2.11. Symbol Pins	163
8.2.12. Creating Power Symbols	170
8.2.13. Checking Symbols	173
8.3. Browsing symbol libraries	174
9. Schematic design blocks	176
9.1. Using design blocks in a schematic	177
9.2. Saving and managing design blocks	178
10. Simulatore	181

10.1. Assegnazione modelli	181
10.1.1. Inferred models	182
10.1.2. Built-in models	182
10.1.3. External models	185
10.1.4. IBIS models	187
10.1.5. Pin Assignment	189
10.2. Value notation	191
10.3. SPICE directives	192
10.4. Running simulations	192
10.4.1. Simulator window	193
10.4.2. Simulation types	193
10.5. Viewing simulation results	205
10.5.1. Plotted results	206
10.5.2. Numerical results	209
10.5.3. User-defined signals	211
10.6. Tuning components	212
10.7. Saving simulation setups	213
10.8. Exporting simulation results	213
10.8.1. Exporting results as graphics	213
10.8.2. Exporting results as numerical data	213
10.9. Troubleshooting simulations	214
10.9.1. Incorrect netlist	214
10.9.2. Simulation error messages	214
10.9.3. Convergence problems	215
10.9.4. Simulation pin assignments	215
10.10. Helpful hints	215
10.10.1. The ngspice manual is your friend!	215
10.10.2. Organizing third-party models	216
10.10.3. Simulation symbols and models in KiCad's libraries	216
11. Advanced Topics	221
11.1. Configuration and Customization	221
11.2. Variabili di testo	221
11.3. Librerie di database	223
11.3.1. Database Library Configuration Files	224
11.3.2. Using database libraries	227
11.4. HTTP Libraries	227
11.4.1. HTTP Library Configuration Files	227
11.4.2. Authentication	228
11.4.3. Caching Behaviour for Categories	228
11.4.4. Server Response Codes	228
11.5. Custom Netlist and BOM Formats	228
11.5.1. Adding new netlist generators	228
11.5.2. Adding a new BOM generator	229
11.5.3. Generator command line format	230
11.5.4. File di netlist intermedio	230
11.5.5. Struttura etlist intermedia	231
11.5.6. Example netlist exporters	236
12. Riferimento azioni	246
12.1. Editor degli schemi elettrici	246

12.2. Comuni	254
--------------------	-----

Nota

This manual is in the process of being revised to cover the latest stable release version of KiCad. It contains some sections that have not yet been completed. We ask for your patience while our volunteer technical writers work on this task, and we welcome new contributors who would like to help make KiCad's documentation better than ever.

Copyright

This document is Copyright © 2010-2024 by its contributors as listed below. You may distribute it and/or modify it under the terms of either the GNU General Public License (<http://www.gnu.org/licenses/gpl.html>), version 3 or later, or the Creative Commons Attribution License (<http://creativecommons.org/licenses/by/3.0/>), version 3.0 or later.

Tutti i marchi registrati all'interno di questa guida appartengono ai loro legittimi proprietari.

Collaboratori

Jean-Pierre Charras, Fabrizio Tappero, Wayne Stambaugh, Graham Keeth

Traduzione

Marco Ciampa <ciampix@posteo.net [<mailto:ciampix@posteo.net>]>, 2014-2018.

Feedback

The KiCad project welcomes feedback, bug reports, and suggestions related to the software or its documentation. For more information on how to submit feedback or report an issue, please see the instructions at <https://www.kicad.org/help/report-an-issue/>

Software and Documentation Version

This user manual is based on KiCad 9.0.4. Functionality and appearance may be different in other versions of KiCad.

Documentation revision: {doc-commit}.

Capitolo 1. Introduzione all'editor schemi elettrici di KiCad

The KiCad Schematic Editor is a schematic capture application distributed as a part of KiCad and available for the following operating systems:

- Linux
- Apple macOS
- Windows

Indipendentemente dal sistema operativo, tutti i file KiCad sono 100% compatibili da un sistema all'altro.

The Schematic Editor is an integrated application where all functions of schematic drawing, PCB footprint selection, library management, and data transfer to and from the PCB design software are carried out within the editor itself.

The KiCad Schematic Editor is intended to communicate directly with the KiCad PCB Editor for designing printed circuit boards without using any intermediate files. It can also export netlist files, which list all the electrical connections, for other packages.

L'editor degli schemi include un editor di librerie di simboli, che può creare e modificare simboli e gestire librerie. Esso integra le seguenti funzioni, aggiuntive ma essenziali, necessarie in ogni moderno software di elaborazione schemi elettrici:

- Electrical rules check (ERC) for automatic detection of incorrect and missing connections
- Circuit simulation using ngspice
- Esportazione di file del disegno dello schema in molti formati (Postscript, PDF, HPGL e SVG).
- Generazione della distinta materiali (tramite script Python o XSLT, che consentono di modellarla in molti formati).

The Schematic Editor supports multi-sheet schematics in several ways:

- Flat hierarchies (schematic sheets are not explicitly connected in a master diagram).
- Simple hierarchies (each schematic sheet is used only once).
- Complex hierarchies (some schematic sheets are used multiple times).

Hierarchical schematics are described in detail later in the manual.

1.1. Configurazione iniziale

When the Schematic Editor is run for the first time, if the the global symbol library table file `sym-lib-table` is not found in the KiCad configuration folder then KiCad will ask how to create this file:

Configure Global Symbol Library Table

KiCad has been run for the first time using the new symbol library table for accessing libraries. In order for KiCad to access symbol libraries, you must configure your global symbol library table. Please select from one of the options below. If you are not sure which option to select, please use the default selection.

☒ Copy default global symbol library table (recommended)

☐ Copy custom global symbol library table

☐ Create an empty global symbol library table

Select global symbol library table file:



OK


The first option is recommended (**Copy default global symbol library table (recommended)**). The default symbol library table includes all of the standard symbol libraries that are installed as part of KiCad.

If this option is disabled, KiCad was unable to find the default global symbol library table. This probably means you did not install the standard symbol libraries with KiCad, or they are not installed where KiCad expects to find them. On some systems the KiCad libraries are installed as a separate package.

- If you have installed the standard KiCad symbol libraries and want to use them, but the first option is disabled, select the second option and browse to the `sym-lib-table` file in the directory where the KiCad libraries were installed.
- If you already have a custom symbol library table that you would like to use, select the second option and browse to your `sym-lib-table` file.
- If you want to construct a new symbol library table from scratch, select the third option.

Symbol library management, including how to re-run this initial configuration, is described in more detail later.

1.2. The Schematic Editor User Interface

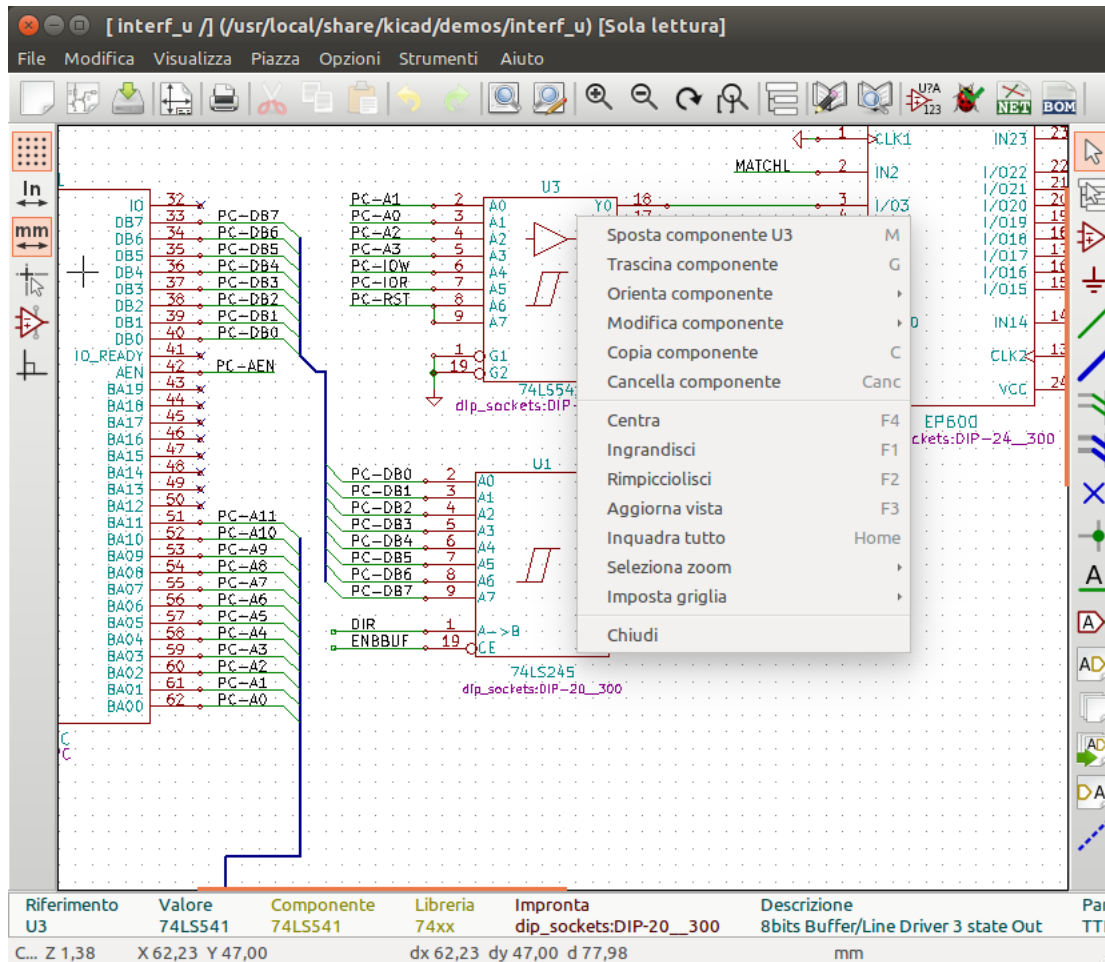

The main Schematic Editor user interface is shown above. The center contains the main editing canvas, which is surrounded by:

- Top toolbars (file management, zoom tools, editing tools)
- Left toolbar (display options), Hierarchy Navigator, Properties Manager, and the selection filter at left
- Message panel and status bar at bottom
- Right toolbar (drawing and design tools) and Design Block panel at right

1.3. Navigating the editing canvas

The editing canvas displays the schematic being designed. You can pan and zoom to different parts of the schematic and open any schematic sheet in the design.

By default, dragging with the middle or right mouse button will pan the canvas view and scrolling the mouse wheel will zoom the view in or out. You can change this behavior in the Mouse and Touchpad section of the preferences (see Configuration and Customization for details).

Several other zoom tools are available in the top toolbar:

-  zooms in on the center of the viewport.
-  zooms out from the center of the viewport.
-  zooms to fit the frame around the drawing sheet.
-  zooms to fit every item in the schematic (not including the drawing sheet). For instance, if there are items placed outside of the drawing sheet, they will be visible after zooming to objects.
-  allows you to draw a box to determine the zoomed area.

The cursor's current position is displayed at the bottom of the window (X and Y), along with the current zoom factor (Z), the cursor's relative position (dx, dy, and dist), the grid setting, and the display units.

The relative coordinates can be reset to zero by pressing `kbd:[Space]`. This is useful for measuring distance between two points or aligning objects.

1.4. Comandi da tastiera

The `kbd:[Ctrl+F1]` shortcut displays the current hotkey list. The default hotkey list is included in the Actions Reference section of the manual.

The hotkeys described in this manual use the key labels that appear on a standard PC keyboard. On an Apple keyboard layout, use the `kbd:[Cmd]` key in place of `kbd:[Ctrl]`, and the `kbd:[Option]` key in place of `kbd:[Alt]`.

Many actions do not have hotkeys assigned by default, but hotkeys can be assigned or redefined using the hotkey editor (**Preferences** → **Preferences...** → **Hotkeys**).

Nota

Many of the actions available through hotkeys are also available in context menus. To access the context menu, right-click in the editing canvas. Different actions will be available depending on what is selected or what tool is active.

I comandi da tastiera sono memorizzati nel file `user.hotkeys` nella cartella di configurazione di KiCad. La posizione cambia a seconda della piattaforma:

- Windows: `%APPDATA%\kicad\9.0\user.hotkeys`
- Linux: `~/.config/kicad/9.0/user.hotkeys`
- macOS: `~/Library/Preferences/kicad/9.0/user.hotkeys`

KiCad can import hotkey settings from a user `.hotkeys` file using the **Import Hotkeys** button in the hotkey editor.

1.5. Selection and the selection filter

Selecting items in the editing canvas is done with the left mouse button. Single-clicking on an object will select it. Clicking and dragging will perform a box selection. A box selection from left to right will only select items that are fully inside the box. A box selection from right to left will select any items that touch the box. A left-to-right selection box is drawn in yellow, with a cursor that indicates exclusive selection, and a right-to-left selection box is drawn in blue with a cursor that indicates inclusive selection.


The selection action can be modified by holding modifier keys while clicking or dragging. The following modifier keys apply when clicking to select single items:

Modifier Keys (Windows)	Modifier Keys (Linux)	Modifier Keys (macOS)	Selection Effect
kbd:[Ctrl]	kbd:[Ctrl]	kbd:[Cmd]	Toggle selection.
kbd:[Shift]	kbd:[Shift]	kbd:[Shift]	Add the item to the existing selection.
kbd:[Ctrl + Shift]	kbd:[Ctrl + Shift]	kbd:[Cmd + Shift]	Remove the item from the existing selection.
long click	long click or kbd:[Alt]	long click or kbd:[Option]	Clarify selection from a pop-up menu.

The following modifier keys apply when dragging to perform a box selection:

Modifier Keys (Windows)	Modifier Keys (Linux)	Modifier Keys (macOS)	Selection Effect
kbd:[Ctrl]	kbd:[Ctrl]	kbd:[Cmd]	Toggle selection.
kbd:[Shift]	kbd:[Shift]	kbd:[Shift]	Add item(s) to the existing selection.
kbd:[Ctrl + Shift]	kbd:[Ctrl + Shift]	kbd:[Cmd + Shift]	Remove item(s) from the existing selection.

The selection filter panel in the lower left corner of the Schematic Editor window controls which types of objects can be selected with the mouse. Turning off selection of unwanted object types makes it easier to select items in a busy schematic. The "All items" checkbox is a shortcut to turn the other items on and off. You can right-click any object type in the selection filter to quickly change the filter to only allow selecting that type of object.

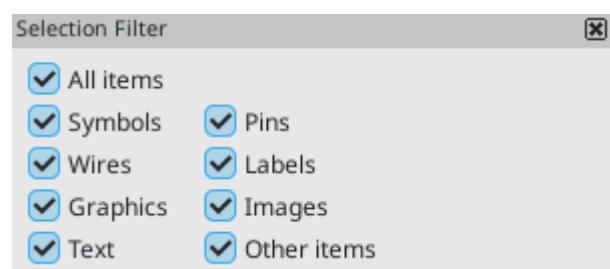

Selecting an object displays information about the object in the message panel at the bottom of the window. Double-clicking an object opens a window to edit the object's properties.

Pressing `kbd:[Esc]` will always cancel the current tool or operation and return to the selection tool. Pressing `kbd:[Esc]` while the selection tool is active will clear the current selection.

1.6. Left toolbar display controls

The left toolbar provides options to change the display of items in the Schematic Editor.

	Turns grid display on/off. Note: by default, hiding the grid does not disable grid snapping. This behavior can be changed in the Display Options section of Preferences.
	Turns item-specific grid overrides on/off.
	Display/entry of coordinates and dimensions in inches, mils, or millimeters.
	Switches between full-screen and small editing cursor (crosshairs).
	Turns invisible pin display on/off.
	Switches between free angle, 90 degree mode, and 45 degree mode for placement of new wires, buses, and graphical shapes.
	Turns automatic symbol annotation on/off. When on, symbols will have their reference designators automatically set to the lowest available reference when they are added to the schematic.
	Opens and closes the docked Hierarchy Navigator panel.
	Opens and closes the docked Properties Manager panel.

Capitolo 2. Creazione e modifica di schemi elettrici

2.1. Introduzione

Uno schema elettrico progettato con KiCad è più di una semplice rappresentazione grafica di un dispositivo elettronico. Esso normalmente è il punto di ingresso di una catena di sviluppo che permette:

- Il controllo di validità rispetto ad una serie di regole (Controllo Regole Elettriche (ERC)) per il rilevamento di errori e omissioni.
- Automatically generating a bill of materials.
- La generazione di una netlist per software di simulazione tipo SPICE.
- Defining a circuit for transferring to PCB layout.

A schematic mainly consists of symbols, wires, labels, junctions, buses and power symbols. For clarity in the schematic, you can place purely graphical elements like bus entries, comments, and polylines.

Symbols are added to the schematic from symbol libraries. After the schematic is made, the set of connections and footprints is imported into the PCB editor for designing a board.

Schematics can be contained in a single sheet or split among multiple sheets. In KiCad, multi-sheet schematics are organized hierarchically, with a root sheet and sub-sheet(s). Each sheet is its own .kicad_sch file and is itself a complete KiCad schematic. Working with hierarchical schematics is described in the Hierarchical Schematics chapter.

2.2. Schematic editing operations

Schematic editing tools are located in the right toolbar. When a tool is activated, it stays active until a different tool is selected or the tool is canceled with the kbd:[Esc] key. The selection tool is always activated when any other tool is canceled.

	Selection tool (the default tool)
	Highlight a net by marking its wires and net labels with a different color. If the PCB Editor is also open then copper corresponding to the selected net will be highlighted as well. Net highlighting can be cleared by clicking with the highlight tool in an empty space, or by using the Clear Net Highlighting hotkey (kbd:[~]).
	Display the symbol selector dialog to place a new symbol.
	Display the power symbol selector dialog to place a new power symbol.
	Draw a wire.
	Draw a bus.

Creazione e modifica
di schemi elettrici

	Draw wire-to-bus entry points. These elements are only graphical and do not create a connection, thus they should not be used to connect wires together.
	Place a "no-connection" flag. These flags should be placed on symbol pins which are meant to be left unconnected. "No-connection" flags indicate to the Electrical Rule Checker that the pin is intentionally unconnected and not an error. They also affect schematic connectivity for stacked symbol pins.
	Place a junction. This connects two crossing wires or a wire and a pin, which can sometimes be ambiguous without a junction (i.e. if a wire end or a pin is not directly connected to another wire end).
	Place a local label. Local labels connect items located in the same sheet . For connections between two different sheets, use global or hierarchical labels.
	Place a net class directive label.
	Place a directive rule area.
	Place a global label. All global labels with the same name are connected, even when located on different sheets.
	Place a hierarchical label. Hierarchical labels are used to create a connection between a subsheet and the sheet's parent sheet. See the Hierarchical Schematics section for more information about hierarchical labels, sheets, and pins.
	Place a hierarchical subsheet. You must specify the file name for this subsheet.
	Place a hierarchical sheet pin on a sheet corresponding to a hierarchical label that has been added in the target sheet.
	Sync hierarchical sheet pins and hierarchical labels. This displays a list of all the hierarchical labels in each subsheet and lets you manage the corresponding hierarchical sheet pins.
	Place text.
	Place a text box.
	Place a table.
	Draw a rectangle.
	Draw a circle.
	Draw an arc.
	Draw a bezier curve.
	Draw graphic lines. Note: Lines are graphical objects and are not the same as wires placed with the Wire tool. They do not connect anything.
	Place a bitmap image.
	Delete clicked items.

2.3. Grids and snapping

Schematic elements such as symbols, wires, text, and graphic lines are snapped to the grid when moving, dragging, and drawing them. Additionally, the wire and label tools snap to other connected items such as pins, wires, and labels even when grid snapping is disabled.

Both grid and connected object snapping can be disabled while moving the mouse by using the modifier keys in the table below.

Nota

On Apple keyboards, use the kbd:[Cmd] key instead of kbd:[Ctrl].

Modifier Key	Effect
kbd:[Ctrl]	Disable grid snapping.
kbd:[Shift]	Disable connected object snapping.

The default grid size is 50 mil (0.050") or 1.27 millimeters. This is the recommended grid for placing symbols and wires in a schematic and for placing pins when designing a symbol in the Symbol Editor. Smaller grids can also be used, but this is intended only for text and symbol graphics, and not recommended for placing pins and wires.

Nota

Wires connect with other wires or pins only if their ends coincide **exactly**. Therefore it is very important to keep symbol pins and wires aligned to the grid. It is recommended to always use a 50 mil grid when placing symbols and drawing wires because the KiCad standard symbol library and all libraries that follow its style also use a 50 mil grid. **Using a grid size other than 50 mil will result in schematics without proper connectivity!**

Nota

Symbols, wires, and other elements that are not aligned to the grid can be snapped back to the grid by selecting them, right clicking, and clicking **Align Elements to Grid**.


You can adjust the grid size by right-clicking and selecting a new grid from the list in the **Grid** submenu. Pressing the kbd:[n] or kbd:[N] hotkeys will cycle to the next and previous grid in the list, respectively.

You can also select a new grid or edit the available grids in the **Grids** pane of the preferences dialog. As a shortcut to reach this dialog, right click the



button on the left toolbar and select **Edit Grids...**

Creazione e modifica di schemi elettrici

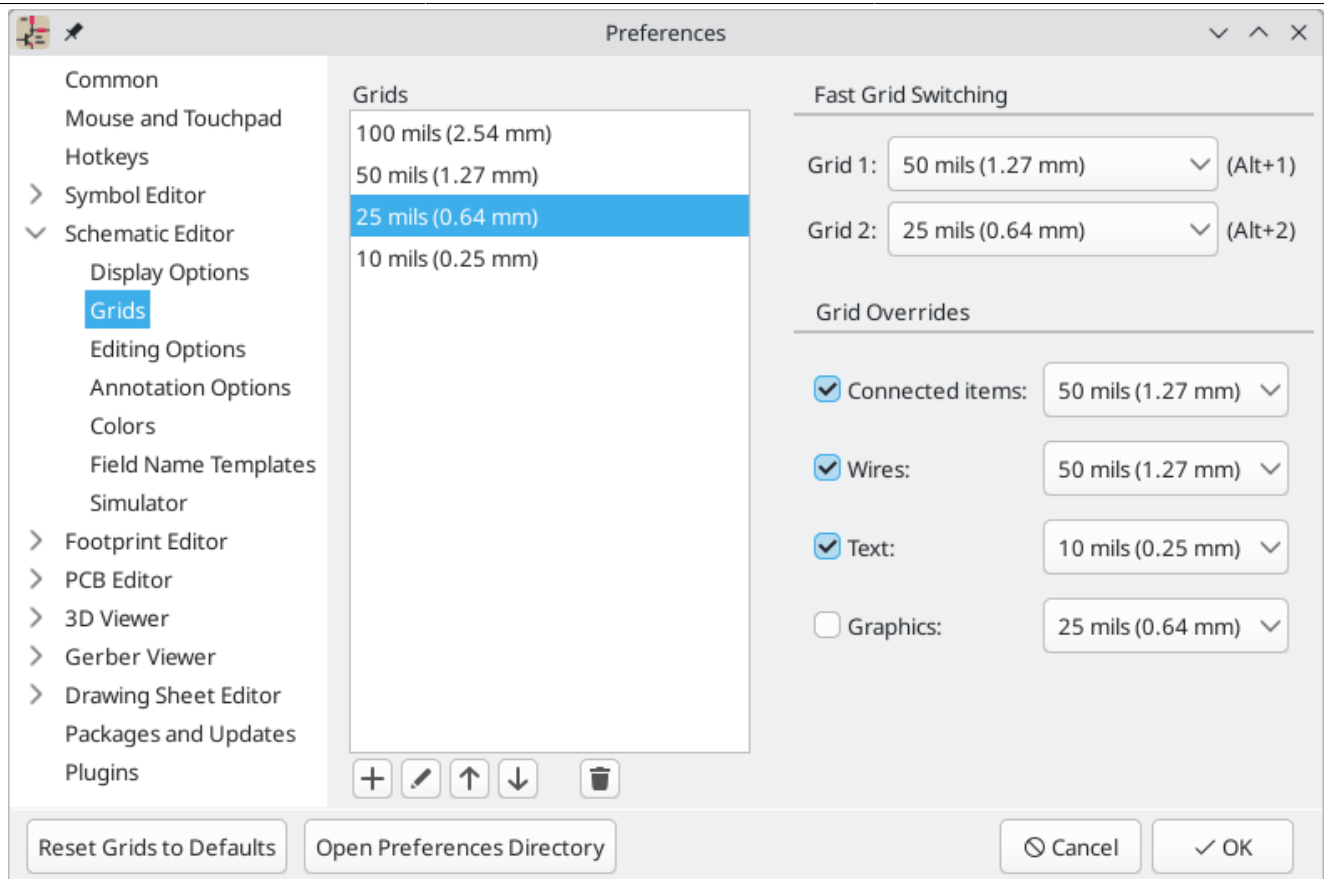

In this dialog you can select an active grid from the list of grids, reorder the list of grids (



), and add (



), remove (



), or edit (



) grids. Grids defined in this dialog can have unequal X and Y spacing as well as an optional name. The grid spacing and name are specified when you create or edit a grid.

This dialog also lets you designate two grids from the list as "Fast Grids", which can be quickly selected using `kbd:[Alt+1]` and `kbd:[Alt+2]`.

Finally, you can configure grid overrides for different types of objects. Grid overrides let you set particular grid sizes for different types of objects which will be used instead of the default grid when working with those objects. For example, you can set a 50 mil grid for wires and connected items while using smaller grids to finely position text and graphics. Grid overrides can be individually enabled and disabled in this dialog, or globally enabled and disabled using the



button on the left toolbar (`kbd:[Ctrl+Shift+G]`).

The visual appearance of the grid can also be customized in several ways. You can change the thickness of the grid markings, switch their shape (dots, lines, or crosses), and set the minimum displayed spacing in the **Display Options** page of the preferences dialog, and you can change the grid color in the **Colors** page of the preferences dialog.

The grid can be shown or hidden using the




button on the left-hand toolbar. By default the grid is still active even if it is hidden, but this is configurable in the **Display Options** preferences page. There you can set the grid to be disabled when it is hidden or even disable the grid entirely.

2.4. Editing object properties

All objects have properties that are editable in a dialog. Use the hotkey kbd:[E] or select **Properties** from the right-click context menu to edit the properties of selected item(s). You can only open the properties dialog if all the items you have selected are of the same type. For many object types, like symbols, you can only edit the properties of a single item at one time. To edit the properties of multiple items at once, including items with different types, you can use the Properties Manager.

You can only use the properties dialog to edit one item at a time. To edit multiple items, use the Properties Manager, described below. There are also other tools that can be used to edit specific types of objects in bulk, such as the Edit Text and Graphics tool for editing visual properties of text, symbol fields, labels, and graphic shapes, or the Symbol Fields Table for editing symbol fields in bulk.

You can also view and edit item properties using the Properties Manager. The Properties Manager is a docked panel that displays the properties of the selected item or items for editing. If multiple types of items are selected at once, the properties panel displays only the properties shared by all of the selected item types.

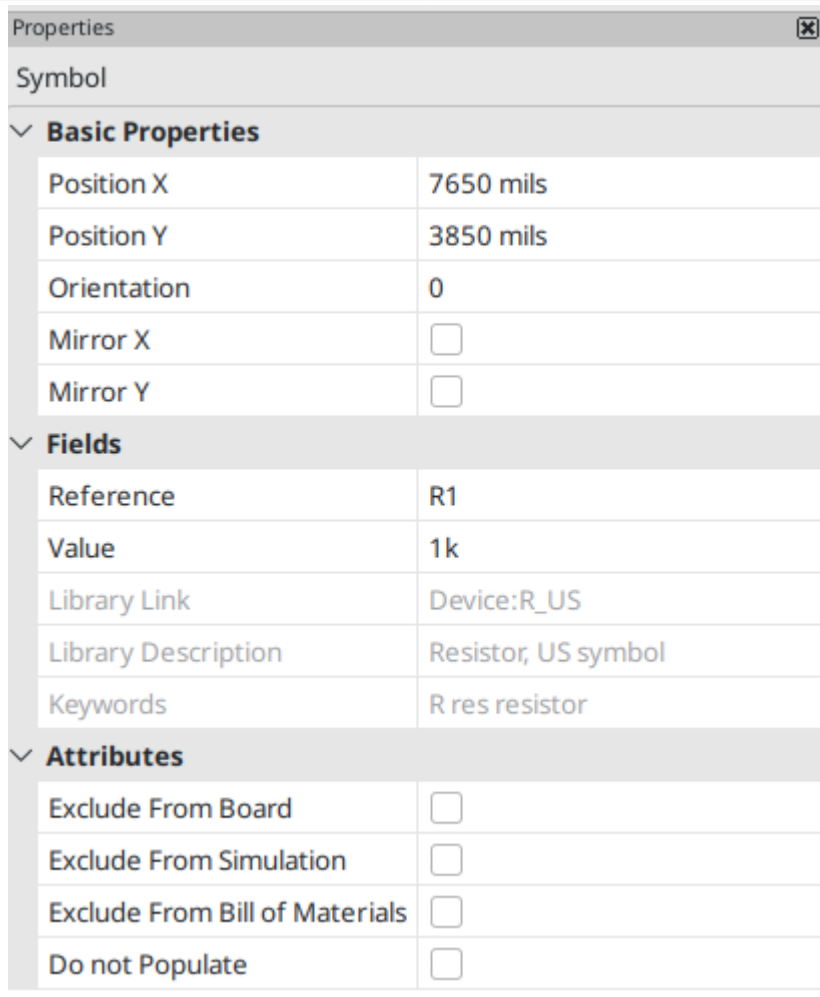

The Properties Manager dialog box is shown with the 'Symbol' tab selected. It contains three expandable sections: 'Basic Properties', 'Fields', and 'Attributes'. The 'Basic Properties' section includes Position X (7650 mils), Position Y (3850 mils), Orientation (0), and two unchecked checkboxes for Mirror X and Mirror Y. The 'Fields' section includes Reference (R1), Value (1k), Library Link (Device:R_US), Library Description (Resistor, US symbol), and Keywords (R res resistor). The 'Attributes' section includes four unchecked checkboxes: Exclude From Board, Exclude From Simulation, Exclude From Bill of Materials, and Do not Populate.

Basic Properties	
Position X	7650 mils
Position Y	3850 mils
Orientation	0
Mirror X	☐
Mirror Y	☐

Fields	
Reference	R1
Value	1k
Library Link	Device:R_US
Library Description	Resistor, US symbol
Keywords	R res resistor

Attributes	
Exclude From Board	☐
Exclude From Simulation	☐
Exclude From Bill of Materials	☐
Do not Populate	☐

Editing a property in the Properties Manager immediately applies the change. When multiple items are selected, property modifications are applied to each selected item individually, not to the whole selection as a group. For example, when changing the orientation of multiple items, each item is individually rotated around its own origin, not the group's origin.

Show the Properties Manager with **View** → **Panels** → **Properties** or the



button on the left toolbar.

In properties dialogs and many other dialogs, any field that contains a numeric value can also accept a basic math expression that results in a numeric value. For example, a dimension may be entered as 2 * 2mm, resulting in a value of 4mm. Basic arithmetic operators as well as parentheses for defining order of operations are supported.


2.5. Working with symbols

2.5.1. Placing symbols

To place a symbol in your schematic, use the



button or the kbd:[A] hotkey. The Choose Symbols dialog appears and lets you select a symbol to add. Symbols are grouped by symbol library.

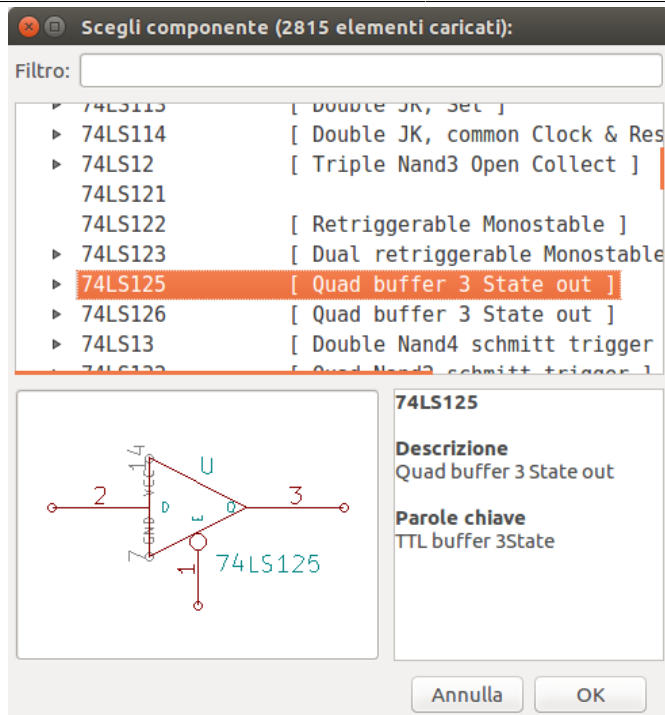

By default, only the symbol/library name and description columns are shown. Additional columns can be added by right-clicking the column header and selecting **Select Columns**.

The Choose Symbol dialog filters symbols by name, keywords, description, and all additional symbol fields according to what you type into the search field. You can choose to sort search results alphabetically or by best match by clicking on the  button.

Some advanced filters are available:

- **Wildcards:** * matches any number of any characters, including none, and ? matches any single character.
- **Key-value pairs:** if a library part's description or keywords contain a tag of the format "Key:123", you can match relative to that by typing "Key>123" (greater than), "Key<123" (less than), etc. Numbers may include one of the following case-insensitive suffixes:

p	n	u	m	k	meg	g	t
10^{-12}	10^{-9}	10^{-6}	10^{-3}	10^3	10^6	10^9	10^{12}

ki	mi	gi	ti
2^{10}	2^{20}	2^{30}	2^{40}

- **Regular expressions:** if you're familiar with regular expressions, these can be used too. The regular expression flavor used is the wxWidgets Advanced Regular Expression style [http://docs.wxwidgets.org/3.2/overview_resyntax.html], which is similar to Perl regular expressions.

If the symbol specifies a default footprint, this footprint will be previewed in the lower right. If the symbol includes footprint filters, alternate footprints that satisfy the footprint filters can be selected in the footprint dropdown menu at right.

After selecting a symbol to place, the symbol will be attached to the cursor. Left clicking the desired location in the schematic places the symbol into the schematic. Before placing the symbol in the schematic, you can rotate it, mirror it, and edit its fields, by either using the hotkeys or the right-click context menu. These actions can also be performed after placement.

If the **Place repeated copies** option is checked, after placing a symbol KiCad will start placing another copy of the symbol. This process continues until the user presses kbd:[Esc].

For symbols with multiple units, if the **Place all units** option is checked, after placing the symbol KiCad will start placing the next unit in the symbol. This continues until the last unit has been placed or the user presses kbd:[Esc].

2.5.2. Placing power symbols

A power symbol is a symbol representing a connection to a power net. The symbols are grouped in the power library, so they can be placed using the symbol chooser. However, as power placements are frequent, the



tool is available. This tool is similar, except that the search is done directly in the power library and any other library that contains power symbols.

2.5.3. Moving symbols

Symbols can be moved using the Move (kbd:[M]) or Drag (kbd:[G]) tools. These tools act on the selected symbol, or if no symbol is selected they act on the symbol under the cursor.

The **Move** tool moves the symbol itself without maintaining wired connections to the symbol pins.

The **Drag** tool moves the symbol without breaking wired connections to its pins, and therefore moves the connected wires as well.

You can also Drag symbols by clicking and dragging them with the mouse, depending on the **Left button drag gesture** setting in the **Mouse and Touchpad** section of Preferences.

Symbols can also be rotated (kbd:[R]) or mirrored in the X (kbd:[X]) or Y (kbd:[Y]) directions.

2.5.4. Editing symbol properties

Symbols in the schematic can be individually edited, both in terms of their properties (fields, attributes, etc.) and in terms of their pins and graphics. Editing a symbol in the schematic only affects that particular instance of the symbol; it does not affect any other copies of that symbol in the schematic, and it does not affect the library symbol.

To edit the properties of a symbol in the schematic, open its properties dialog (kbd:[E]). You can also double-click the symbol.

Creazione e modifica di schemi elettrici

The Symbol Properties window displays all the fields of a symbol in a table. New fields can be added, and existing fields can be deleted, edited, reordered, moved, or resized. Fields can be arbitrarily named, but names beginning with `ki_`, e.g. `ki_description`, are reserved by KiCad and should not be used for user fields. All symbol fields will be added to the symbol's corresponding footprint when the PCB is updated from the schematic.

Each field's name and value can be visible or hidden, and there are several formatting options: horizontal and vertical alignment, orientation, position, font, text color, text size, and bold/italic emphasis. Field autoplacement can also be enabled on a per-field basis. The displayed position is always indicated for a normally displayed symbol (no rotation or mirroring) and is relative to the anchor point of the symbol.

Nota

Formatting options for symbol fields can be shown or hidden by right-clicking on the header row of the symbol field table and enabling or disabling the desired columns. Not all columns are shown by default.


Several fields have special behavior:

- The **Footprint** field defines which footprint will correspond to the symbol in the board design. When the footprint field is selected, you can click the  button to open the footprint chooser to assign a footprint to the symbol. See the Assigning Footprints section for other ways to assign footprints.
- The **Datasheet** field can contain the manufacturer's datasheet for the symbol. You can right click a symbol in the editing canvas and choose **Show Datasheet** (kbd:[D]) to open the datasheet listed in the symbol. A symbol's datasheet can be a local file or a file at a remote URL, like the manufacturer's website. You can choose a local file using a file browser by selecting the datasheet field in the symbol's properties, then clicking the .

button. If you enable the **Embed File** checkbox in the file browser, the datasheet will be embedded in the schematic instead of being referenced as an external file. This means the datasheet will be available on any computer. For more information, see the embedded files documentation.

Symbols have several attributes that affect how the symbols are treated by other parts of KiCad.

- **Exclude from simulation** prevents the symbol from being included in SPICE simulations. Symbols that are excluded from simulation are drawn with a grey outline around them and a simulation waveform icon to their bottom right, as shown below. The color of the outline and icon is configurable by editing the "Excluded-from-simulation Markers" color in the selected colorscheme. The visual marker (the outline and the icon) can be disabled completely by disabling **View → Mark items which are excluded from simulation**.

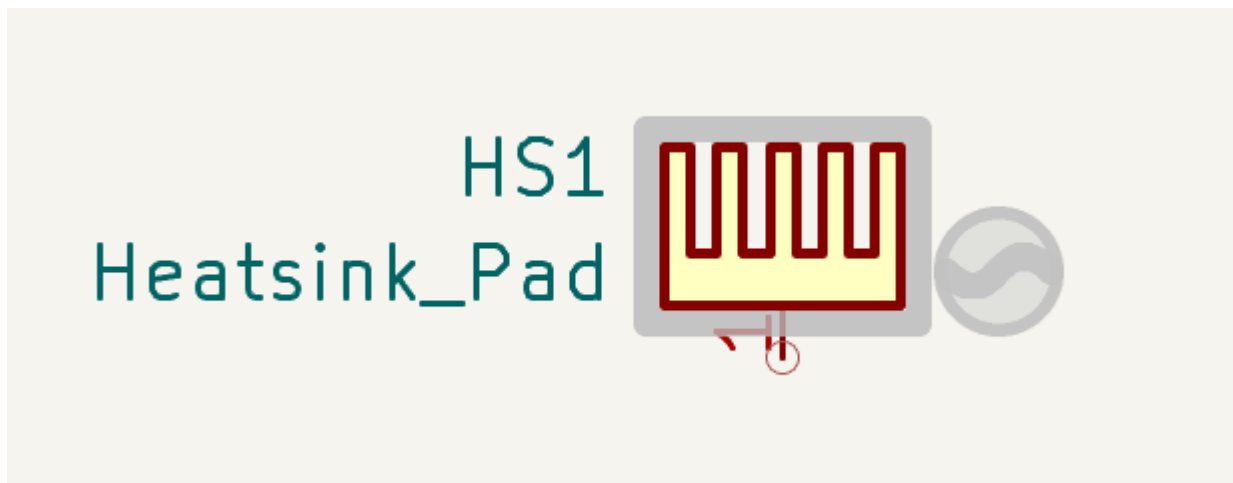

- **Exclude from bill of materials** prevents the component from being included in BOM exports.
- **Exclude from board** means that the symbol is schematic-only, and a corresponding footprint will not be added to the PCB.
- **Do not populate** means that the component should not be attached to the PCB, although a corresponding footprint should still be added to the board. DNP symbols appear desaturated and with a red "X" over them in the schematic, as shown below. The color of the "X" is configurable by editing the "DNP Markers" color in the selected colorscheme.

To edit the symbols's form, i.e. its pins and graphics, you need to use the symbol editor. There are two buttons for opening a symbol in the editor, depending on whether you want to edit a single copy of a symbol in the schematic or a symbol's source copy in the library.


The **Update Symbol from Library...** button is used to update the schematic's copy of the symbol to match the copy in the library. The **Change Symbol...** button is used to swap the current symbol to a different symbol in the library. These functions are described later.

The **Simulation Model...** button opens the Simulation Model Editor for specifying the symbol's behavior in SPICE simulations.

Editing symbol fields individually

An individual symbol text field can be edited directly with the `kbd:[E]` hotkey (with a field selected instead of a symbol) or by double-clicking on the field.

Some symbol fields have their own hotkey to edit them directly. With the symbol selected, the Reference, Value, and Footprint fields can be edited with the `kbd:[U]`, `kbd:[V]`, or `kbd:[F]` hotkeys, respectively.

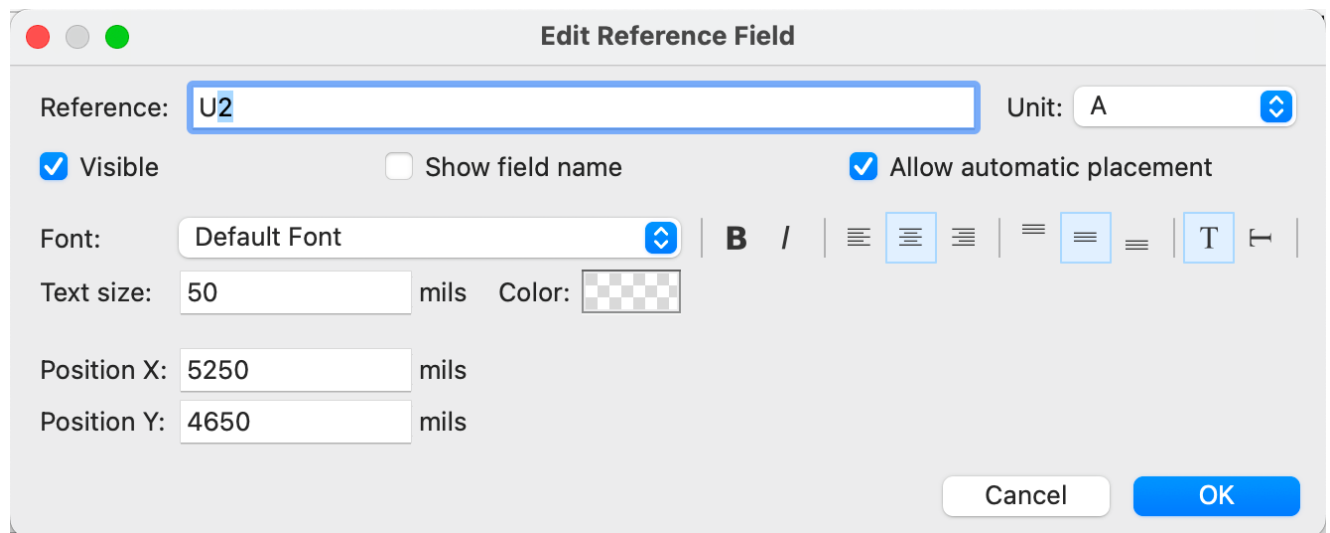

The options in this dialog are the same as those in the full Symbol Properties dialog, but are specific to a single field.


Symbol fields can be automatically moved to an appropriate location with the Autoplace Fields action (select a symbol and press `kbd:[O]`). Field autoplacement is configurable in the Schematic Editor's Editing Options, including a setting to always autoplace fields. You can also disable autoplacement for individual fields in the Symbol Properties or Field Properties dialogs.

2.5.5. Alternate pin functions


Symbol pins can have alternate pin functions defined for them. Alternate pin functions allow you to select a different name, electrical type, and graphical style for a pin when a symbol has been placed in the schematic. This can be used for pins that have multiple functions, such as microcontroller pins.

Alternate pin functions are selected once a symbol has been placed in the schematic. The pin function is selected in the **Pin Functions** tab of the Symbol Properties dialog. Alternate definitions are selectable in the dropdown in the Alternate Assignment column. You can also select an alternate pin by right-clicking the pin and selecting a new function from the **Pin Function** menu.

Creazione e modifica di schemi elettrici

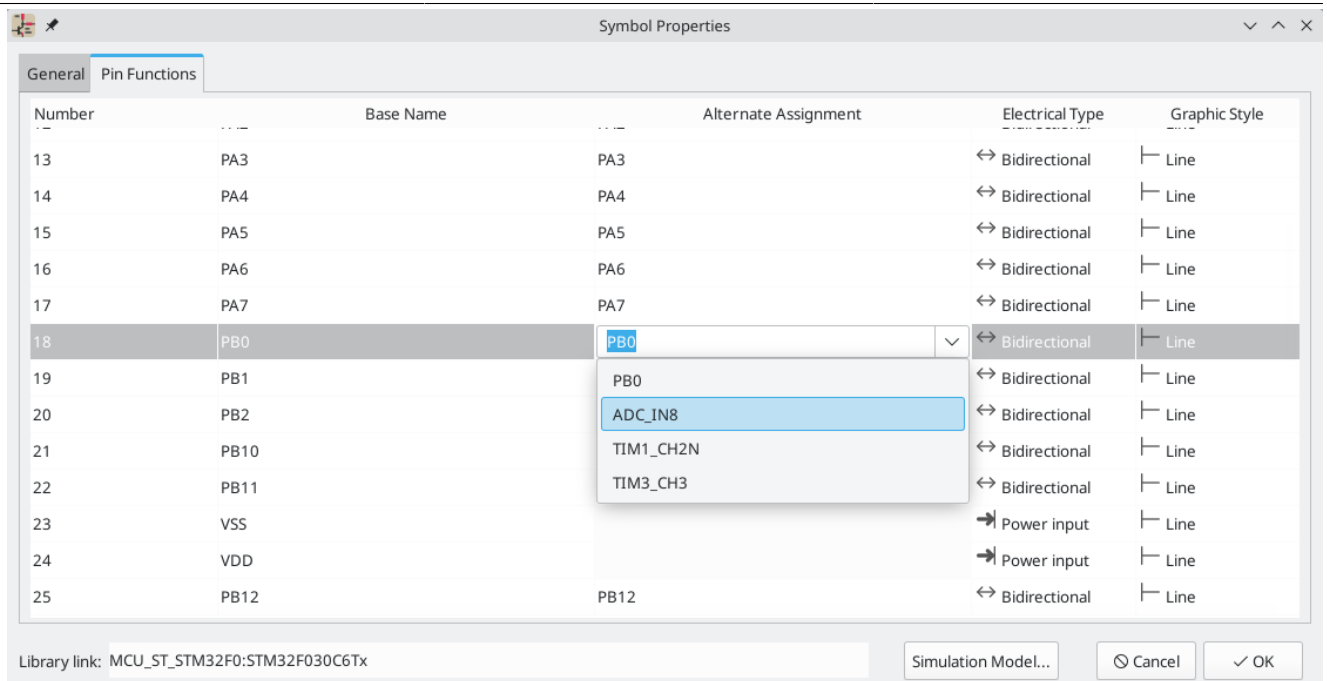

Pins that have alternate functions available are displayed with a small graphical indicator next to the pin name, as shown in the screenshot below. To globally show or hide these indicators, use **View → Show Pin Alternate Icons**.

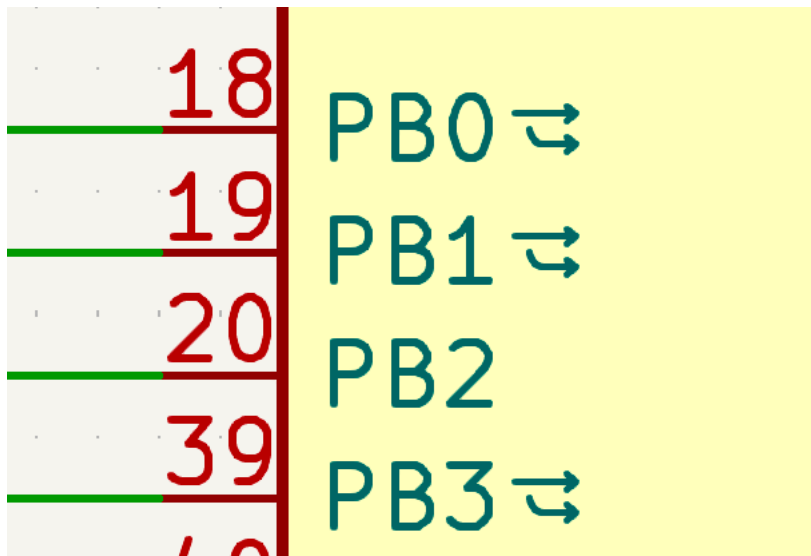

For information on how to add alternate pin functions to symbols, see the symbol editor documentation.


2.5.6. Updating and exchanging symbols

When a symbol is added to the schematic, KiCad embeds a copy of the library symbol in the schematic so that the schematic is independent of the system libraries. Symbols that have been added to the schematic are not automatically updated when the library changes. Library symbol changes are manually synced to the schematic so that the schematic does not change unexpectedly.

Nota

You can use the Compare Symbol with Library tool to inspect the differences between a symbol in a schematic with its corresponding library symbol.

To update symbols in the schematic to match the corresponding library symbol, use **Tools → Update Symbols from Library...**, or right click a symbol and select **Update Symbol...**. You can also access the tool from the symbol properties dialog.

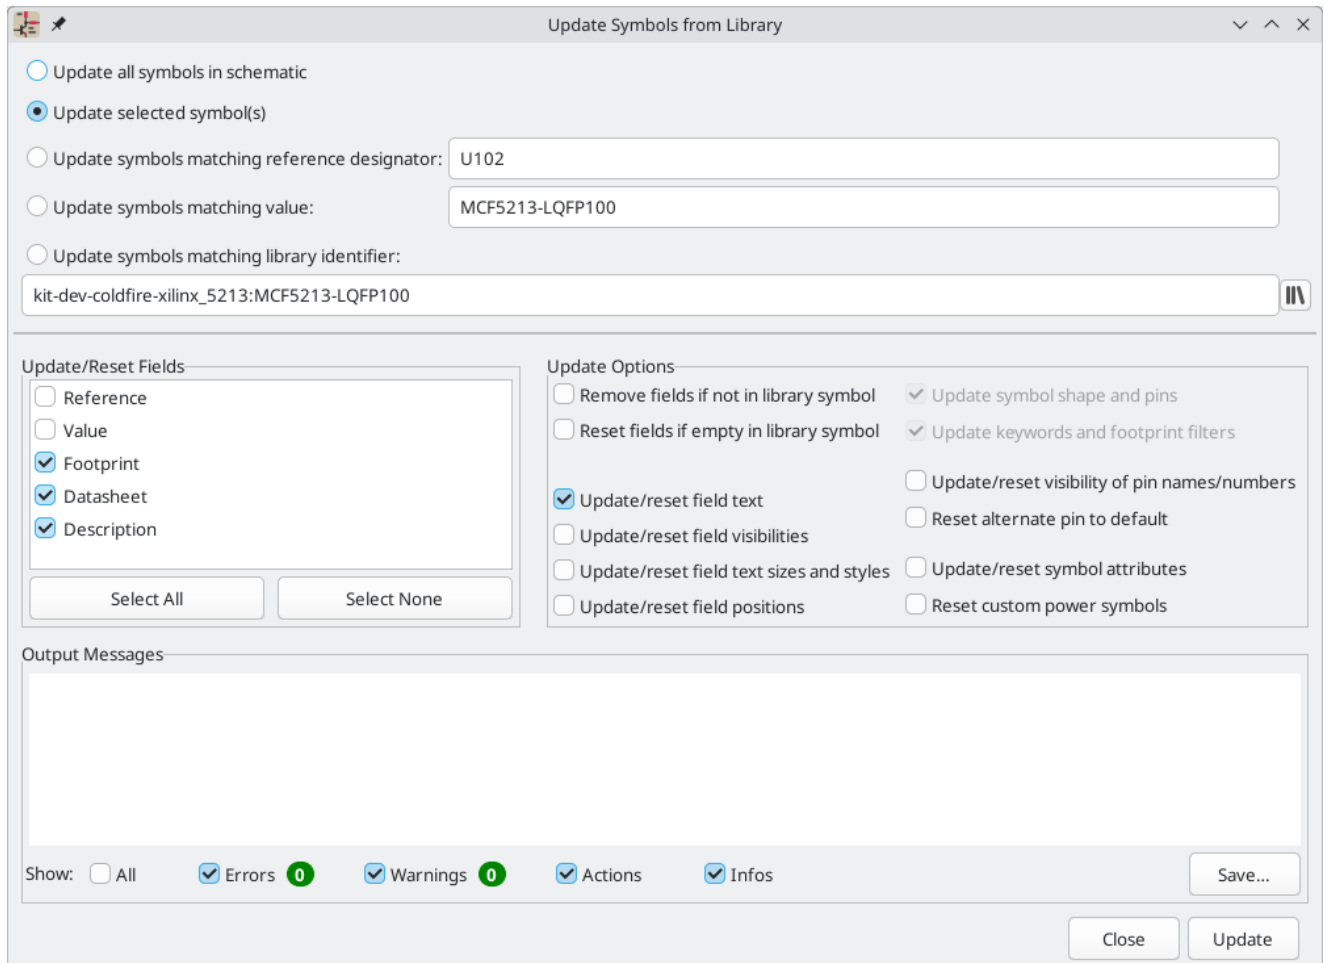

The top of the dialog has options to choose which symbols will be updated:

- **Update all symbols in schematic:** all symbols in the schematic will be updated to match the library versions of the symbols.
- **Update selected symbol(s):** symbols that are selected in the schematic will be updated.
- **Update symbols matching reference designator:** symbols matching the specified reference designator will be updated. The reference designator field supports wildcards: * matches any number of any characters, including none, and ? matches any single character.
- **Update symbols matching value:** symbols with the specified value will be updated. The value field supports wildcards: * matches any number of any characters, including none, and ? matches any single character.
- **Update symbols matching library identifier:** symbols that match the specified library identifier will be updated. Library identifiers consist of the symbol library name and the symbol name, separated by :.

The middle of the dialog has options to control what parts of the symbol will be updated. On the left, you can select which fields will be modified (updated or reset). On the right, you can select how to update those fields:

- **Remove fields if not in library symbol:** if selected, any fields that are in the schematic version of the symbol but not the library version will be deleted.
- **Reset fields if empty in library symbol:** if selected, any fields that are empty in the library version of the symbol will be set to empty in the schematic version of the symbol.
- **Update/reset field text:** if selected, field contents in the schematic version of the symbol will be updated to match the fields in the library version of the symbol. Any fields that are empty in the library version of the symbol will not be updated unless **Reset fields if empty in library symbol** is selected.
- **Update/reset field visibilities:** if selected, fields in the schematic version of the symbol will have their visibility updated to match the library version of the symbol.
- **Update/reset field text sizes and styles:** if selected, fields in the schematic version of the symbol will have their text sizes and styles updated to match the library version of the symbol.
- **Update/reset field positions:** if selected, fields in the schematic version of the symbol will be moved to match the locations of the fields in the library version of the symbol.
- **Update symbol shape and pins:** the symbol's shape and pins are always updated to match the library version of the symbol.
- **Update keywords and footprint filters:** The symbol's keywords and footprint filters are always updated to match the library version of the symbol.
- **Update/reset visibility of pin names/numbers:** if selected, the visibility of pin names and numbers in the schematic version of the symbol will be updated to match the visibility of the pin names and numbers in the library version of the symbol.
- **Reset alternate pin to default:** if selected, alternate pin functions selected for the symbol's pins will be reset to default pin functions.
- **Update/reset symbol attributes:** if selected, the schematic symbol attributes (**do not populate, exclude from simulation, exclude from BOM, exclude from board**) will be updated to match the library version of the symbol.
- **Reset custom power symbols:** if selected, the Value field of power symbols in the schematic will be updated to match the library versions of the symbols. If not selected, the Value field of power symbols will not be updated, even if the Value field of other non-power symbols would be updated. Note that changing the Value field of power symbols will change the global net associated with the power symbol.

The bottom of the dialog displays messages describing the update actions that have been performed, with filters for which types of messages to display (errors, warnings, actions, and/or infos).

To change an existing symbol to a different symbol, use **Edit** → **Change Symbols...**, or right click an existing symbol and select **Change Symbol...**. This dialog is also accessible from the symbol properties dialog.

Creazione e modifica di schemi elettrici

Change Symbols

☒ Change selected symbol(s)

☐ Change symbols matching reference designator: U102

☐ Change symbols matching value: MCF5213-LQFP100

☐ Change symbols matching library identifier:

kit-dev-coldfire-xilinx_5213:MCF5213-LQFP100

New library identifier:

kit-dev-coldfire-xilinx_5213:MCF5213-LQFP100

Update Fields

☐ Reference

☐ Value

☒ Footprint

☒ Datasheet

☒ Description

Select All Select None

Update Options

☐ Remove fields if not in new symbol ☒ Update symbol shape and pins

☐ Reset fields if empty in new symbol ☒ Update keywords and footprint filters

☒ Update field text ☐ Update/reset visibility of pin names/numbers

☒ Update field visibilities ☒ Reset alternate pin to default

☒ Update field sizes and styles ☒ Update symbol attributes

☒ Update field positions ☐ Reset custom power symbols

Output Messages


Show: ☐ All ☒ Errors 0 ☒ Warnings 0 ☒ Actions ☒ Infos

Save... Close Change

The options for the Change Symbols dialog are very similar to the Update Symbols from Library dialog.

Another way to swap existing symbols for new ones is to use **Tools** → **Edit Symbol Library Links....** This dialog contains a table of every symbol in the design, grouped by current library symbol. By choosing a new symbol in the **New Library Reference** column, you can make all instances of the existing symbol instead point to the new symbol. If the **Update symbol fields from new library** option is used, the contents of the existing symbols' fields will be updated to match the new symbols' fields.


The **Map Orphans** button attempts to automatically remap orphaned symbols to symbols with the same name in an active library. For example, if there is a symbol with the current library reference `mylib:symbol123`, but the `mylib` library cannot be found, the **Map Orphans** button will attempt to find a symbol named `symbol123` in any of the libraries that are present. This button is only enabled if orphaned symbols are present in the schematic (see the legacy schematics section).

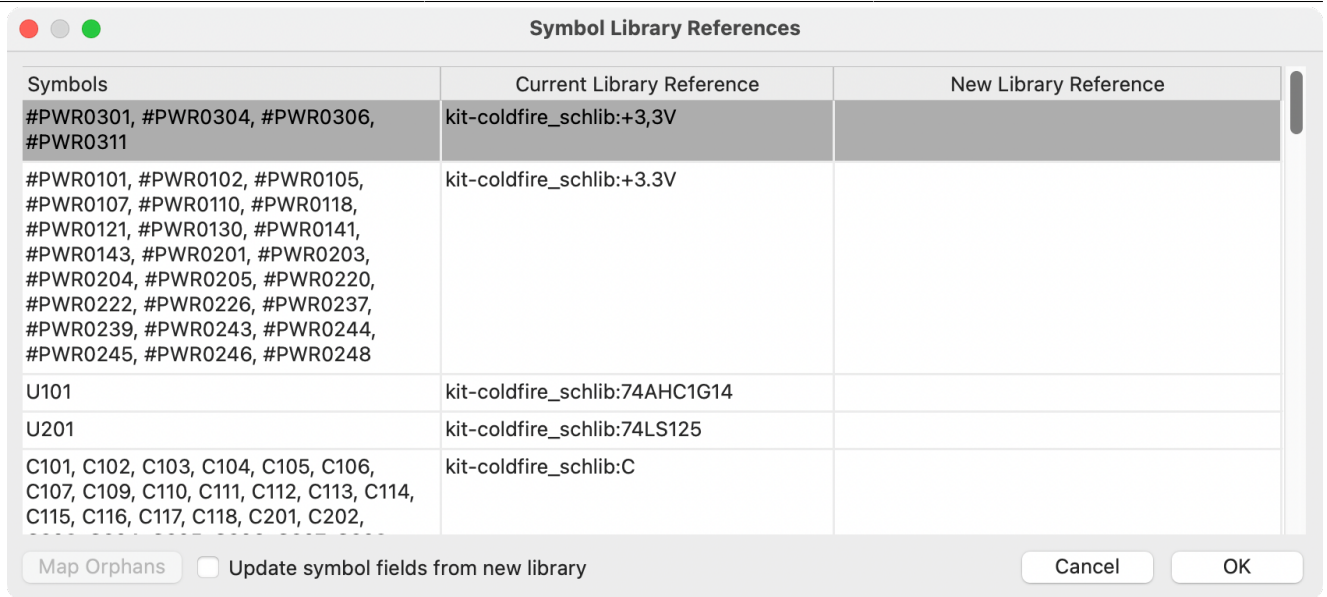


This dialog is primarily useful for managing symbols that appear in multiple libraries, when you want to switch from one library to another. For example, if a schematic uses symbols that are in both a global library and a project-specific library, the Symbol Library References dialog could be used to switch between using the global symbols or the equivalent project-specific symbols. It does not have features for fine-grained control of how fields are updated; for that, use the Change Symbols dialog.

2.5.7. Comparing symbols between schematic and library

When a symbol in a schematic diverges from the corresponding symbol in the original symbol library, you can use the Compare Symbol with Library tool to inspect the differences between the two versions of the symbol. Run the tool using **Inspect** → **Compare Symbol With Library**.

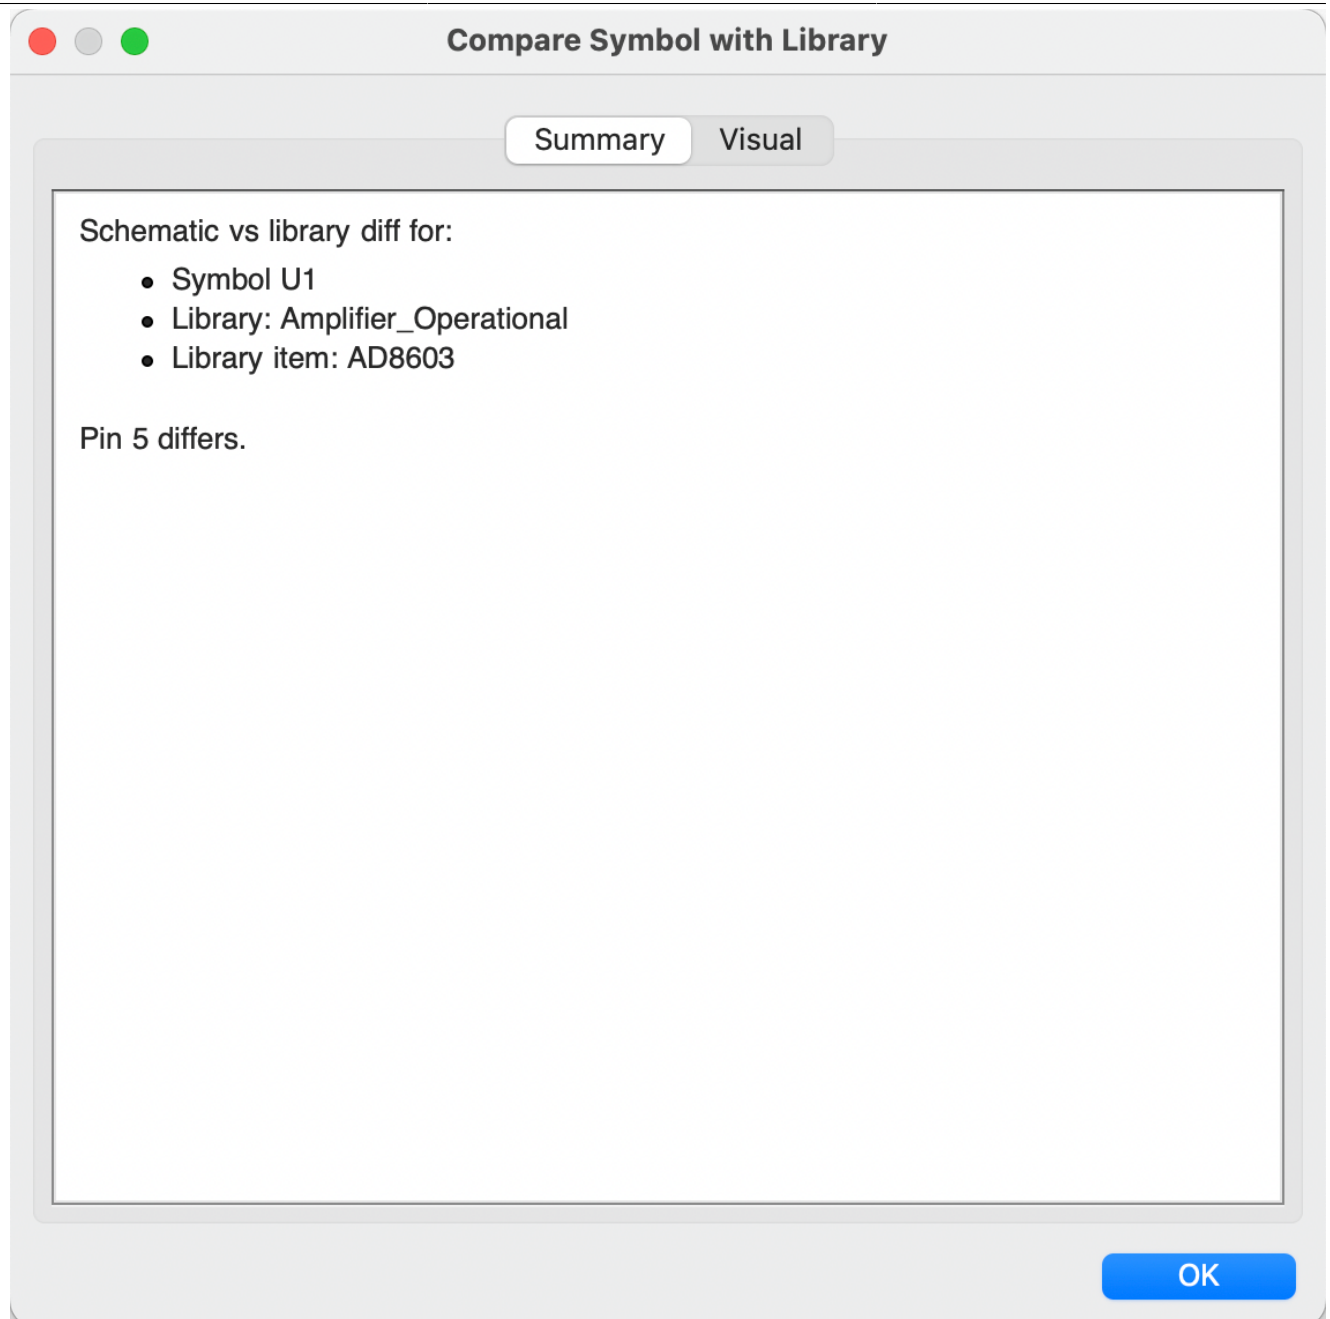

The **Summary** tab shows the name of the symbol, including its library and schematic reference designator, and provides a list of the differences between the schematic and library versions of the symbol.

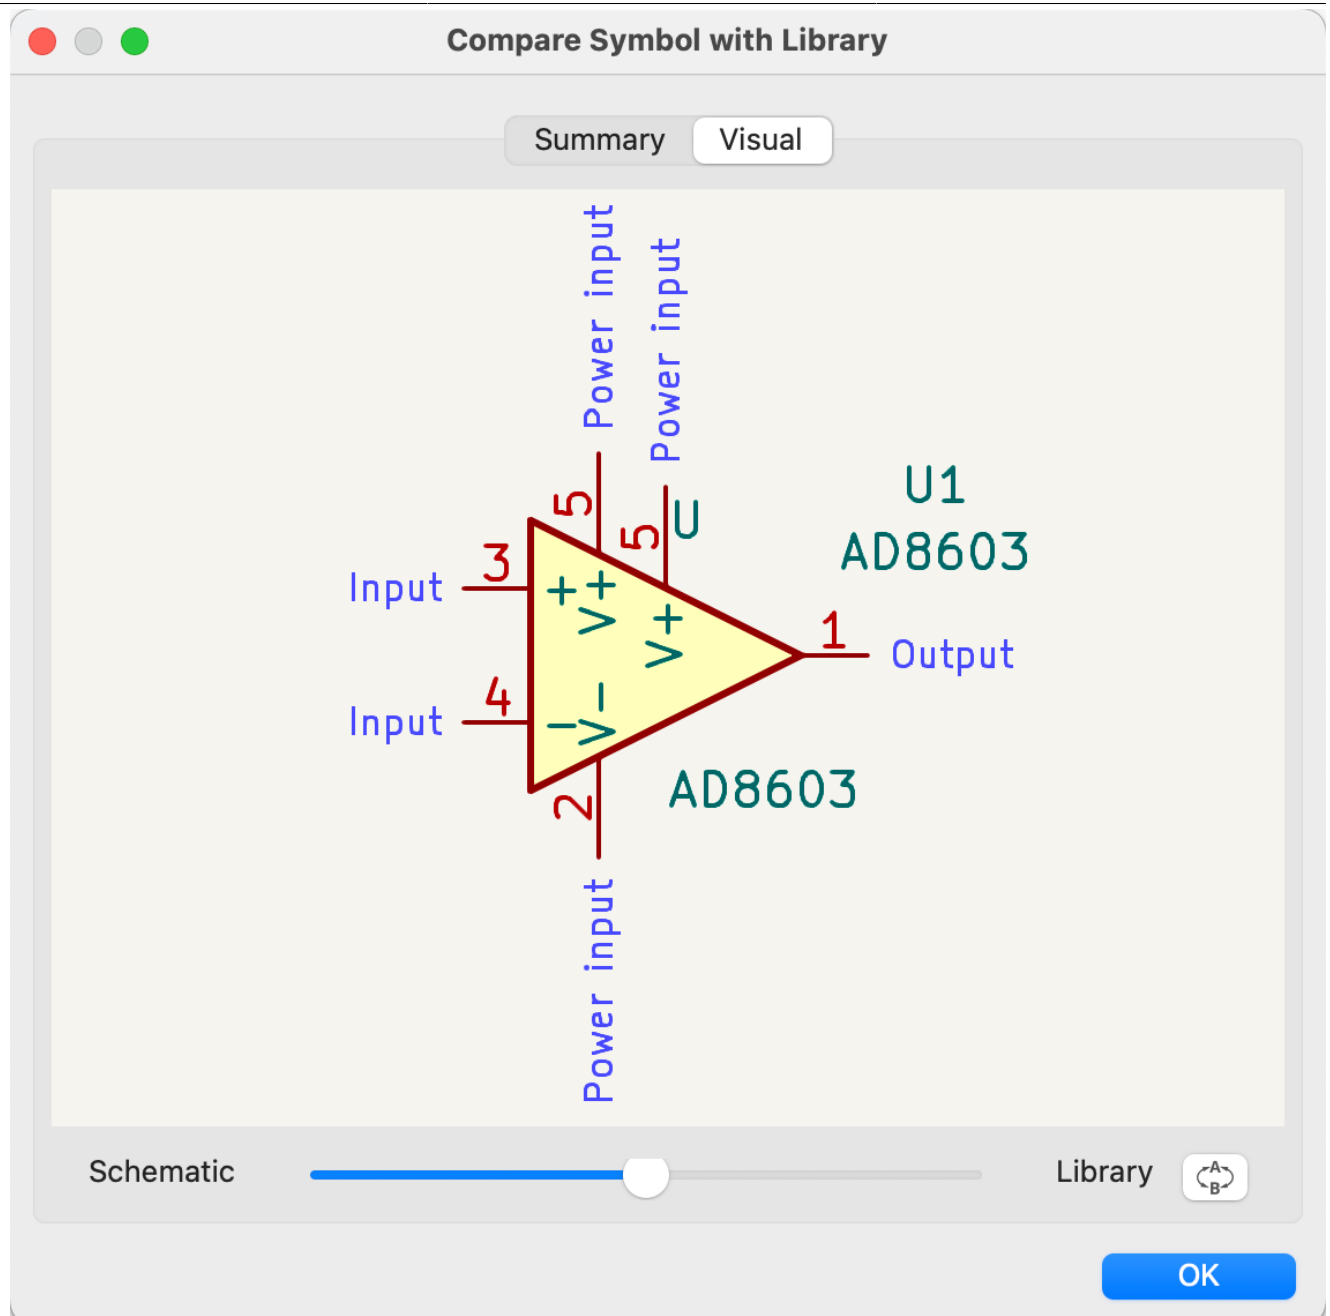

The **Visual** tab shows a visual comparison of the schematic and library versions of the symbol. This can be used as a visual diff tool.

By default, the comparison displays both versions of the symbol superimposed on each other. To see the changes more easily, you can drag the slider at the bottom of the tab to the right to emphasize the library version of the symbol in the superimposed view (making the schematic version of the symbol more transparent) or drag it to the left to emphasize the schematic version (making the library version more transparent). At the far right and left ends of the slider, the schematic and library versions of the symbol, respectively, are fully hidden. It may be helpful to drag the slider back and forth to see the changes more clearly.

You can press the **A/B** button, or use the kbd:[/] hotkey, to quickly toggle back and forth between the schematic and library versions.

The screenshot above shows a visual comparison with the schematic version of the symbol deemphasized. You can see a partially transparent pin 5 (from the schematic version of the symbol) is


in a different location than the fully opaque pin 5 (from the library symbol). This indicates that the pin was moved in either the schematic or library version of the symbol.

2.5.8. Symbol Fields Table

The Symbol Fields Table allows you to view and modify field values for all symbols in a spreadsheet interface. You can open the Symbol Fields Table with the



button.

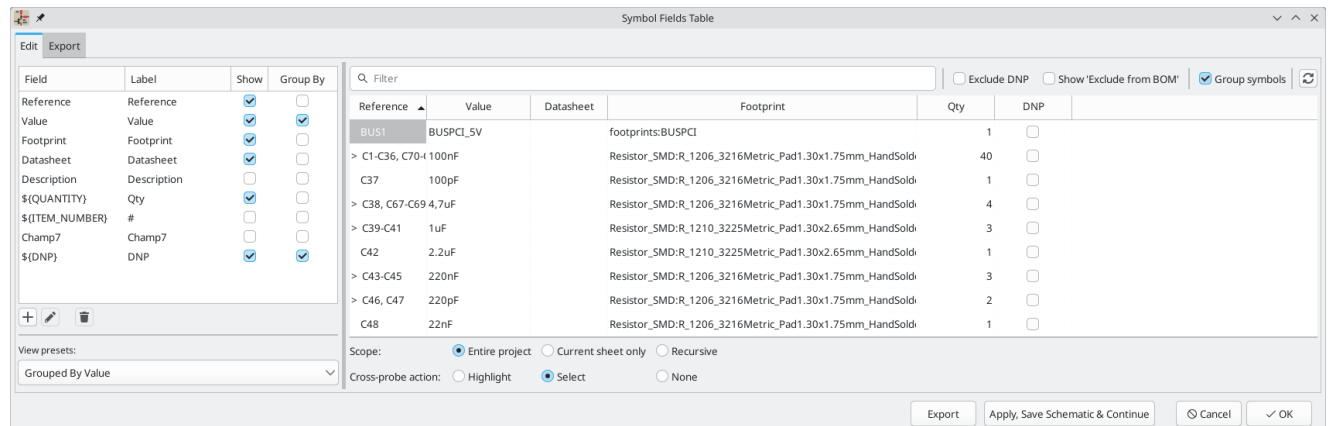

Cells are navigated with the arrow keys, or with `kbd:[Tab]` / `kbd:[Shift+Tab]` to move right / left and `kbd:[Enter]` to move down, respectively.

A range of cells can be selected by clicking and dragging. The whole range of selected cells will be copied (`kbd:[Ctrl+C]`) or pasted into (`kbd:[Ctrl+V]`) on a copy or paste action. Copying a range of cells from the table can be useful for creating a BOM. More details of copying and pasting cells are described below.

The left pane contains a list of all available symbol fields, as well as some virtual fields such as Quantity and Item Number. You can add or remove any symbol field from the main table on using the **Show** checkboxes (fields can also be shown or hidden by right-clicking on the header of the main table). New symbol fields can be added using the



button; a field with that name will be added to every symbol. To rename the field, which changes the field name in all symbols, use the



button. The



button deletes the field from all symbols.

Each field has its own column label, which is displayed at the top of the corresponding column in the symbol fields table and in exported BOMs. The column label for each field is shown in the second column of in the left pane. A column label does not have to match the field name. To change a field's column label, select the field's row in the left pane, then click again in the column label cell of that row to edit it.

Similar symbols can optionally be grouped by any symbol field using the **Group By** checkboxes. Symbols are grouped into a single row in the table if all of their **Group By** fields are identical. The grouped row can be expanded to show the individual symbols by clicking the arrow at the left of the row. The **Group Symbols** checkbox enables or disables symbol grouping, and the



button recalculates groupings.

Presets are available to configure the list of fields. Presets store which fields are displayed, which fields are used for grouping, and the column order. You can create and save your own presets or use one of several default presets. Custom presets can be deleted in this dialog or in the Schematic Setup dialog.

Symbols can be filtered by reference designator using the **Filter** textbox at the top. The filter supports wildcards: * matches any number of any characters, including none, and ? matches any single character. You can also change the display scope, showing only symbols in the current sheet, the current sheet and all of its subsheets, or the entire project. Symbols with the DNP (do not populate) attribute set can be optionally excluded by checking the **Exclude DNP** box.

You can cross-probe from this dialog by selecting a row in the table. Depending on the **Cross-probe action** setting at the bottom of the dialog, this can highlight the corresponding symbol in the schematic, select the corresponding symbol in the schematic, or do nothing. The selection action can also select the symbol's footprint in the board editor, depending on the PCB Editor cross-probing settings.

The Symbol Fields Table is also a bill of materials tool. You can use the **Export** button to save the symbol fields to an external file. The fields are exported to the BOM exactly as they are currently shown in the spreadsheet view. File format settings are configured in the **Export** tab. For more information about exporting a BOM, see the BOM tool documentation.

Virtual fields

If you create a field in the Symbol Fields Table whose name begins with a text variable, a virtual field will be created. Virtual fields have a value that is evaluated for each symbol based on the contents of the field name. For example, a virtual field named `${SYMBOL_NAME}` will evaluate to the symbol's name for each symbol. A virtual field can contain any text, as long as it starts with a text variable, so a virtual field named `${SYMBOL_LIBRARY}:${SYMBOL_NAME}` will evaluate to `<library name>:<symbol name>` for each symbol.

Virtual fields exist only in the Symbol Fields Table and in BOM exports. While they are displayed as a column in the dialog and BOMs, and they can be used to group or sort symbols in BOM exports just like regular fields, adding a virtual field in the Symbol Fields Table does not add a corresponding field to each symbol in the schematic.

Any text variable can be used in virtual fields, including sheet and project text variables.

Text variables that correspond to symbol attributes (`${DNP}`, `${EXCLUDE_FROM_BOARD}`, `${EXCLUDE_FROM_SIM}`, `${EXCLUDE_FROM_BOM}`) are displayed specially. In the Symbol Fields Table, they are shown as checkboxes for each symbol that directly set or unset the corresponding symbol attribute. In BOM exports, they expand to the friendly name of the attribute if the attribute is set (e.g. Excluded from board for `${EXCLUDE_FROM_BOARD}` and DNP for `${DNP}`) or to an empty string if the attribute is not set.

Finally, there are two special virtual fields that can be created:













- `${QUANTITY}` is a virtual field that contains the number of grouped instances of each symbol.

- `${ITEM_NUMBER}` is a virtual field that contains the row number of each symbol in the table.

Tricks to simplify filling fields

There are several special copy/paste methods in the spreadsheet for pasting values into larger regions, including auto-incrementing pasted cells. These features may be useful when pasting values that are shared in several symbols.

Questi metodi sono illustrati sotto.

1. Copy (kbd:[Ctrl+C])	2. Select target cells	3. Paste (kbd:[Ctrl+V])
		
		
		
		
		

Nota

Queste tecniche sono disponibili anche in altre finestre di dialogo con elementi di controllo a griglia.

2.6. Reference Designators and Symbol Annotation

Reference designators are unique identifiers for components in a design. They are often printed on a PCB and in assembly diagrams, and allow you to match symbols in a schematic to the corresponding components on a board.

In KiCad, reference designators consist of a letter indicating the type of component (R for resistor, C for capacitor, U for IC, etc.) followed by a number. If the symbol has multiple units then the reference designator will also have a trailing letter indicating the unit. Symbols that don't have a reference designator set have a ? character instead of the number. Reference designators must be unique.

Reference designators can be automatically set when symbols are added to the schematic, and you can set or reset reference designators yourself by manually editing an individual symbol's reference designator field or in bulk using the Annotation tool.

Nota


The process of setting a symbol's reference designator is called **annotation**.

2.6.1. Auto-annotation

When auto-annotation is enabled, symbols will be automatically annotated when they are added to the schematic. You can enable auto-annotation by checking the **Automatically annotate symbols** checkbox in the **Schematic Editor** → **Annotation Options** pane in **Preferences**. Auto-annotation can also be toggled using the



button in the left toolbar.

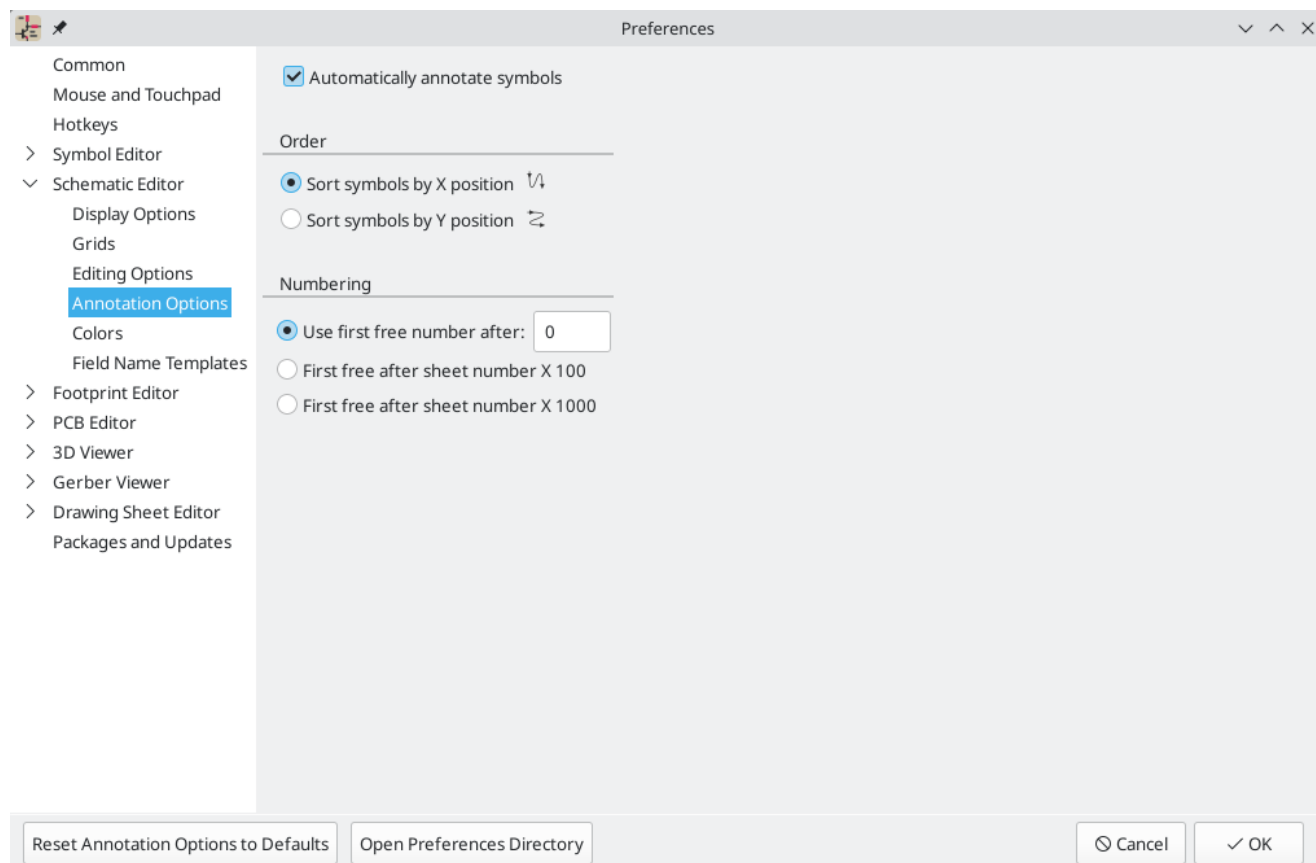

When multiple symbols are added simultaneously, they are annotated according to the **Order** setting, sorted by either X or Y position.

The **Numbering** option sets the starting number for new reference designators. This can be the lowest available number, or a number based on the sheet number.

For more information about annotation options, see the documentation for the Annotation tool.

2.6.2. Strumento di annotazione

The Annotation tool automatically assigns reference designators to symbols in the schematic. To launch the Annotation tool, click the



button in the top toolbar.

Annota schema

Ambito

☒ Usa lo schema intero

☐ Usa solo la pagina corrente

☒ Mantieni l'annotazione esistente

☐ Reimposta l'annotazione esistente

☐ Reimposta ma non scambiare nessuna parte multipla annotata

Ordine annotazione

☒ Ordina componenti per posizione X

☐ Ordina componenti per posizione Y

Opzioni annotazione

☒ Usa il primo numero libero dello schema

☐ Inizia dal foglio numero 100 e usa il primo numero libero

☐ Inizia dal foglio numero 1000 e usa il primo numero libero

Dialogo

☐ Mantieni questa finestra aperta

☒ Chiedi sempre conferma

Chiudi Cancella annotazione Annota

The tool provides several options to control how symbols are annotated.

Scope: Selects whether annotation is applied to the entire schematic, to only the current sheet, or to only the selected symbols. If the **Recurse into subsheets** option is selected, symbols in subsheets of the selected scope will be reannotated; otherwise symbols in subsheets will not be reannotated. For example, if **Recurse into subsheets** and **Selection only** selected, symbols in any selected subsheets will be reannotated.

Options: Selects whether annotation should apply to all symbols and reset existing reference designators, or apply only to unannotated symbols.

Order: Chooses the direction of numbering. If symbols are sorted by X position, all symbols on the left side of a schematic sheet will be lower numbered than symbols on the right side of the sheet. If symbols are sorted by Y position, all symbols on the top of a sheet will be lower numbered than symbols at the bottom of the sheet.


Numbering: Selects the starting point for numbering reference designators. The lowest unused number above the starting point is picked for each reference designator. The starting point can be an arbitrary number (typically zero), or it can be the sheet number multiplied by 100 or 1000 so that each part's reference designator corresponds to the schematic page it is on.

The **Clear Annotation** button clears all reference designators in the selected scope.

Annotation messages can be filtered with the checkboxes at the bottom or saved to a report using the **Save...** button.

2.7. Connessioni elettriche

There are two primary ways to establish connections: wires and labels. Wires make direct connections, while labels connect to other labels with the same name. Both wires and labels are shown in the schematic below.

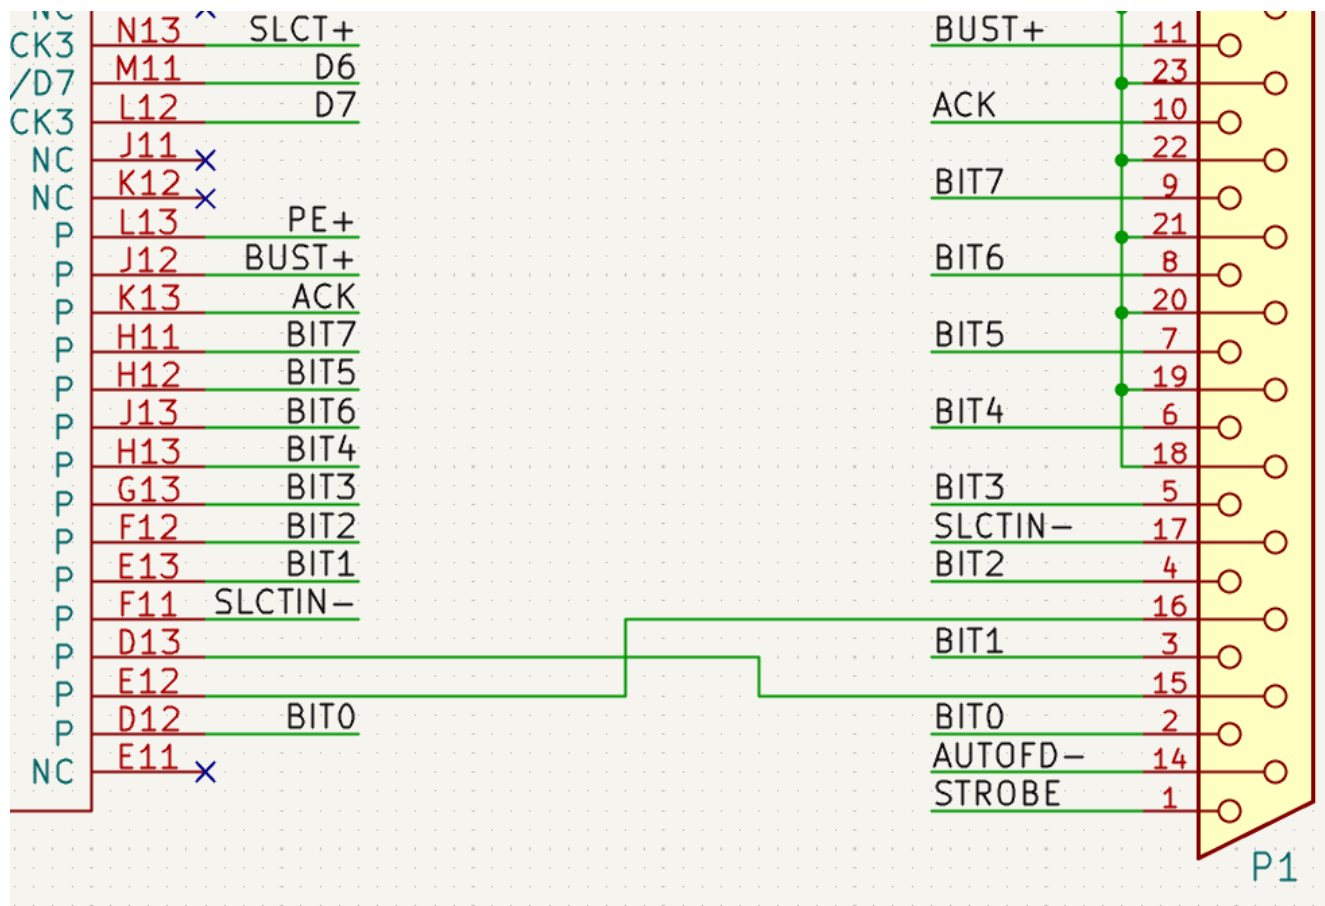

Connections can also be made with buses and with implicit connections via hidden power pins.

This section will also discuss two special types of symbols that can be added with the "Power symbol" button on the right toolbar:

- **Power symbols:** symbols for connecting wires to a power or ground net.
- **PWR_FLAG:** a specific symbol for indicating that a net is powered when it is not connected to a power output pin (for example, a power net that is supplied by an off-board connector).

2.7.1. Wires

Wires are used to directly establish electrical connections between two points. To establish a connection, a segment of wire must be connected by its end to another segment or to a pin. Only wire ends create connections; if a wire crosses the middle of another wire, a connection will not be made.

Unconnected wire ends have a small square that indicates the connection point. The square disappears when a connection is made to the wire end. Unconnected pins have a circle, which also disappears when a connection is made.

Nota

Wires connect with other wires or pins only if their ends coincide exactly. Therefore it is important to keep symbol pins and wires aligned to the grid. It is recommended to always use a 50 mil grid when placing symbols and drawing wires because the KiCad standard symbol library and all libraries that follow its style also use a 50 mil grid.

Nota

Symbols, wires, and other elements that are not aligned to the grid can be snapped back to the grid by selecting them, right clicking, and selecting **Align Elements to Grid**.

Drawing and editing wires

To begin connecting elements with wire, use the Wire tool



in the right toolbar (kbd:[w]). Wires can also be automatically started by clicking on an unconnected symbol pin or wire end.

You can restrict wires to 90 degree angles using the



button in the left toolbar, or to 45 degree angles with the



button. The



button allows you to place wires at any angle. You can cycle through these modes using kbd:[Shift +Space], or select the desired mode in **Preferences** → **Schematic Editor** → **Editing Options**. These modes affect graphic lines in addition to wires.

As in the PCB editor, the kbd:[/] hotkey switches wire posture.


Wires can be moved and edited using the Move (kbd:[M]) or Drag (kbd:[G]) tools. As with symbols, the **Move** tool moves only the selected segment, without maintaining existing connections to other segments. The **Drag** tool maintains existing connections.

You can select connected wires using the **Select Connection** tool (kbd:[Alt+4]). This tool selects all connected wire segments until it reaches a junction, starting with the selected segment or the segment under the cursor. Using the tool again expands the existing selection to the next junction.

You can break a wire segment into two pieces by right-clicking a wire and selecting **Slice**. The segment will be separated at the current mouse position. You can also separate a wire segment from the adjacent segments by right-clicking the segment and selecting **Break**.

Normally the line style of a wire follows the net's net class settings (nets are in the Default net class if no other net class is specified). However, the line style for the selected wire segments can be overridden in the wire's properties dialog (kbd:[E] when a wire segment is selected). The wire's

width, color, and line style (solid, dashed, dotted, etc.) can be set. Setting the width to 0, clearing the color, and using the Default line style uses the default width, color, and style, respectively, from the net class settings. If a wire junction is included in the selection, the junction size can also be edited here.

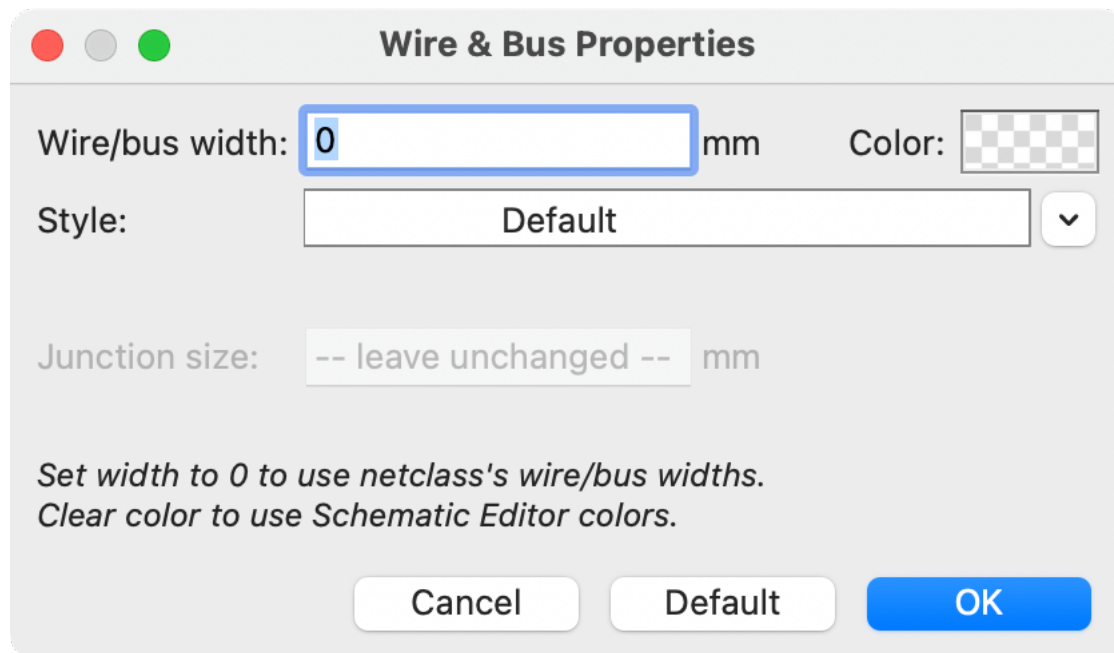

Giunzioni di fili


Wires that cross are not implicitly connected. It is necessary to join them by explicitly adding a junction dot if a connection is desired (



button in the right toolbar). Junction dots will be automatically added to wires that start or end on top of an existing wire.

Junction dots are used in the schematic figure above on the wires connected to P1 pins 18, 19, 20, 21, 22, and 23.

Junction size automatically follows the schematic's **Junction dot size** setting in **Schematic Setup** → **General** → **Formatting**. Color follows the net class setting. The automatic size and color can be overridden in each junction dot's properties; a size of 0 is equivalent to the schematic default size, and clearing the color uses the net class color.

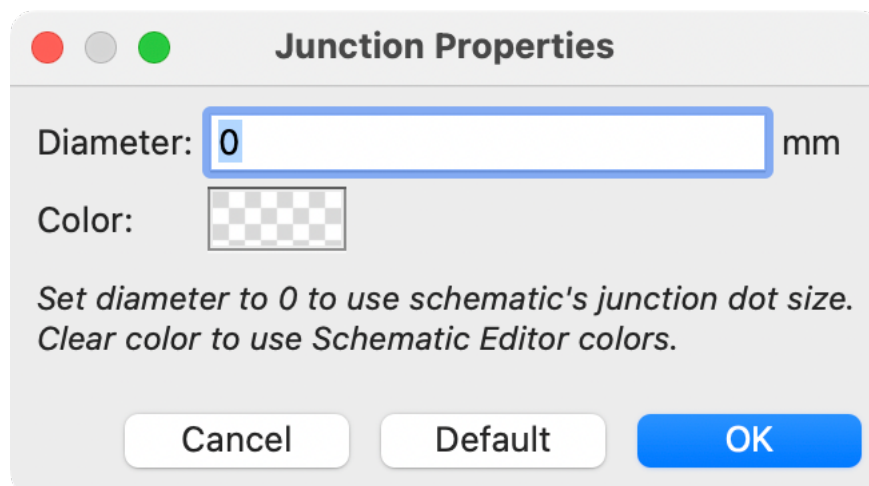

2.7.2. Labels

Labels are used to assign net names to wires and pins. Wires with the same net name are considered to be connected, so labels can be used to make connections without drawing direct wire connections.

A net can only have one name. If two different labels are placed on the same net, an ERC violation will be generated. Only one of the net names will be used in the netlist. The final net name is determined according to the rules described below.

There are three types of labels, each with a different connection scope.

- **Local labels**, also referred to simply as labels, only make connections within a sheet. Add a local label with the



button in the right toolbar.

- **Global labels** make connections anywhere in a schematic, regardless of sheet. Add a global label with the



button in the right toolbar.

- **Hierarchical labels** connect to hierarchical sheet pins and are used in hierarchical schematics for connecting child sheets to their parent sheet. Add a hierarchical label with the



button in the right toolbar.

Nota

Labels that have the same name will connect, regardless of the label type, if they are in the same sheet.


Suggerimento

You can convert from one type of label to another type of label using the Change To tools.

Adding and editing labels

After using the appropriate button or hotkey to create a label, the Label Properties dialog appears.

Creazione e modifica di schemi elettrici

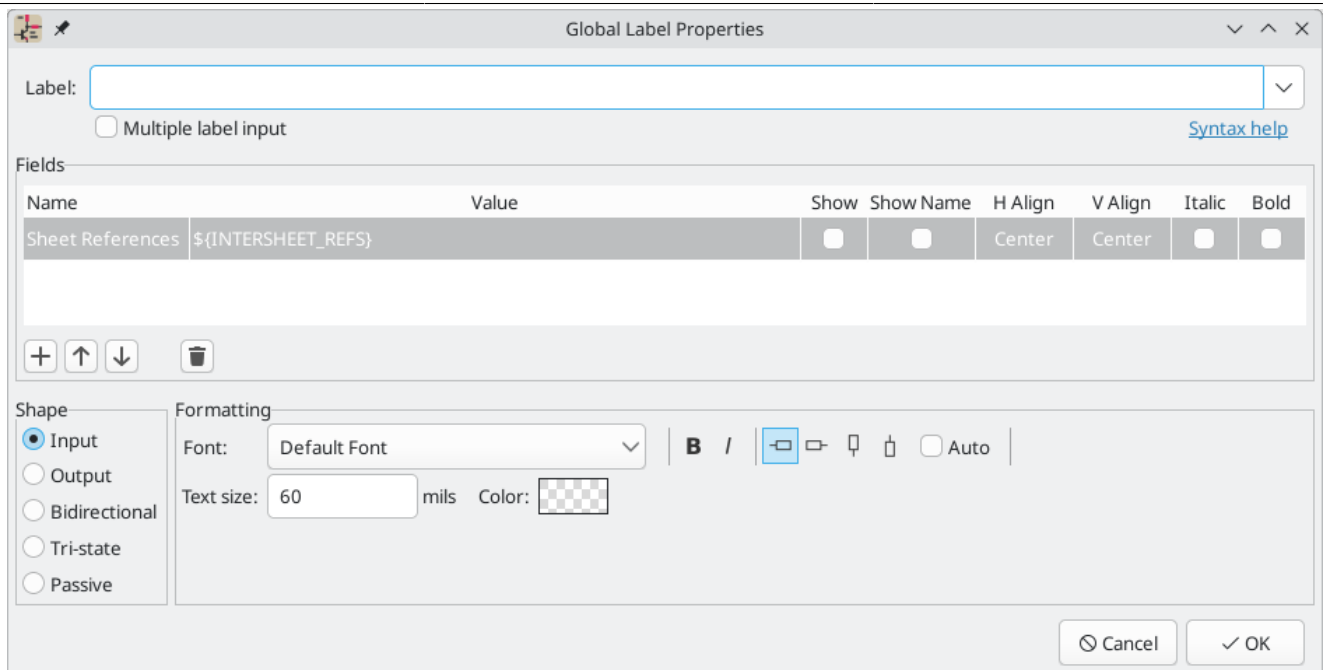

The dialog box is titled "Global Label Properties". It features a "Label:" field with a dropdown arrow. Below it is a checkbox for "Multiple label input" and a link for "Syntax help". A "Fields" section contains a table with columns: Name, Value, Show, Show Name, H Align, V Align, Italic, and Bold. The first row is "Sheet References" with value "\${INTERSHEET_REFS}" and various alignment and emphasis options. Below the table are icons for adding, moving, and deleting fields. The "Shape" section has radio buttons for Input, Output, Bidirectional, Tri-state, and Passive. The "Formatting" section includes a font dropdown, bold/italic/underline buttons, a text size input (set to 60), a color picker, and an "Auto" checkbox. "Cancel" and "OK" buttons are at the bottom right.

Name	Value	Show	Show Name	H Align	V Align	Italic	Bold
Sheet References	\${INTERSHEET_REFS}	☐	☐	Center	Center	☐	☐

The **Label** field sets the label's text, which determines the net that the label assigns to its attached wire. You can choose a label name from a list of nets that are already in the schematic by clicking the dropdown menu next to the label name field.

Label text supports markup for overbars, subscripts, etc., as well as variable substitution. Use the **Syntax help** link in the dialog for a summary.

When the **Multiple label input** option is enabled, the **Label** field supports entering multiple labels, with one label on each line. In this case, the dialog will create multiple independent labels in sequence, one per line.

Suggerimento

Multiple label input may be useful for copying labels from other sources, such as a spreadsheet.

There are several options to control the label's appearance. You can change the font, size, and color of the text, and set bold and italic emphasis. You can also set the orientation of the text relative to the label's connection point. Hierarchical and global labels have several additional options: the **Auto** option automatically sets the label orientation based on the connected schematic elements, and **Shape** option controls the shape of the label outline (**Input**, **Output**, **Bidirectional**, **Tri-state**, or **Passive**). The outline shape is purely visual and has no electrical consequence.

Nota

The default text size can be set for a schematic in Schematic Setup, and the default font can be set in Preferences.

Nota

Global labels have additional settings to control margins around the label text in the Schematic Setup dialog.

Labels can also have fields added to them. Two fields have special meaning (`Net Class` and `Sheet References`, described below), but arbitrary fields can also be added. Label fields behave like symbol fields: you can show or hide their name and value and adjust the alignment, orientation, position, size, font, color, and emphasis.

Nota

Formatting options for label fields can be shown or hidden by right-clicking on the header row of the label field table and enabling or disabling the desired columns. Not all columns are shown by default.

Like symbol fields, label fields can be edited individually by opening the properties of a specific label field from the schematic (double click the label field, or use `kbd:[E]`).

After accepting the label properties, the label is attached to the cursor for placement. The connection point for a label is the small square in the corner of the label. The square disappears when the label is connected to a wire or the end of a pin. If multiple labels were specified in the dialog, each label is attached to the cursor for placement after the previous label is placed.



The connection point's position relative to the label text can be changed by choosing a different label orientation in the label's properties, or by mirroring/rotating the label.

The Label Properties dialog can be accessed at any time by selecting a label and using the `kbd:[E]` hotkey, double-clicking on the label, or with **Properties...** in the right-click context menu.

Assigning net classes with labels

In addition to assigning net names, labels can be used to assign net classes. A label field named `Net Class` assigns the specified net class to the net associated with the label. To make it easier to assign net classes in this way, `Net Class` is the default name for new label fields, and `Net Class` fields present a dropdown list of all the net classes that have been specified in Schematic Setup or Board Setup.

You can also type in a net class that isn't explicitly listed in the Schematic/Board Setup priority list. Such implicit net classes can't be assigned any design settings, like net class color or track width, but they can still be used in DRC rule queries.

If multiple `Net Class` fields are added to a label, or multiple labels with `Net Class` fields are applied to a net, all of the specified net classes are assigned to the net.

For more information about assigning net classes, see the net class documentation.

Inter-sheet references

Global labels can display inter-sheet references, which are a list of page numbers for other places in the schematic where the same global label appears. Clicking an inter-sheet reference travels to the listed page. If multiple references are listed, clicking the reference list brings up a menu to select the desired page.

Inter-sheet references are globally controlled in the Schematic Setup window's Formatting page. References can be enabled or disabled, and the displayed format for the list can be adjusted, including with optional prefix or suffix characters.

The image below shows a global label with inter-sheet references to two other schematic pages. A prefix and suffix of [and], respectively, were added in Schematic Setup.



A Sheet References field with value `${INTERSHEET_REFS}` is automatically added to global labels, and is used to control the appearance of inter-sheet references for that label. The `${INTERSHEET_REFS}` text variable gets expanded to the full list of inter-sheet references for the global label, as configured in Schematic Setup. Visibility of inter-sheet references is globally controlled in Schematic Setup rather than with the Sheet References field visibility control. The Sheet References field has no meaning for other types of labels.


2.7.3. Buses

Buses are a way to group related signals in the schematic in order to simplify complicated designs. Buses can be drawn like wires using the bus tool



, and are named using labels the same way signal wires are.

In the following schematic, many pins are connected to buses, which are the thick blue lines in the center.

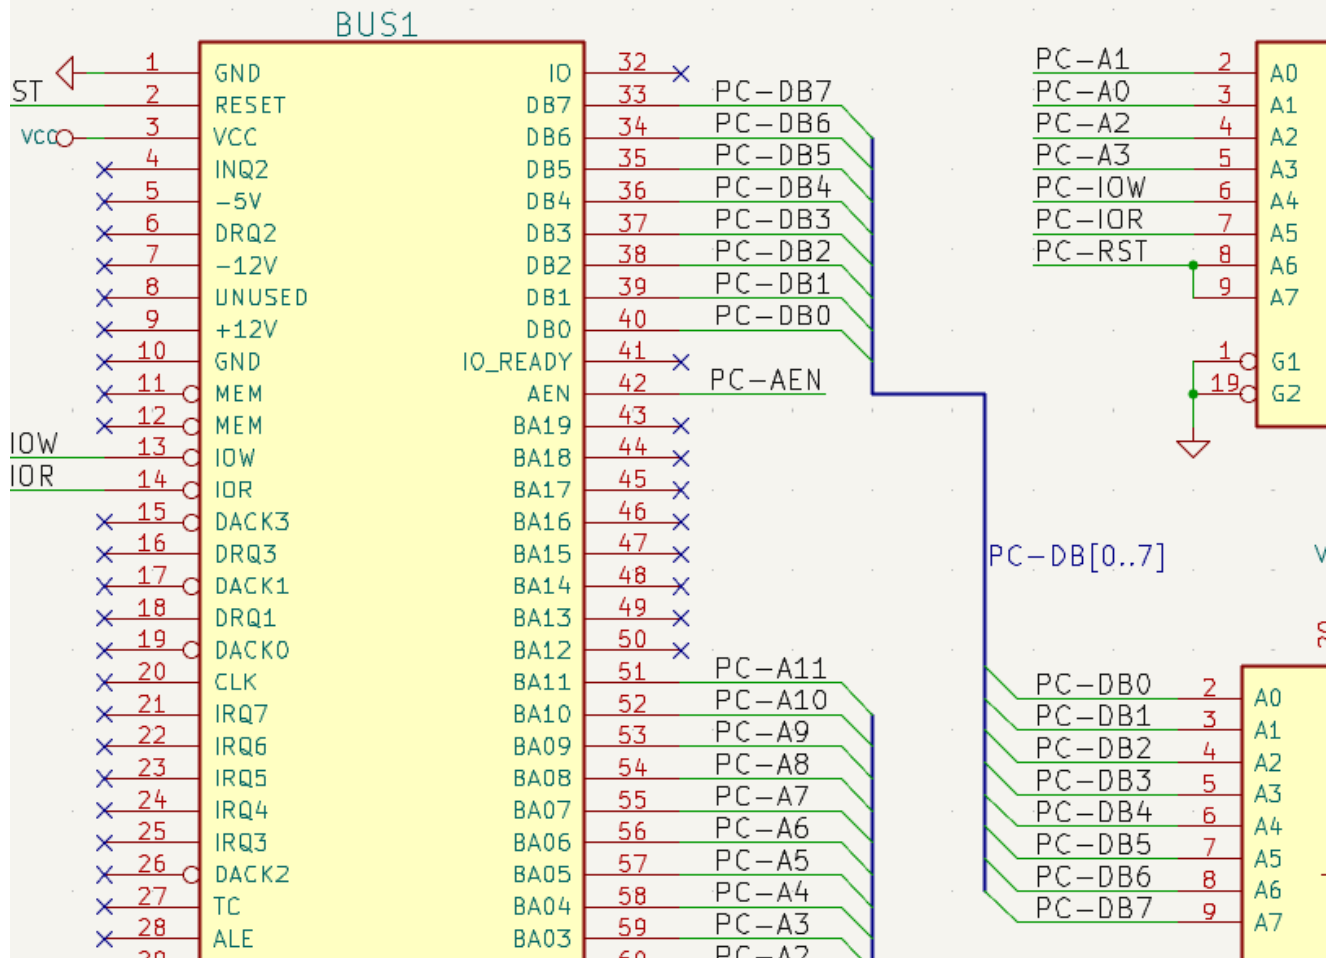

Membri di bus

There are two types of bus in KiCad 6.0 and later: vector buses and group buses.

Un **bus vettoriale** è un insieme di segnali che cominciano con un prefisso comune e finiscono con un numero. I bus vettoriali hanno nome nella forma <PREFISSO>[M. . N] dove PREFISSO è un qualsiasi nome di segnale valido, M è il primo numero del suffisso, e N è l'ultimo numero del suffisso. Per esempio, il bus DATA[0. . 7] contiene i segnali DATA0, DATA1, e così via fino a DATA7. Non importa in quale ordine M ed N vengono specificati, ma entrambi devono essere positivi.

Un **bus di gruppo** è un insieme di uno o più segnali e/o bus vettoriali. I bus di gruppo possono essere usati per tenere assieme segnali correlati anche quando questi hanno nomi diversi. I bus di gruppo usano una sintassi etichetta speciale:

<NOME_OPZIONALE>{SEGNALE1 SEGNALE2 SEGNALE3}

I membri del gruppo sono elencati dentro parentesi graffe ({}) separati da spazi. Il nome opzionale del gruppo va prima della prima parentesi. Se il bus di gruppo è anonimo, i collegamenti risultanti sul C.S. saranno semplicemente i nomi dei segnali dentro il gruppo. Se il bus di gruppo possiede un nome, i collegamenti risultanti avranno il nome come prefisso, con un punto (.) di separazione tra il prefisso e il nome del segnale.

Per esempio, il bus {SCL SDA} ha due segnali membri, e nella netlist questi segnali saranno SCL e SDA. Il bus USB1{DP DM} genererà collegamenti chiamati USB1.DP e USB1.DM. Per progetti con bus grandi, ripetuti tra diversi circuiti simili, l'uso di questa tecnica può far risparmiare tempo.

I bus di gruppo possono contenere anche bus vettoriali. Per esempio, il bus MEMORY{A[7..0] D[7..0] OE WE} contiene sia bus vettoriali che segnali normali, il che porterà a dei collegamenti del tipo MEMORY.A7 e MEMORY.OE sul C. S. .

Bus wires can be drawn and connected in the same manner as signal wires, including using junctions to create connections between crossing wires. Like signals, buses cannot have more than one name — if two conflicting labels are attached to the same bus, an ERC violation will be generated.

Connessioni tra membri di bus

Pins connected between the same members of a bus must be connected by labels. It is not possible to connect a pin directly to a bus; this type of connection will be ignored by KiCad.

Nell'esempio sopra, le connessioni vengono effettuate dalle etichette piazzate sui fili connessi ai piedini. Le voci di bus (segmenti di filo a 45 gradi) sono solo elementi grafici, e non sono necessarie per formare connessioni logiche.

In fact, using the repetition command (kbd:[Insert]), connections can be very quickly made in the following way, if component pins are aligned in increasing order (a common case in practice on components such as memories, microprocessors...):

- Place the first label (for example PCA0)
- Use the repetition command as much as needed to place members. KiCad will automatically create the next labels (PCA1, PCA2...) vertically aligned, theoretically on the position of the other pins.
- Disegnare il filo sotto la prima etichetta. Usare poi il comando di ripetizione per piazzare gli altri fili sotto le etichette.
- Se necessario, piazzare le voci di bus allo stesso modo (piazzare la prima voce, poi usare il tasto di ripetizione).

Nota

In the **Schematic Editor** → **Editing Options** section of the Preferences menu, you can set the repetition parameters:

- Horizontal pitch
- Vertical pitch
- Label increment (labels can be incremented or decremented by 1, 2, 3, etc.)

Dispiegamento bus

The unfold tool allows you to quickly break out signals from a bus. To unfold a signal, right-click on a bus object (a bus wire, etc) and choose **Unfold from Bus**. Alternatively, use the **Unfold Bus**


hotkey (default: kbd:[C]) when the cursor is over a bus object. The menu allows you to select which bus member to unfold.

Dopo aver selezionato il membro del bus, il successivo clic posizionerà l'etichetta del membro del bus alla posizione desiderata. Lo strumento genera automaticamente una voce bus ed un filo in direzione della posizione dell'etichetta. Dopo il posizionamento dell'etichetta, si può continuare a posizionare altri segmenti di filo (per esempio, per connetterli ai pin di un componente) e completare il collegamento in uno qualsiasi dei normali metodi.

Alias di bus

Gli alias di bus sono scorciatoie che permettono di lavorare con grandi insiemi di bus in modo più efficiente. Essi permettono di definire un gruppo di bus e dare ad esso un nome corto che può essere usato poi al posto del nome completo in tutto lo schema elettrico.

To create bus aliases, open the **Bus Alias Definitions** pane in Schematic Setup.

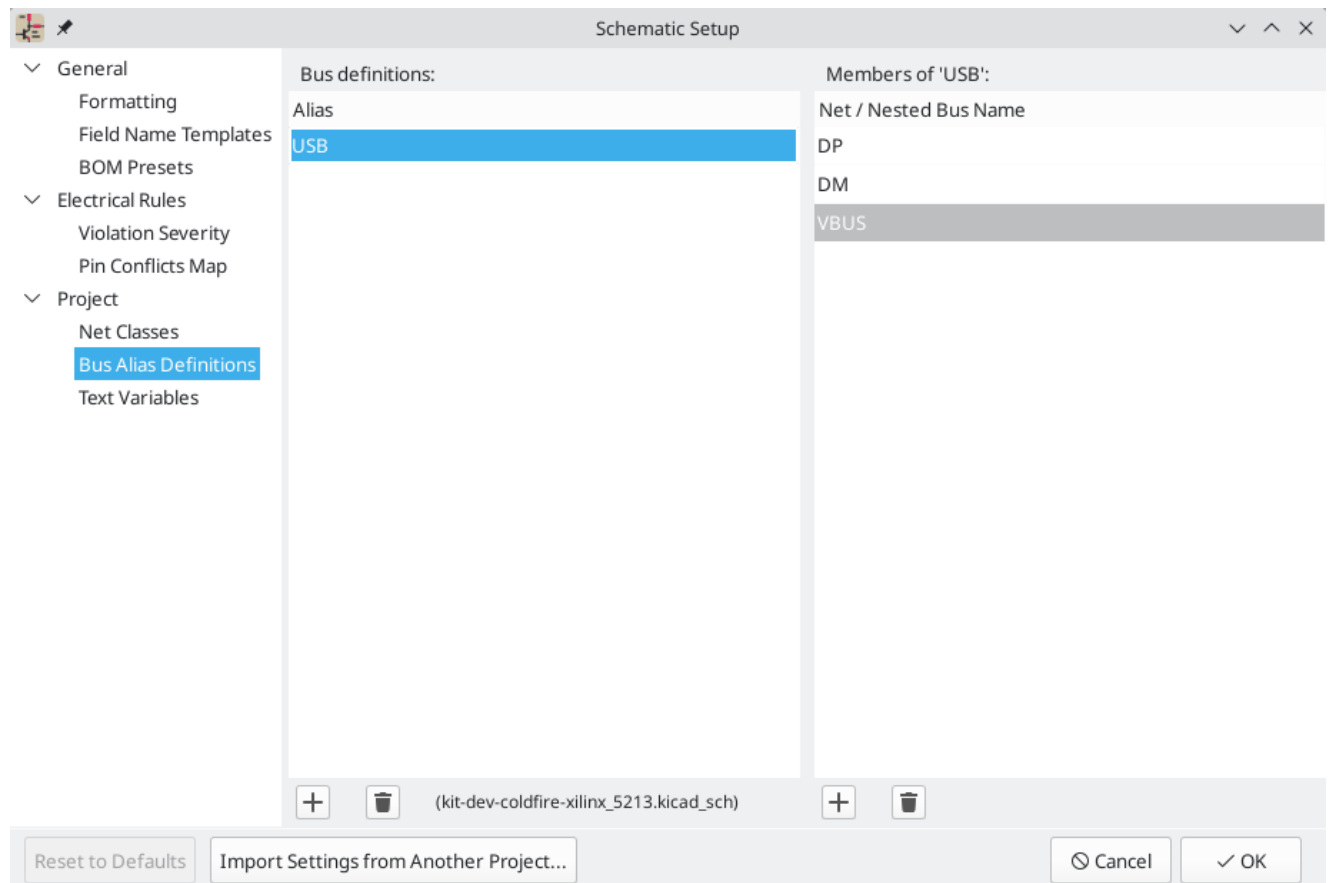

Ad un alias si può dare come nome un qualsiasi nome di segnale valido. Usando la finestra di dialogo, si possono aggiungere segnali o bus vettoriali all'alias. Come scorciatoia, si può battere o incollare dentro un'elenco di segnali e/o buse separati da spazi, e questi verranno aggiunti alla definizione di alias. In questo esempio, definiamo un alias chiamato USB con membri DP, DM, e VBUS.


After defining an alias, it can be used in a group bus label by putting the alias name inside the curly braces of the group bus: {USB}. This has the same effect as labeling the bus {DP DM VBUS}. You can also add a prefix name to the group, such as USB1{USB}, which results in nets such as USB1.DP. For complicated buses, using aliases can make the labels on your schematic much shorter. Keep in mind that the aliases are just a shortcut, and the name of the alias is not included in the netlist.

Bus aliases are saved in the schematic file that is opened when the alias is created. The **Bus Alias Definitions** window shows the schematic file associated with the selected alias at the bottom of the alias list. Any aliases created in a given schematic sheet are available to use in any other schematic sheet that is in the same hierarchical design. If multiple sheets in a hierarchical design contain identically-named bus aliases, the aliases must all have the same members. ERC will report a violation if multiple bus aliases with the same name do not have consistent members.

Bus con più di una etichetta

KiCad 5.0 e versioni precedenti permettevano la connessione di bus con diverse etichette assieme, e collegavano assieme i membri di detti bus durante la creazione della netlist. Questo comportamento è stato eliminato in KiCad 6.0 perché è incompatibile con i bus di gruppo, e anche perché tendeva a creare confusione nelle netlist perché il nome che un dato segnale avrebbe ricevuto non era facilmente predicibile.

Se si apre un progetto che faceva uso di questa caratteristica in una versione moderna di KiCad, si potrà osservare la finestra di dialogo di “Migrazione bus” che vi guiderà attraverso la procedura di aggiornamento dello schema in modo tale da garantire l’esistenza di una sola etichetta per un dato insieme di collegamenti bus.

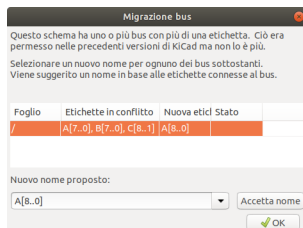

Per ogni insieme di fili di bus che ha più di una etichetta, è necessario scegliere l’etichetta da tenere. Il menu a discesa permette di scegliere tra le etichette che esistono nel progetto, oppure è anche possibile scegliere un nome ancora diverso inserendolo manualmente nel campo del nuovo nome.

2.7.4. Power Symbols


Power symbols are symbols that are conventionally used to represent a connection to a power net, such as VCC or GND. Power symbols are virtual: they do not represent a physical component on the PCB.

In addition to being a visual indicator that the attached net is a power rail, power symbols make global connections: two power symbols with the Value connect to each other anywhere in the schematic, regardless of sheet. The power symbol’s Value field determines the name of the attached net.

Nota

In previous versions of KiCad, power symbols used invisible power input pins, which make implicit global connections based on the pin name as described below. Beginning in KiCad 8, power symbols do not need to use invisible pins, and the global connection is made based on the power symbol’s value.

In the figure below, power symbols are used to connect the positive and negative terminals of the capacitors to the VCC and GND nets, respectively.

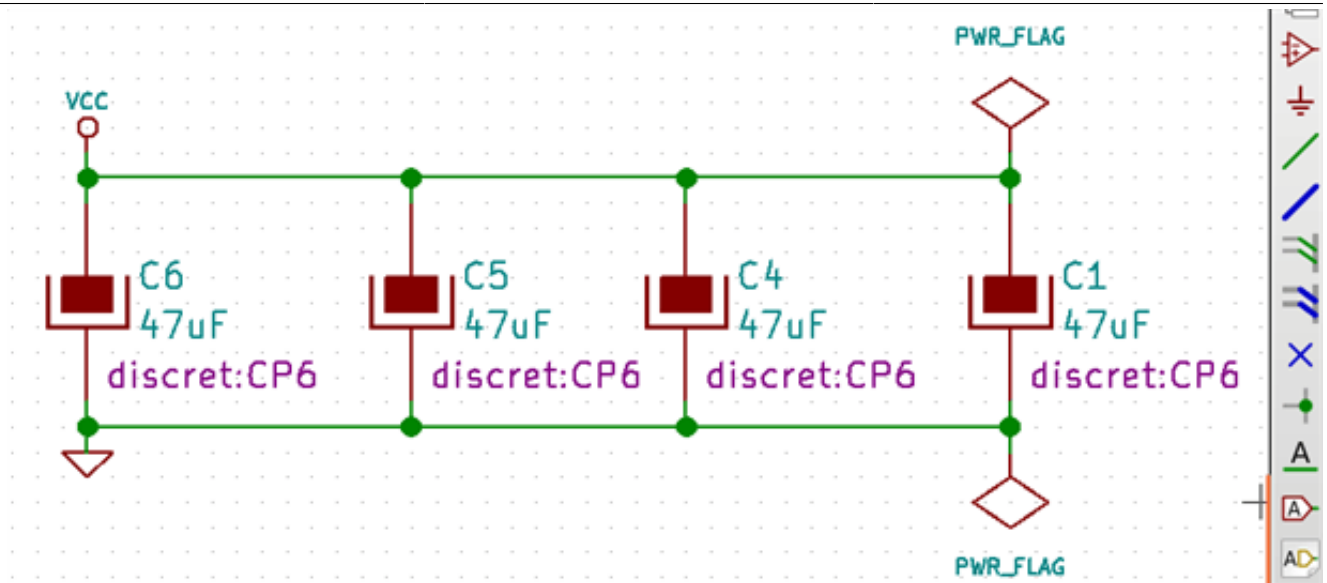

In the KiCad standard library, power symbols are found in the power library, but power symbols can be created in any library. Creating custom power symbols is described in the symbol editor documentation. Instead of making a new symbol, you can also modify an existing power symbol in the schematic: changing its `value` field will change the net the power symbol connects to.

2.7.5. Net name assignment rules

Every net in the schematic is assigned a name, whether that name is specified by the user or automatically generated by KiCad.

When multiple labels are attached to the same net, the final net name is determined in the following order, from highest priority to lowest:

1. Etichette globali
2. Power symbols
3. Local labels
4. Etichette gerarchiche
5. Hierarchical sheet pins

If there are multiple labels of one type attached to a net, the names are sorted alphabetically and the first is used.

If a net travels through multiple sheets of a hierarchy, it will take its name from the highest level of the hierarchy where it has a hierarchical label or local label. As usual, local labels take priority over hierarchical labels.

If none of the label types above are attached to a net, the net's name is automatically generated based on the connected symbol pins.

2.7.6. PWR_FLAG

Two PWR_FLAG symbols are visible in the screenshot above. They indicate to ERC that the two power nets VCC and GND are actually connected to a power source, as there is no explicit power source such as a voltage regulator output attached to either net.

Without these two flags, the ERC tool would diagnose: *Error: Input Power pin not driven by any Output Power pins.*

The PWR_FLAG symbol is found in the power symbol library. The same effect can be achieved by connecting any power output pin to the net.

2.7.7. No-connection flag

No-connection flags (



) are used to indicate that a pin is intentionally unconnected. These flags prevent "unconnected pin" ERC warnings for pins that are intentionally unconnected. Also, while symbol pins that are stacked on top of each other are normally connected to the same net, if a no-connection flag is added to the stacked pins they will instead be connected to separate nets.

Note that no-connection flags are distinct from the "unconnected" symbol pin type, although they both prevent "unconnected pin" ERC warnings on the pin in question and prevent stacked pins from connecting to each other.

2.7.8. Hidden Power Pins

When the power pins of a symbol are visible, they must be connected, as with any other signal. However, symbols are sometimes drawn with hidden power input pins, which are connected implicitly. KiCad automatically connects invisible pins with type Power Input to a global net with the same name as the pin. For example, if a symbol has a hidden power input pin named VCC, this pin will be globally connected to the VCC net on all sheets. This kind of implicit connection is not recommended in new designs.

Avvertimento

Care must be taken with hidden power input pins because they can create unintentional connections. By nature, hidden pins are invisible and do not display their pin name. This makes it easy to accidentally connect two power pins to the same net. For this reason, **using invisible power pins in symbols is not recommended** and is only supported for compatibility with legacy designs and symbols.

Nota

Hidden pins can be shown in the schematic by checking the **Show hidden pins** option in the **Schematic Editor** → **Display Options** section of the preferences, or by selecting **View** → **Show hidden pins**. There is also a toggle icon



on the left toolbar.


2.8. Net classes

Net classes are named groupings of nets that can be assigned design rules (for the PCB) and graphical properties (for the schematic).

More than one net class can be assigned to a net (through a combination of graphical assignments and net class patterns). For nets with multiple net classes assigned, an effective aggregate net class is formed, taking any net class properties from the highest priority net class which has that property set. Net class priority is determined by the ordering in the Schematic or Board Setup dialogs. The Default net class is used as a fallback for any missing properties after all explicit net classes have been considered; this means that nets may be part of the Default net class even if they have other net classes explicitly assigned.

Net classes may be created and edited in either the Schematic or Board Setup dialogs. Nets can be added to net classes in either the schematic or board using pattern-based assignments described below. Nets can also be assigned to net classes in the schematic using graphical assignments with net class directives or net labels.


Selecting a wire or label displays the net's net class in the message panel at the bottom of the window.

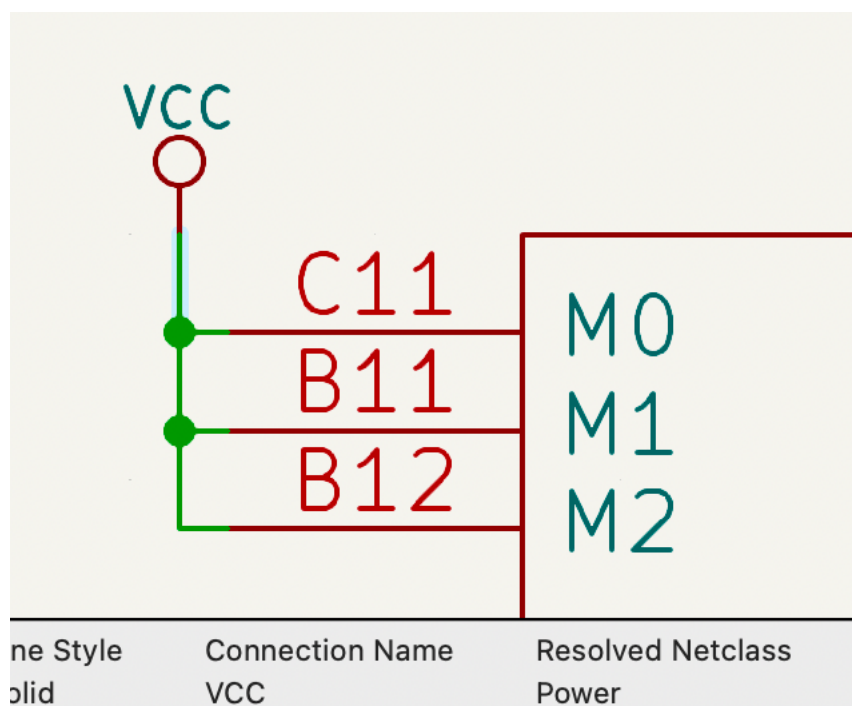

2.8.1. Managing net classes in Schematic Setup

Net classes are managed in the **Net Classes** panel of the **Schematic Setup** dialog.

Creazione e modifica di schemi elettrici

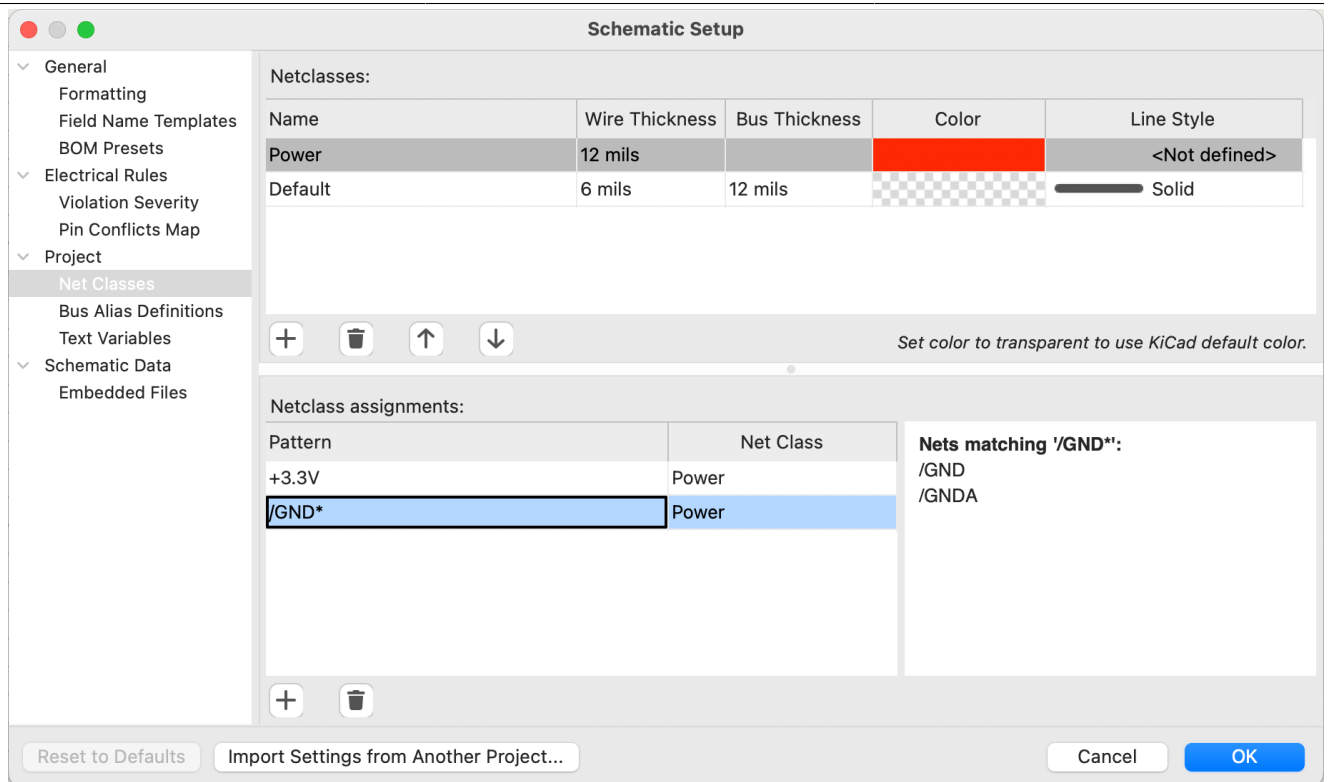

The top pane lists the net classes that exist in the design. The Default net class always exists, and you can add additional net classes with the



button or remove the selected net class with the



button.

Net classes can be moved up and down in priority order with the



and



buttons. Note that the Default net class will always be the lowest priority net class and can therefore not be moved.

Each net class can have unique graphic properties that determine how wires of that net class are displayed in the schematic. Wire and bus thicknesses, color, and line style (solid, dashed, dotted, etc.) can all be adjusted. Setting the color to transparent will use the theme's default wire/bus color for the net class, which is configurable in Preferences. By default any color that is configured for a net class controls the color is used to draw wires in that net class. If the **Highlight netclass colors** setting is enabled in the Display Options section of the Schematic Editor preferences, this color will instead be used to draw a highlight around wires in that netclass, and the wires themselves will always be drawn with the color scheme's wire color.

You can also set board design rules for each net class, although the DRC fields are hidden by default. Right click the header row to show or hide additional columns. For more information about setting net class design rules, see the PCB editor documentation.

All net class parameters for user-defined net classes are optional. However, all properties belonging to the Default net class must be set. When a net has more than one net class assigned, the appropriate value for graphic properties or board design rules is taken from the highest priority assigned net class with the relevant value set. If only one net class is assigned which contains missing properties, any missing values will be taken from the Default net class.

The bottom pane lists pattern-based net class assignments. Each row has a net name pattern and a net class; nets with names that match the pattern are assigned to the specified net class. If a net matches multiple patterns, the net is assigned to all of the matching net classes. You can sort the list of net class assignment patterns by pattern or by net class name by clicking on the corresponding column header.

Pattern-based net class assignments are dynamic: when a new net is added that matches an existing pattern, it will be assigned to the associated net class automatically. Net patterns can use both wildcards (* to match any number of any characters, including none, and ? to match any character) and regular expressions [https://docs.wxwidgets.org/3.2/overview_resyntax.html]. The nets that match the selected pattern are displayed to the right of the pattern list.

For example, the net* pattern matches nets named net, net1, network, and any other net name beginning with net. Because * has a slightly different meaning in a regular expression (* matches zero or more of the preceding character), the net* pattern would also match a net named ne.

Nota

Remember that net names must include the full sheet path. For example, a locally labeled net in the root sheet has a name prefixed with /.

Use the




button to add a net class assignment pattern or the



button to remove a pattern.


Instead of adding net class patterns in the Schematic Setup dialog, you can directly create net class patterns from the schematic canvas. Right click a net and select **Assign Netclass...** to bring up the **Add Netclass Assignment** dialog. The net class pattern is pre-filled with the name of the selected net, but the pattern can be changed if desired. All nets matching the pattern are displayed in the dialog. This method can only be used on nets with an assigned name.

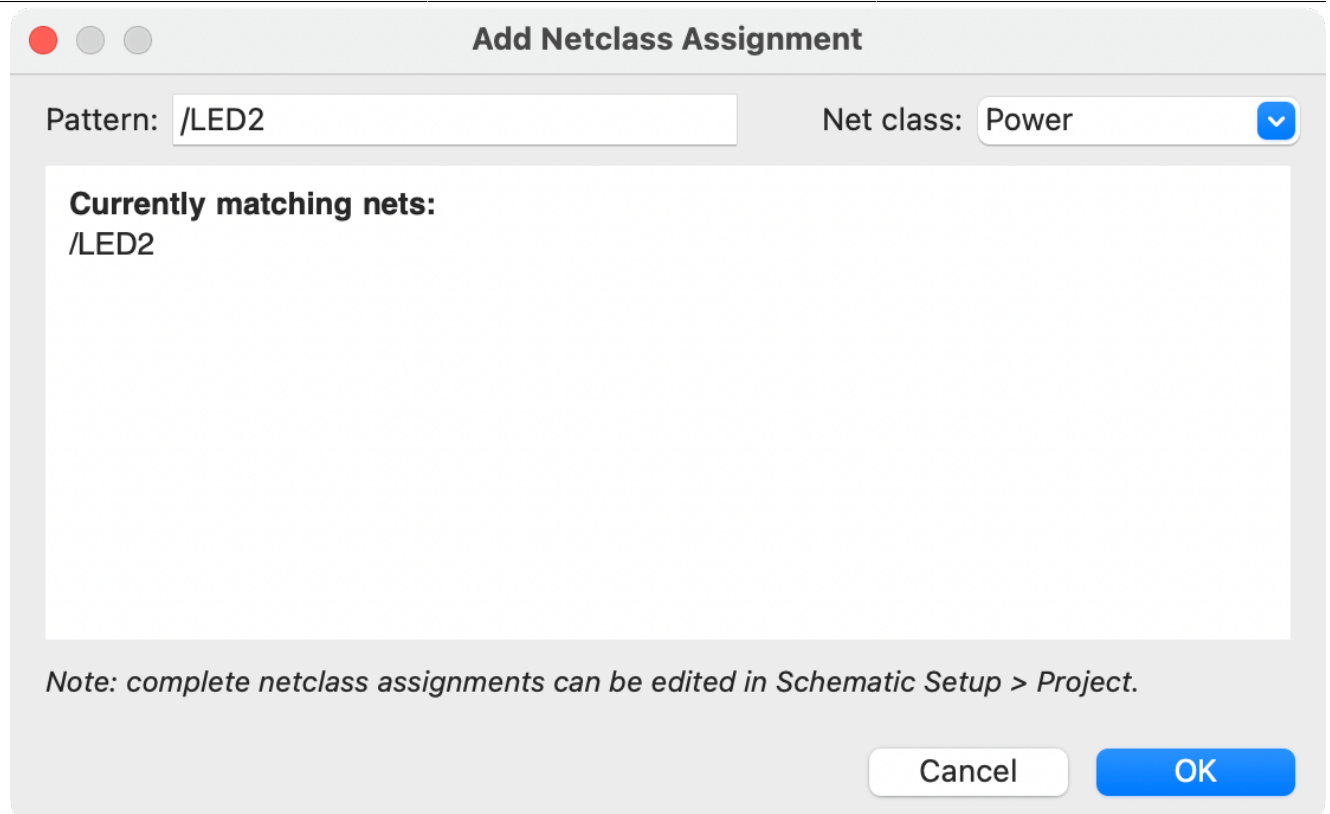

2.8.2. Graphically assigning net classes in the schematic

As an alternative to pattern-based net class assignment, net classes can be graphically assigned to nets in the schematic using either **directive labels**, **net labels**, or **rule areas**.

In the image below, a directive label is used to assign signals to the 50R net class.

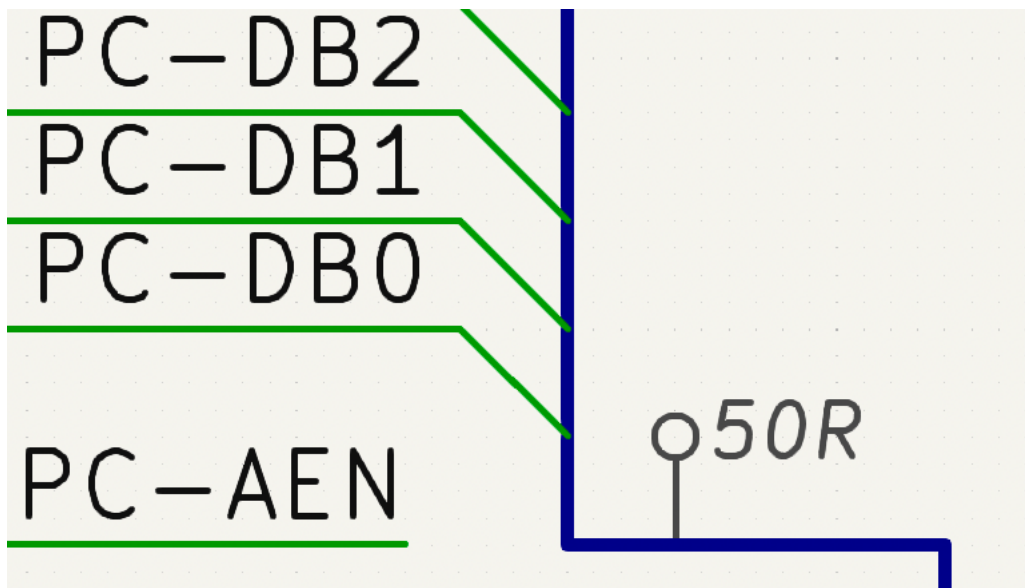

Directive labels are added with the




button in the right toolbar. They behave like labels, except that they cannot be used to name a net. The attached net is assigned a net class according to the value of the directive's Net Class field. The Net

Class field presents a dropdown list of all the net classes that have been specified in Schematic Setup or Board Setup.

You can also type in a net class that isn't explicitly listed in the Schematic/Board Setup priority list. Such implicit net classes can't be assigned any design settings, like net class color or track width, but they can still be used in DRC rule queries.

If multiple Net Class fields are added to a directive label, or multiple directive labels with Net Class fields are applied to a net, all of the specified net classes are assigned to the net.

If a directive is attached to a bus, all members of the bus are assigned to the specified net class.

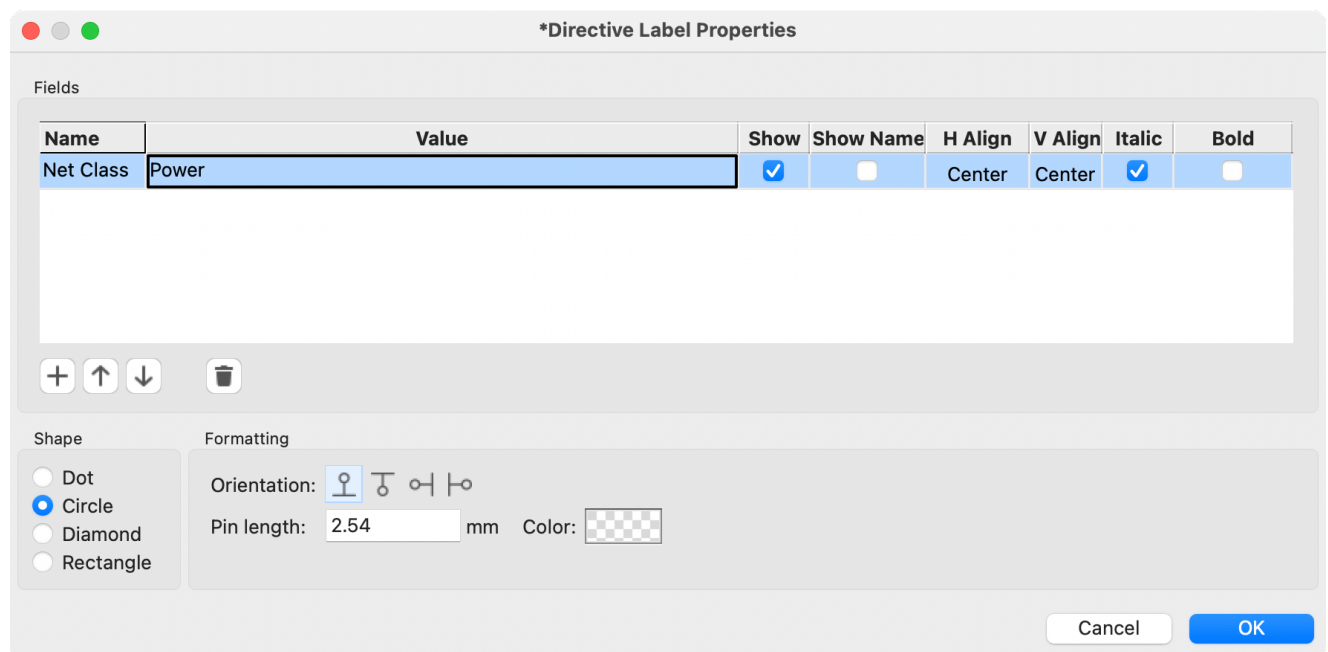

In addition to the associated net class, you can edit the directive's **shape** (dot, circle, diamond, or rectangle), **orientation**, **pin length**, and **color** in the directive's properties.


Nota

Net labels can also be used to assign net classes to nets by adding a Net Class field to the label.

The Rule Area tool (



) can be used to draw a shape to which net class directives can be attached. Any wire, bus, label, or symbol pin which crosses or is inside the rule area will be assigned the net class of a net class directive attached to the rule area border. An example is shown in the image below; all wires passing through the rule area will be assigned the RAM_ADDR net class.

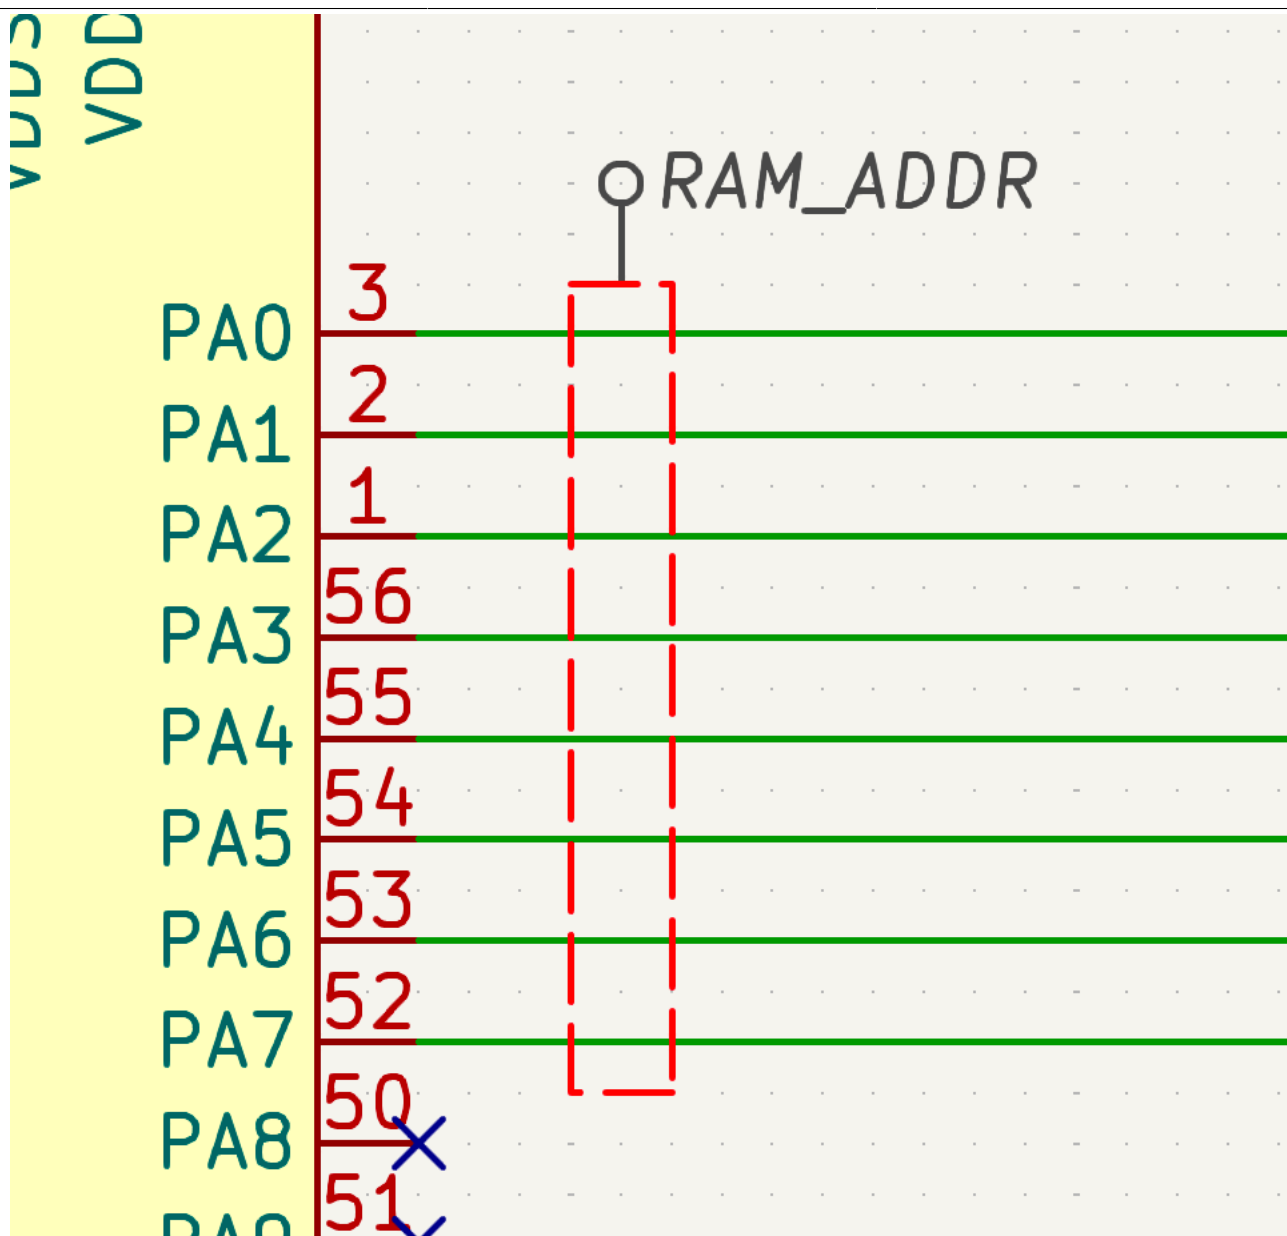

You can show or hide directive labels in the schematic using the **View** → **Show Directive Labels** option.

2.9. Component classes

Component classes are named groupings of components: they are assigned to symbols in the schematic and also apply to the corresponding footprints on the board. They are used to group symbols into channels for multichannel designs and can also be used to group footprints in custom DRC rules.

To assign a component class to a symbol, you can add a symbol field named **Component Class** to the symbol. The symbol will then be a member of the component class named by the field.


You can also assign component classes using directive labels (



) in combination with rule areas (



). The Rule Area tool can be used to draw a shape to which directive labels can be attached. Any symbol which crosses or is inside the rule area will be assigned to the component class specified by the directive label attached to the rule area border. An example is shown in the image below; R1 and R2 will be assigned to the Channel 1 component class.

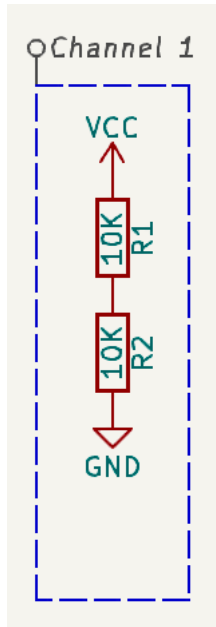


Components can have more than one class, and symbols take on a class if any of their sub-units have that class. If multiple Component Class fields are added to a directive label, or multiple directive labels with Component Class fields are applied to a rule area, the symbols in the rule area will take on all of the specified component classes.

2.10. Graphics and text

Text, graphic shapes, and images can be added to schematics for documentation purposes. These items do not have any electrical effect on the schematic.

The image below shows graphic lines and text ("COMMUNICATION DSP") in addition to symbols and several types of labels.

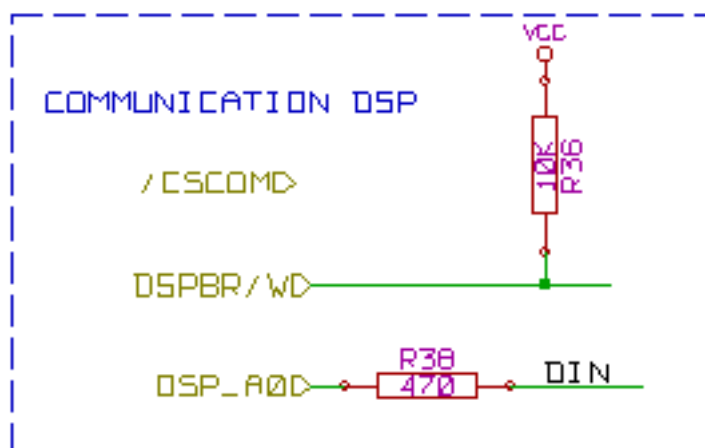


2.10.1. Text and text boxes

Two kinds of text can be added to schematics, which are referred to as text (

) and text boxes (



). Both are added using their respective buttons in the right toolbar. Text boxes are similar to regular text except that they have an optional border and they automatically reflow text within that border.

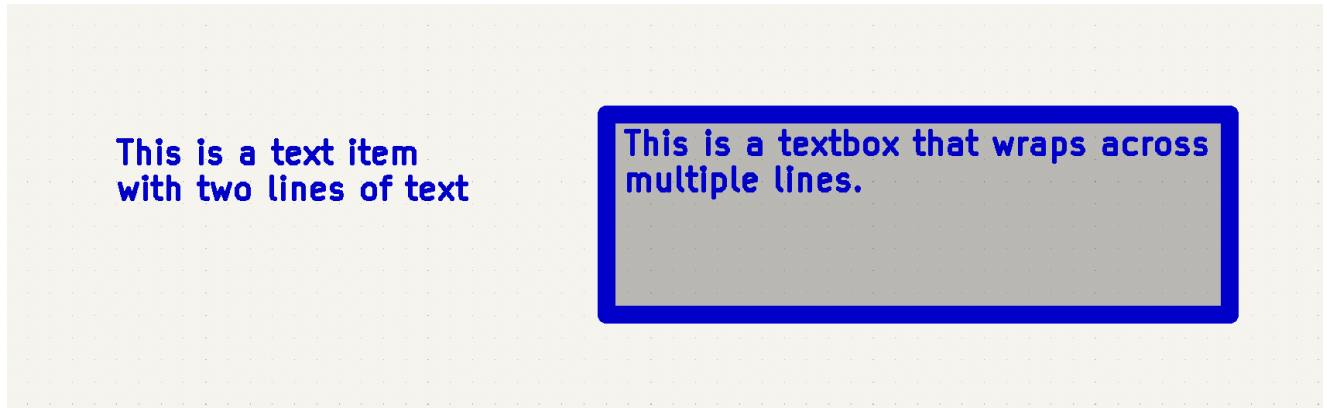

Both kinds of text item support multiline text and basic formatting features, but text boxes wrap text to fit in the outline and have additional formatting options. All text has adjustable fonts, color, size, bold and italic emphasis, left and right alignment, and vertical and horizontal orientation. Text boxes additionally support horizontal centering, vertical alignment options, and colored borders and fill. You can also adjust the padding on each side of text in a text box (padding can be set using the Properties Manager, but not using the Text Box Properties dialog).

Nota

The default text size can be set for a schematic in Schematic Setup, and the default font can be set in Preferences.

Text Box Properties

Text:

☐ Exclude from simulation [Syntax help](#)

Font: Default Font **B** / [Left Align] [Center Align] [Right Align] [Text Color] [Text Background Color]

Text size: 50 mils Color: [Color Swatch]

☒ Border Width: 0 mils Color: [Color Swatch] Style: Default

☐ Background fill Fill color: [Color Swatch]

☐ Link: [Link Target] [Dropdown Arrow]

Cancel OK

Links

Text and text boxes can be made into a link by entering a target in the **Link** box in the text properties.

You can link to different kinds of resources depending on the link target. The link target can be:

- a sheet in the current schematic, using # followed by the page number
- a local file on your machine, using a URL with the `file://` scheme
- a website, using a URL with the `http://` or `https://` scheme
- another resource, using a URL with the appropriate scheme, e.g. `ftp://`

If no protocol prefix is used, the target is assumed to be a local file as if the `file://` scheme was used.

Sheet, file, and web links can be autofilled using the dropdown menu in the link target box. Other kinds of links cannot be autofilled but will work if your system can handle them.

Fonts

Text and text boxes support custom fonts, which are selectable with the **Font** dropdown in the properties dialog for the text. In addition to the KiCad font, you can use any TTF font installed on your computer.

Nota

User fonts are not embedded in the project. If the project is opened on another computer that does not have the selected font installed, a different font will be substituted. For maximum compatibility, use the KiCad font.

Text markup

Text supports markup for superscripts, subscripts, overbars, evaluating project variables, and accessing symbol field values.

Feature	Markup Syntax	Result
Superscript	<code>text^{superscript}</code>	<code>text</code> ^{superscript}
Subscript	<code>text_{subscript}</code>	<code>text</code> _{subscript}
Overbar	<code>~{text}</code>	<code>text</code> [~]
Variables	<code>\${variable}</code>	<i>variable_value</i>
Symbol Fields	<code>\${refdes:field}</code>	<i>field_value</i> of symbol <i>refdes</i>

Nota

Variables must be defined in Schematic Setup before they can be used. There are also a number of built-in system text variables.

Simulation directives

Text and textboxes can contain simulation directives for SPICE simulations. The **Exclude from simulation** checkbox prevents text from being interpreted as a simulation directive.

2.10.2. Tables

You can use a table to organize text in a tabular format. Tables have customizable borders, cell sizes, colors, and headers.

Heading 1	Heading 2
Column 1 Row 1	Column 2 Row 1
Column 1 Row 2	Column 2 Row 2

To place a table, use the




button in the right toolbar. Click in the canvas to place the top left corner of the table, then click again to place the bottom right corner of the table and finish drawing the table. The bigger you draw the

table, the more rows and columns will be added by default, but rows and columns can be added or deleted after the table is created.

Editing table properties

When you finish drawing a table, the Table Properties dialog appears. You can also open the Table Properties dialog in several other ways:

- Select any cell in the table, right click, and select **Edit Table** (kbd:[Ctrl] + kbd:[E])
- Select the entire table, right click, and select **Properties...** (kbd:[E]). You can select the entire table with a drag selection or by selecting a single cell, then right clicking and selecting **Select Table**.
- Click the **Edit Table...** button in the Table Cell Properties dialog.

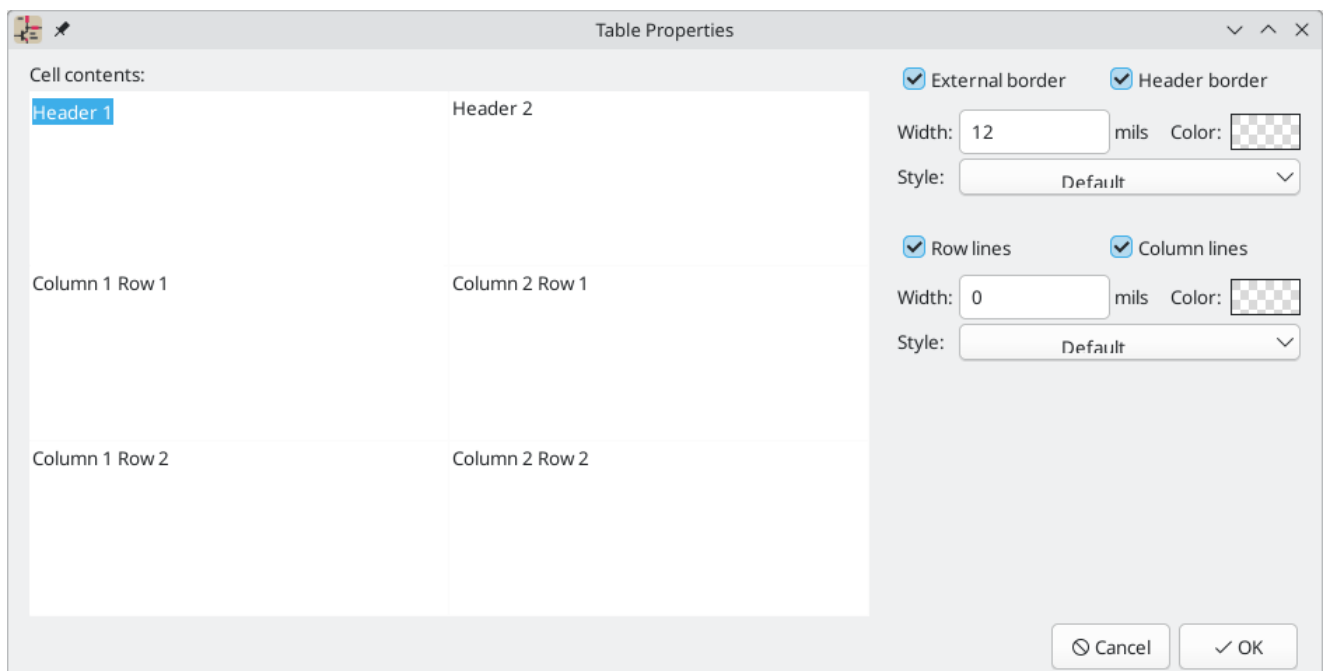

This dialog lets you edit the properties of the entire table, including the text in each cell and the separators between cells. To change the formatting of text in a cell, edit the properties of individual cells, instead of the properties for the entire table.

Nota

The properties for a table can also be edited in the Properties Manager when the entire table is selected.

The left side of the dialog displays an editable grid of the entire table. You can edit the contents of any cell by clicking on the cell in the grid. You can also edit the text in a cell by selecting the cell and using the Properties Manager.

Nota

Text in table cells supports the markup described in the text markup section (superscripts, subscripts, strikethroughs, etc.).

The right side of the dialog contains formatting options for the table.

- The **Locked** checkbox controls whether or not the table is locked. Locked objects may not be manipulated or moved, and cannot be selected unless the **Locked Items** option is enabled in the Selection Filter panel.
- The **External border** and **Header border** checkboxes control whether there is a border drawn around the entire table and the cells in the top row, respectively. When **Header border** is enabled, the border below the cells in the top row is styled using these external border settings rather than the row/column line settings. The line width of the header borders is controlled by the **Width** field. When set to 0, the line width uses the default symbol line width configured in the **Formatting** panel of Schematic Setup. The line color is controlled by the **Color** picker, and the line style can be set to solid, dashed, dotted, dash-dot, or dash-dot-dot using the **Style** dropdown menu.
- The **Row Lines** and **Column lines** checkboxes enable horizontal lines between rows and vertical lines between columns, respectively. These have the same formatting options as the external and header borders.

Editing table cell properties


Instead of editing the properties of an entire table, you can also edit the properties of individual cells. This modifies selected cells, but does not affect other cells. To open the Table Cell Properties dialog, double click on a cell, or select a cell, right click, and choose **Properties...** (kbd:[E]). If you select multiple cells, the properties dialog will act on all of them at once.

Nota

You can select multiple cells by clicking and dragging.

Nota

To select all cells in a row or column, select a cell in that row or column, right click, and choose **Select Row(s)** or **Select Column(s)**. You can select multiple rows or columns in this way by starting with multiple cells selected.

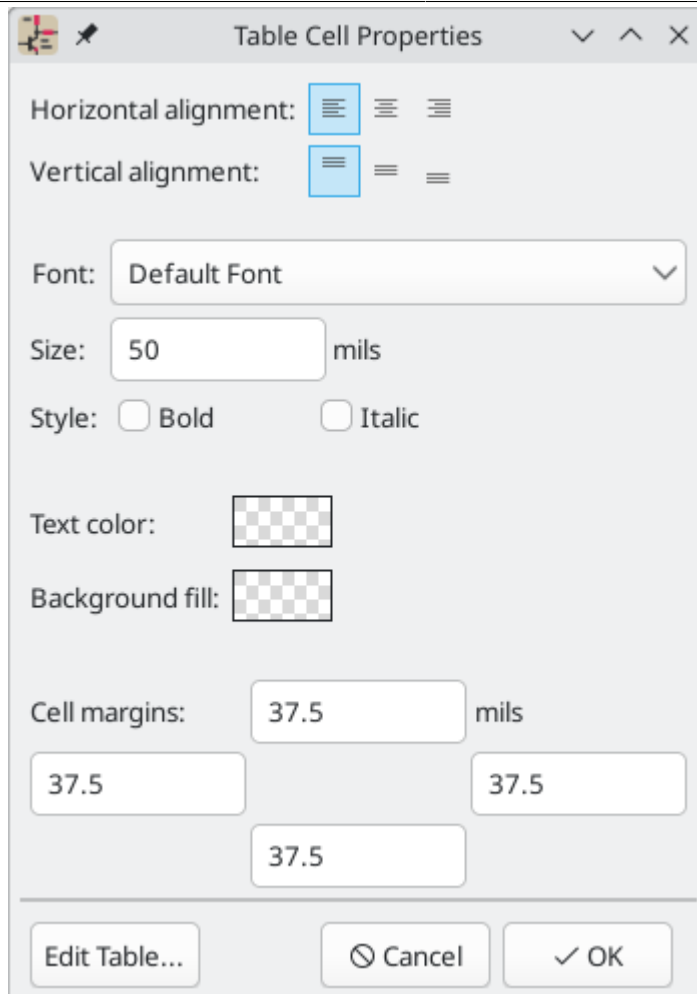

This dialog contains formatting options for the text in each cell.

- **Horizontal alignment** and **Vertical alignment** control how text is positioned within the cell.
- **Font** controls the text font used in the cell.
- **Text size** controls the size of the text in the cell.
- The **Bold** and **Italic** checkboxes bold and italicize the text, respectively. These are three-state checkboxes, which can be set to off, on, or no change. No change is useful when multiple cells with different bold/italic settings are being edited at the same time.
- The **Text color** and **Background fill** color pickers control the color of the text and the cell background, respectively.
- The **Cell margins** textboxes control the amount of spacing around the top, bottom, left, and right of the text in the cell.

You can click the **Edit Table...** button to open the properties dialog for the entire table.

Nota

The properties for a table cell can also be edited in the Properties Manager when one or more table cells is selected.

Editing table layout

The layout of a table (size and number of columns and rows) is initially set when you create a table, but you can also edit the layout after creation.

To resize a row or column, select a cell in that row or column, then drag the handle on the right (to change the column width) or the bottom (to change the row height) to the desired size.

To add rows or columns, select a cell next to where the new row or column should go, right click, then choose **Add Row Above**, **Add Row Below**, **Add Column Before**, or **Add Column After**, as desired.

To delete rows or columns, select a cell in the row or column you want to delete, then right click and choose **Delete Row(s)** or **Delete Column(s)**. To delete multiple rows or columns, start with a selection that spans all the rows or columns you want to delete.

You can merge multiple cells into a single cell by selecting all the cells you want to merge, right clicking, and choosing **Merge Cells**. To unmerge them, select the merged cell, right click, and choose **Unmerge Cells**.

2.10.3. Graphic Shapes

Graphic rectangles (



), circles (




), arcs (




), and lines (



) can all be added using their respective buttons in the right toolbar.

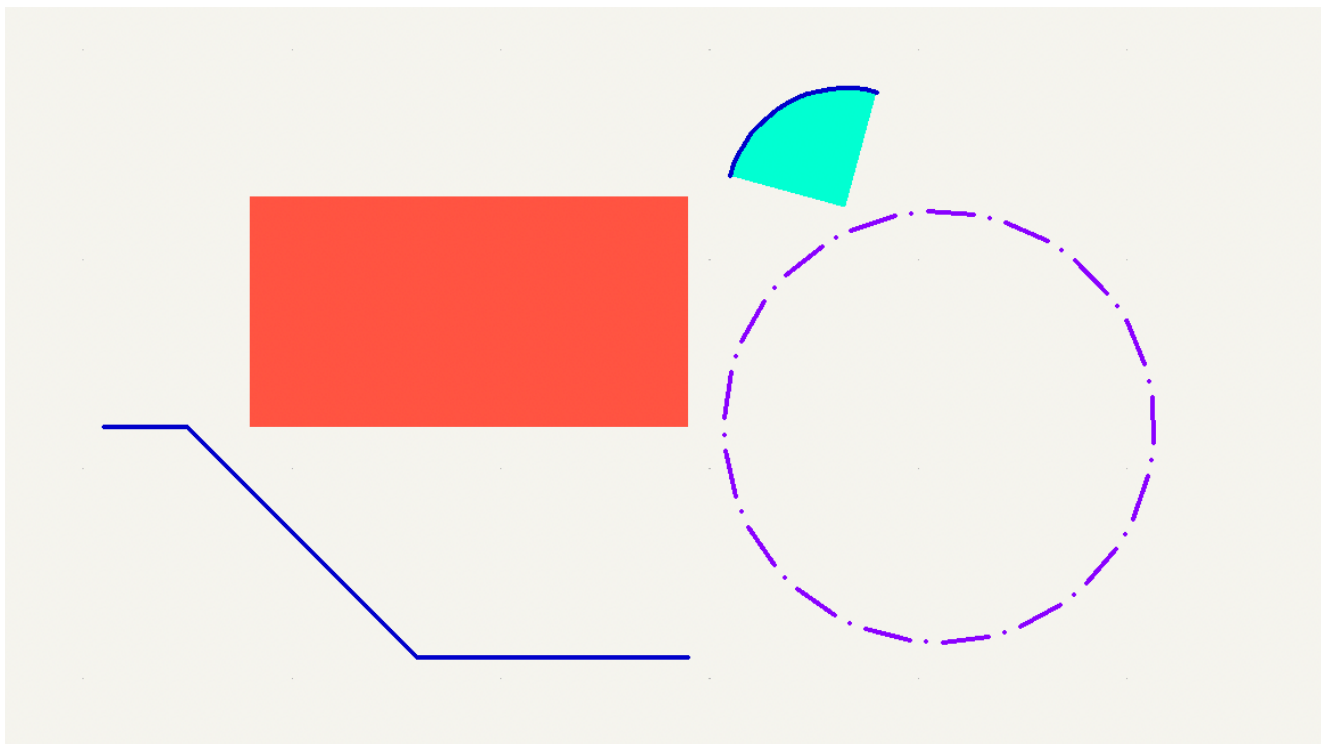

Line width, color, and style (solid, dashed, or dotted) can be configured in the properties dialog for each shape (kbd:[E]). Rectangles, circles, and arcs can also have a fill color set and have their outlines removed.

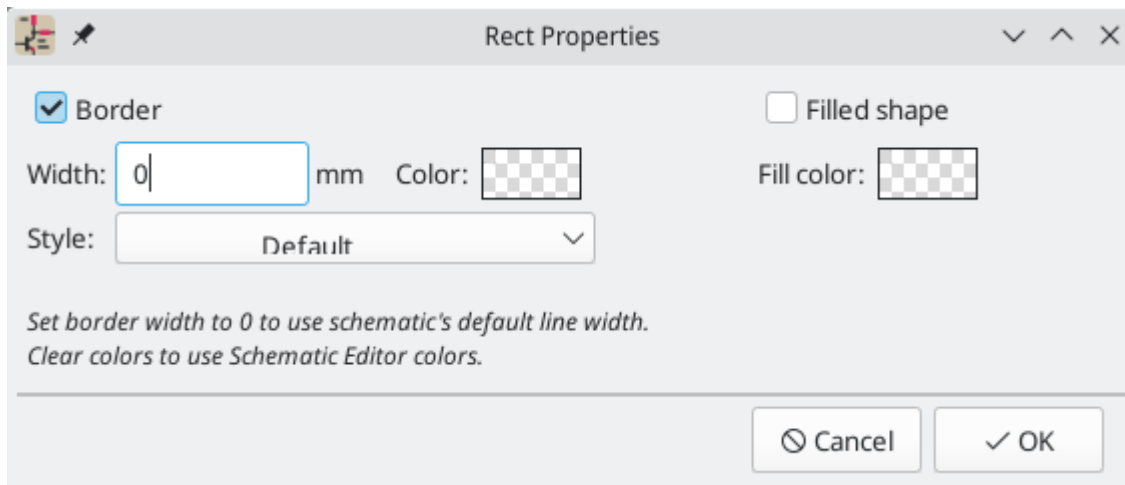

Setting a shape's line width to 0 uses the schematic default line width, which is configurable in Schematic Setup. Spacing for line dashes is also configurable there. Removing a line or fill color uses the color theme's graphics color, which is configurable in Preferences.

Like wires, graphic lines obey the line drawing mode setting (90 degree, 45 degree, or free angle), which you can set using the toggle buttons on the left toolbar (



, respectively). kbd:[Shift+Space] cycles through the modes.

As with PCB tracks, the kbd:[/] hotkey switches line posture.

2.10.4. Bitmap Images


KiCad supports inserting images into the schematic. These are purely for reference during the design process and play no electrical role.

To add a reference image, use the



button on the right toolbar and select the desired reference image file. Click in the canvas to place the image.

Once the image has been added to the canvas, you can reposition it using the move tool (kbd:[M]) or by dragging it in the canvas. You can scale it by dragging the editing handles at the corners of the image. The image is scaled around its reference point; in other words, the reference point is the point in the image that always stays in the same position in the canvas, no matter how the image is scaled. The reference point is shown as a fifth editing handle. Initially it is at the center of the image, but you can reposition the reference point by dragging it in the canvas.

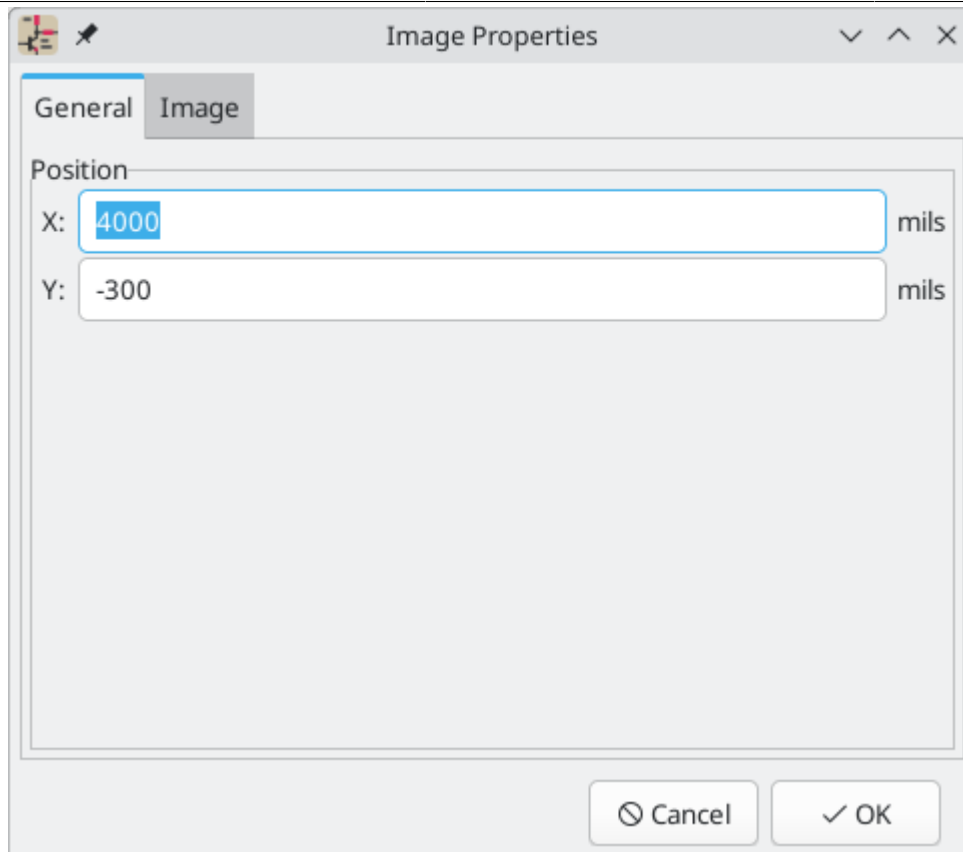

You can also reposition or scale the image in its properties dialog (kbd:[E]). You can set the image's exact **Position X** and **Y** in the **General** tab, and set an exact **Scale** factor in the **Image** tab. You can also **Convert to Greyscale** if you wish. Position and scale in this dialog are relative to the center of the image, not its interactive reference point.

2.10.5. Bulk editing text and graphics

Properties of text and graphics, including symbol fields, can be edited in bulk using the **Edit Text and Graphic Properties** dialog (**Edit** → **Edit Text and Graphic Properties...**). The tool can also modify visual properties of wires and buses.

Creazione e modifica di schemi elettrici

Edit Text and Graphic Properties

Scope

- ☐ Reference designators
- ☐ Values
- ☐ Other symbol fields
- ☐ Wires & wire labels
- ☐ Buses & bus labels
- ☐ Global labels
- ☐ Hierarchical labels
- ☐ Label fields
- ☐ Sheet titles
- ☐ Other sheet fields
- ☐ Sheet pins
- ☐ Sheet borders & backgrounds
- ☐ Schematic text & graphics

Filters

- ☐ Filter fields by name:
- ☐ Filter items by parent reference designator:
- ☐ Filter items by parent symbol library id:
- ☐ Filter items by parent symbol type:
- ☐ Filter items by net:
- ☐ Selected items only

Set To

Font: ☐ Text color:

Text size: mils ☒ Bold ☒ Italic

Orientation: (labels only)

H Align: (fields only) ☒ Visible (fields only)

V Align: (fields only) ☒ Show field name (fields only)

Line width: mils ☐ Line color:

Line style: ☐ Fill color:

Junction size: mils ☐ Junction color:

Scope and Filters

Scope settings restrict the tool to editing only certain types of objects. If no scopes are selected, nothing will be edited.

Filters restrict the tool to editing particular objects in the selected scope. Objects will only be modified if they match all enabled and relevant filters (some filters do not apply to certain types of objects. For example, symbol field filters do not apply to wires and are ignored for the purpose of changing wire properties). If no filters are enabled, all objects in the selected scope will be modified.

For filters with a text box, wildcards are supported: * matches any number of any characters, including none, and ? matches any single character.

Filter fields by name filters to the specified symbol, label, or sheet field.

Filter items by parent reference designator filters to fields in the symbol with the specified reference designator. **Filter items by parent symbol library id** filters to fields in symbols with the specified library identifier. **Filter items by parent symbol type** filters to fields in symbols of the selected type (power or non-power).

Filter items by net filters to wires and labels on the specified net.

Only include selected items filters to the current selection.

Editable Properties

Properties for filtered objects can be set to new values in the bottom part of the dialog.

Drop-down lists and text boxes can be set to -- leave unchanged -- to preserve existing values. Checkboxes can be checked or unchecked to enable or disable a change, but can also be toggled to a third "leave unchanged" state. Color properties must be checked to change the value; a checkerboard swatch indicates that the color will be inherited from the default value from the schematic settings or net class properties.

Text properties that can be modified are **font**, **text size**, **text orientation** (right/up/leftdown), **horizontal** and **vertical alignment**, **text color**, emphasis (**bold** and **italic**), and **visibility** of fields and field names.

Graphic and wire properties that can be modified are **line width**, **line style** (solid, dashed, and dotted lines), **line color**, **fill color** for shapes, and **junction size** and **junction color** for wire junctions.

2.10.6. Blocco del titolo del foglio

The drawing sheet's title block is edited with the Page Settings tool (



). You can also open this tool by double clicking anywhere on any part of the drawing sheet.

Creazione e modifica di schemi elettrici

Each field in the title block can be edited, as well as the paper size and orientation. If the **Export to other sheets** option is checked for a field, that field will be updated in the title block of all sheets, rather than only the current sheet.

You can set the date to today's or any other date by pressing the left arrow button next to **Issue Date**. Note that the date listed in the schematic title block is not automatically updated. It is only updated when changed in this dialog.

A drawing sheet file can also be selected to replace the default drawing sheet. When choosing a drawing sheet, you can enable the **Embed File** checkbox in the file browser to embed the drawing sheet in the schematic instead of referencing an external file. This means the schematic will appear the same when it is opened on another computer that does not have the drawing sheet file available at the same external file path. For more information, see the embedded files documentation.

The sheet number (Sheet X/Y) is automatically updated, but sheet page numbers can also be manually set using **Edit** → **Edit Sheet Page Number....**

2.11. Schematic editing convenience functions


There are several convenience features in the Schematic Editor that make some common editing and connection operations faster.

2.11.1. Pin helpers

You can quickly add wires, labels, or no-connection markers to a selection of pins using the **Pin Helpers** tools in the right-click context menu. This can help you quickly break out unconnected pins from a symbol or hierarchical sheet. By selecting **Pin Helpers** → **Wire**, the wire tool will begin drawing a wire from all selected pins at once. If you select **No Connect**, no-connection markers will be added to the end of each selected pin. And if you choose **Net Label**, **Hierarchical Label**, or **Global Label**, a label of the respective type will be placed at the end of each selected pin. Each label's name will be set to the corresponding pin name. The new labels will remain selected, so you can easily move them away from the symbol using `kbd:[M]` or `kbd:[G]`, depending on whether you wish to maintain a wired connection between the pins and the labels.

Nota

Pin helpers require you to select individual pins, not their parent symbol or sheet. Symbol pins cannot be individually selected if the **clicking on a pin selects the symbol** option is enabled in the Editing Options pane of the Schematic Editor preferences. Therefore, this option must be disabled to use the Pin Helper tools.

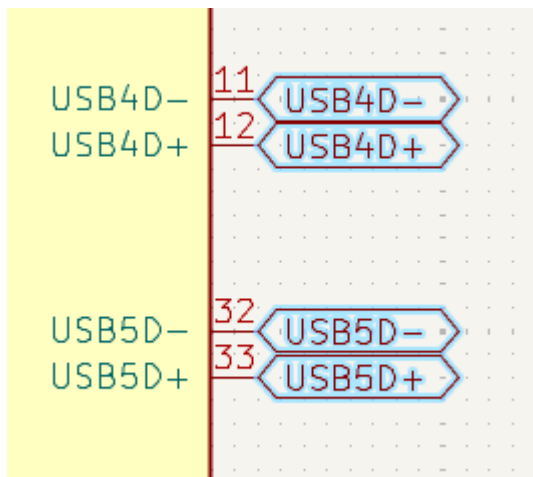

2.11.2. Converting between object types

Existing labels and text objects can be changed to another type of label or text by right clicking the object(s) and selecting the target object type from the **Change To** submenu. The allowed types for source and target objects are local labels, global labels, hierarchical labels, directive labels, text objects, and text boxes. The value of the original object is preserved in the resulting object: when a text object is converted to a label, the label's value (net name) will be the original text, and vice versa.

2.11.3. Swapping objects

You can swap the position of two selected objects using the Swap command (kbd:[Alt+S]; also available in the right-click context menu). This works on many schematic items, including symbols, symbol fields, labels, graphical items, and text. The first object is assigned the location and rotation of the second object, and vice versa. If there are more than two objects selected, the locations are cycled: the last object gets the position of the first object, the first object gets the location of the second, and so on.

Suggerimento

One possible use of the swap command is to exchange two units within a symbol, for example the two amplifiers in a dual op-amp. You could also use swap with a selection of labels to quickly modify net assignments to symbol pins. In combination with cross-selection from the PCB, this can be a convenient way to make schematic changes for easier routing. This is sometimes known as pin or gate swapping.

2.12. Schematic Setup

The Schematic Setup window is used to set schematic options that are specific to the currently active schematic. For example, the Schematic Setup window contains formatting options, electrical rule configuration, net class setup, and schematic text variable setup.

2.12.1. Schematic formatting

The screenshot shows the 'Schematic Setup' dialog box with the 'Formatting' tab selected. The left sidebar lists categories: General, Formatting (selected), Field Name Templates, BOM Presets, Electrical Rules, Violation Severity, Pin Conflicts Map, Project, Net Classes, Bus Alias Definitions, and Text Variables. The main area is divided into several sections:

- Annotations:** Symbol unit notation: A (dropdown).
- Text:** Default text size: 50 (input) mils; Overbar offset ratio: 123 (input) %; Label offset ratio: 30 (input) %; Global label margin ratio: 30 (input) %.
- Symbols:** Default line width: 6 (input) mils; Pin symbol size: 25 (input) mils.
- Connections:** Junction dot size: Default (dropdown); Connection grid: 50 (input) mils.
- Inter-sheet References:** ☐ Show inter-sheet references; ☐ Show own page reference; ☒ Standard (1,2,3); ☐ Abbreviated (1..3); Prefix: (input); Suffix: (input).
- Dashed Lines:** Dash length: 12 (input); Gap length: 3 (input). Note: Dash and dot lengths are ratios of the line width.
- Operating-point Overlay:** Significant digits (voltages): 3 (input) with minus/plus buttons; Range (voltages): Auto (dropdown); Significant digits (currents): 3 (input) with minus/plus buttons; Range (currents): Auto (dropdown).

At the bottom, there are buttons for 'Reset to Defaults', 'Import Settings from Another Project...', 'Cancel', and 'OK'.

The formatting panel contains settings for the appearance of symbols, text, labels, graphics, and wires.

Symbol unit notation sets how each unit of a multi-unit symbol is referred to in its reference designator. By default, a different letter for each unit is appended to the reference designator with no separator, for example U1B for the second unit of symbol U1, but this can be changed. Numbers can be used instead of letters, and various separators can be used between the symbol designator and the unit identifier (., -, _, or none).

Default text size sets the default text height used by the text, text box, and label tools. **Overbar offset ratio** controls the vertical spacing between text and an overbar (~{}) over that text, as a ratio of the text height. **Label offset ratio** controls the vertical spacing between a local label's text and the attached wire, relative to the label's text size. This also affects the spacing between symbol pins and their pin number. **Global label margin ratio** defines the size of the box around a global label, relative to the global label's text size. Increasing the margin may be useful to avoid overlapping text with overbars (~{}) or letters with descenders, but this may cause closely packed global labels to overlap with each other.

Default line width sets the default line width for symbol graphics, if the symbol does not override the default line width. **Pin symbol size** scales symbol pin graphic style annotations, such as the bubble on an inverted pin.

Junction dot size sets the schematic's default wire junction dot size. The default size can be overridden by editing an individual junction dot's properties. **Connection width** specifies the grid size used for the **Symbol pin or wire end off connection grid** ERC check. Schematics typically use a 50 mil grid for electrical connections, so this should usually remain set at 50 mils.


The Operating Point Overlay settings configure how operating point simulation annotations are displayed on the schematic canvas. The **significant digits** settings control the number of significant digits printed on voltage and current overlays. The **range** settings control the units used to display voltage and current measurements.

Show inter-sheet references enables or disables the display of inter-sheet references, which are a list of page numbers next to a global labels that link to other places in the schematic where the same global label appears. **Show own page reference** controls whether the current page is included in the list of page numbers. **Standard** and **abbreviated** determine whether to display the complete list of page numbers or only the first and last page numbers. The **prefix** and **suffix** fields add optional characters before and after the list of page numbers. In the image of an inter-sheet reference below, a prefix and suffix of [and], respectively, have been added.



Dashed line appearance is controlled in the Formatting section. **Dash length** controls the length of dashes, while **Gap length** controls the spacing between dashes and dots. The dash and gap lengths are relative to the line width: a gap length of 2 means twice the width of the line.

2.12.2. Field name templates

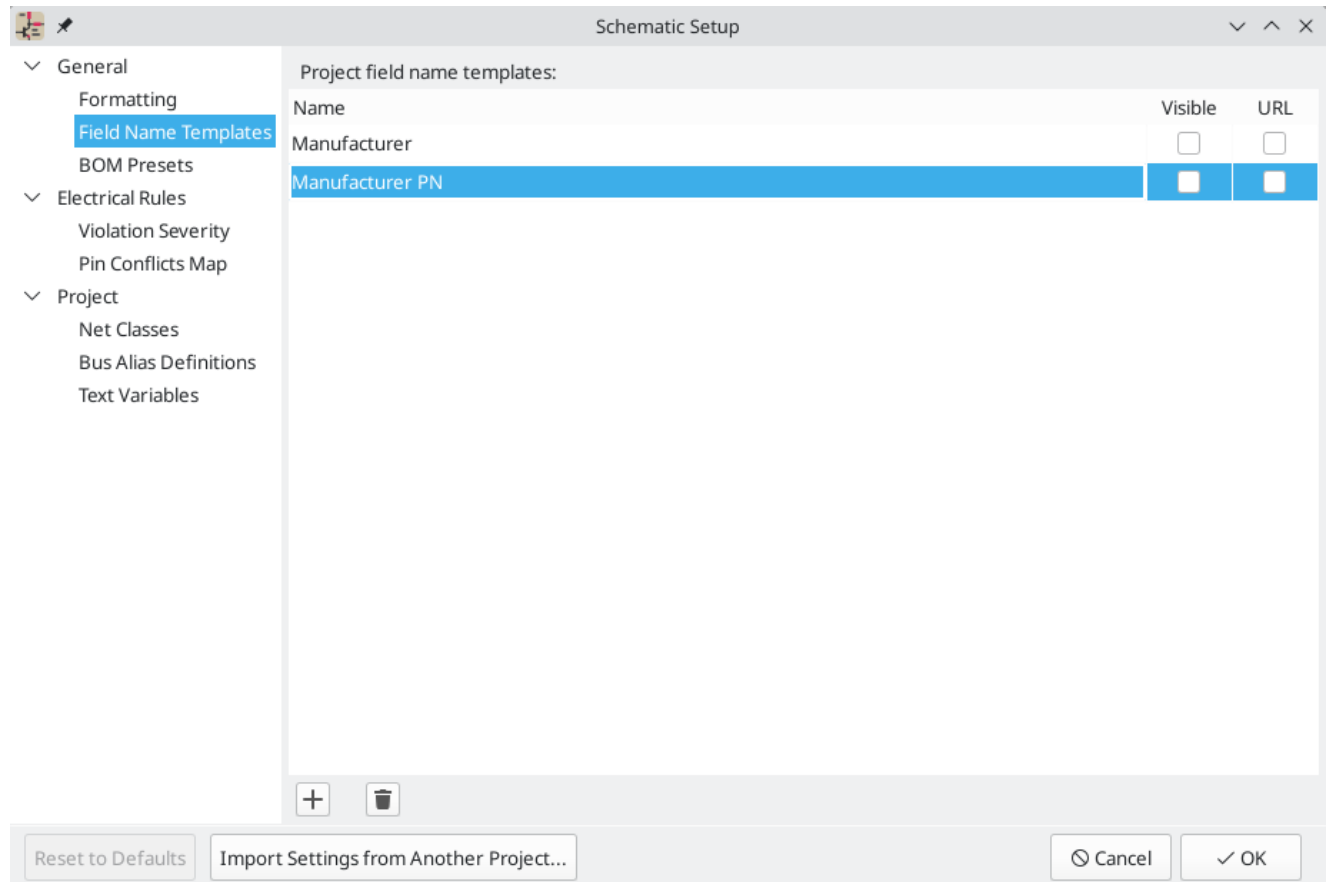


Field name templates are empty symbol fields that are automatically added to all symbols in the schematic. These can be useful when every symbol in the schematic needs additional fields beyond the fields that are defined in the library symbols, for example a field for the manufacturer's part number.

Template fields can be set as visible or invisible, and can also be set as URL fields.

Field name templates that are defined in schematic setup apply only to the current project. Field name templates can also be defined in Preferences, which apply to all projects edited on your computer.

2.12.3. BOM presets

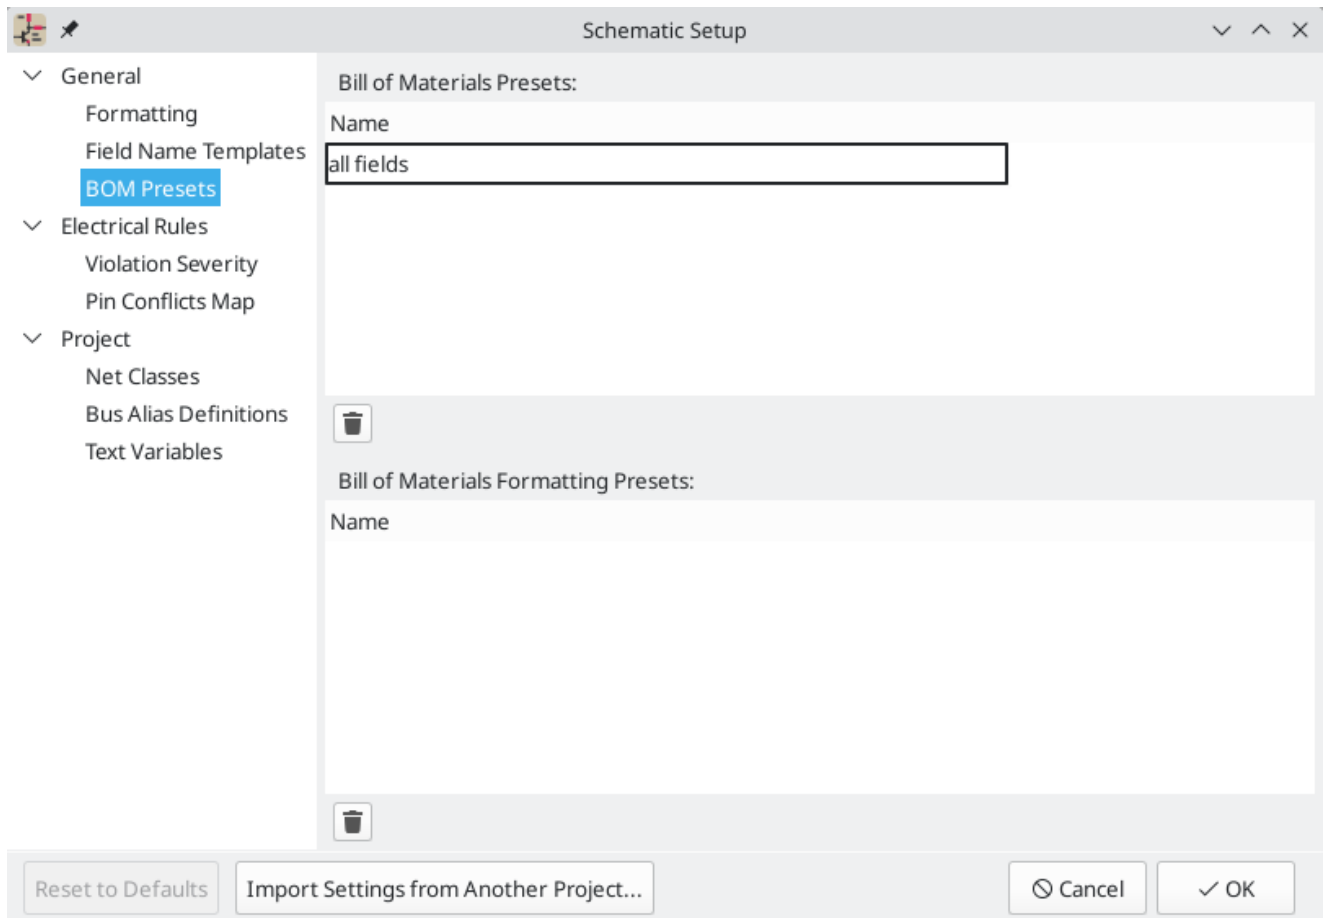

BOM presets are saved configurations for the Symbol Fields Table and BOM export tool. There are two types of presets. **BOM presets** configure which fields are displayed in the symbol fields table, which order they are displayed in, and how they are used to group symbols. These fields are also directly used in the BOM output. **BOM formatting presets** configure the output BOM file format, including which separator characters are used to separate fields. Both types of presets are created in the Symbol Fields Table, but can be listed and can be deleted here.

2.12.4. ERC violation severity and pin conflicts map

The **Violation Severity** panel lets you configure what types of ERC messages should be reported as Errors, Warnings, or ignored.


Creazione e modifica di schemi elettrici

The screenshot shows the 'Schematic Setup' dialog box with the 'Violations Severity' tab selected. The left sidebar lists categories: General, Electrical Rules, and Project. Under 'Electrical Rules', 'Violation Severity' is highlighted. The main area is divided into 'Connections' and 'Conflicts' sections, each with a list of rules and their severity settings (Error, Warning, Ignore).

Category	Rule	Error	Warning	Ignore
Connections	Pin not connected:	☒	☐	☐
	Input pin not driven by any Output pins:	☒	☐	☐
	Input Power pin not driven by any Output Power pins:	☒	☐	☐
	A pin with a "no connection" flag is connected:	☐	☒	☐
	Unconnected "no connection" flag:	☐	☒	☐
	Label not connected to anything:	☒	☐	☐
	Global label not connected anywhere else in the schematic:	☐	☒	☐
	Wires not connected to anything:	☒	☐	☐
	Bus Entry needed:	☒	☐	☐
	Symbol pin or wire end off connection grid:	☐	☒	☐
Conflicts	Duplicate reference designators:	☒	☐	☐
	Units of same symbol have different values:	☒	☐	☐
	Different footprint assigned in another unit of the symbol:	☒	☐	☐
	Different net assigned to a shared pin in another unit of the symbol:	☒	☐	☐
	Duplicate sheet names within a given sheet:	☒	☐	☐
	Mismatch between hierarchical labels and sheet pins:	☒	☐	☐
	More than one name given to this bus or net:	☐	☐	☒


Buttons at the bottom: Reset to Defaults, Import Settings from Another Project..., Cancel, OK.

The **Pin Conflicts Map** allows you to configure connectivity rules to define electrical conditions for errors and warnings based on what types of pins are connected to each other. For example, by default an error is produced when an output pin is connected to another output pin.

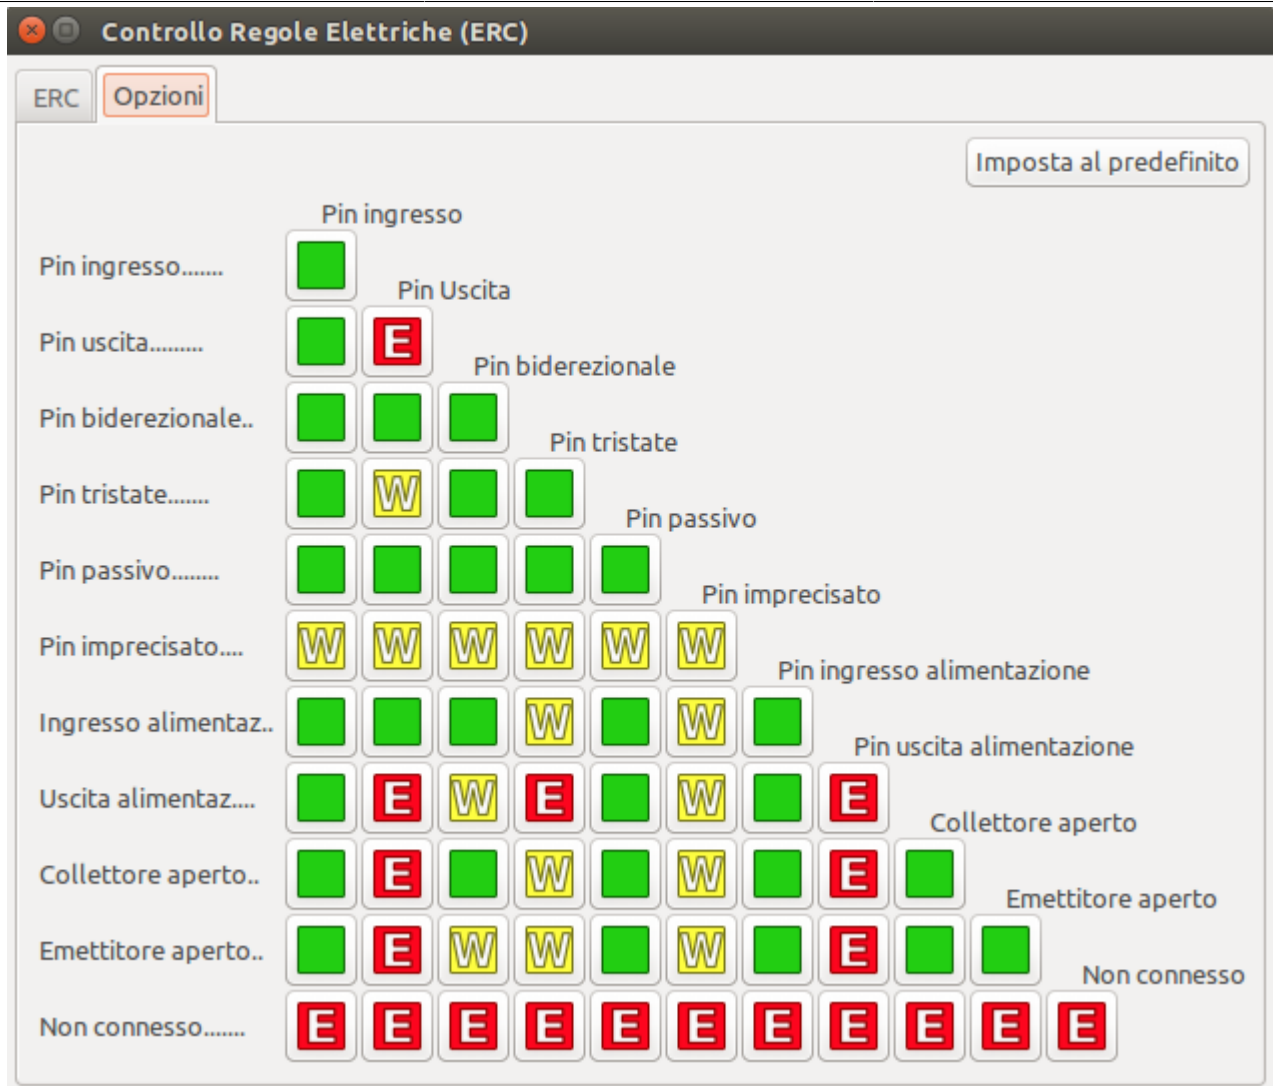

These panels are explained in more detail in the ERC section.


2.12.5. Net classes

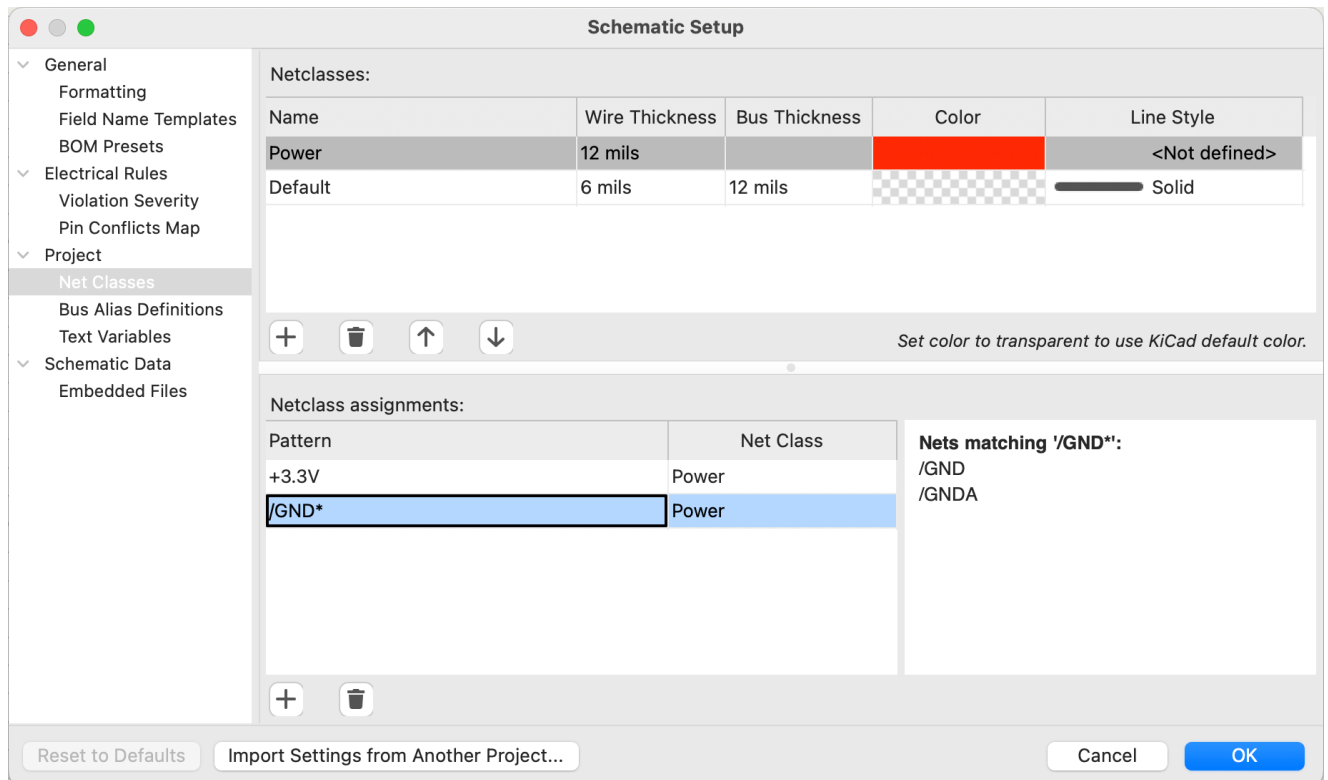

The **Net Classes** panel allows you to manage net classes for the project and assign nets to net classes with patterns. Managing net classes in this panel is equivalent to managing them in the Board Setup dialog. Nets can also be assigned to net classes in the schematic using graphical assignments with net class directives or net labels.


Pattern-based net class assignment is explained in more detail in the net classes section.

2.12.6. Bus alias definitions

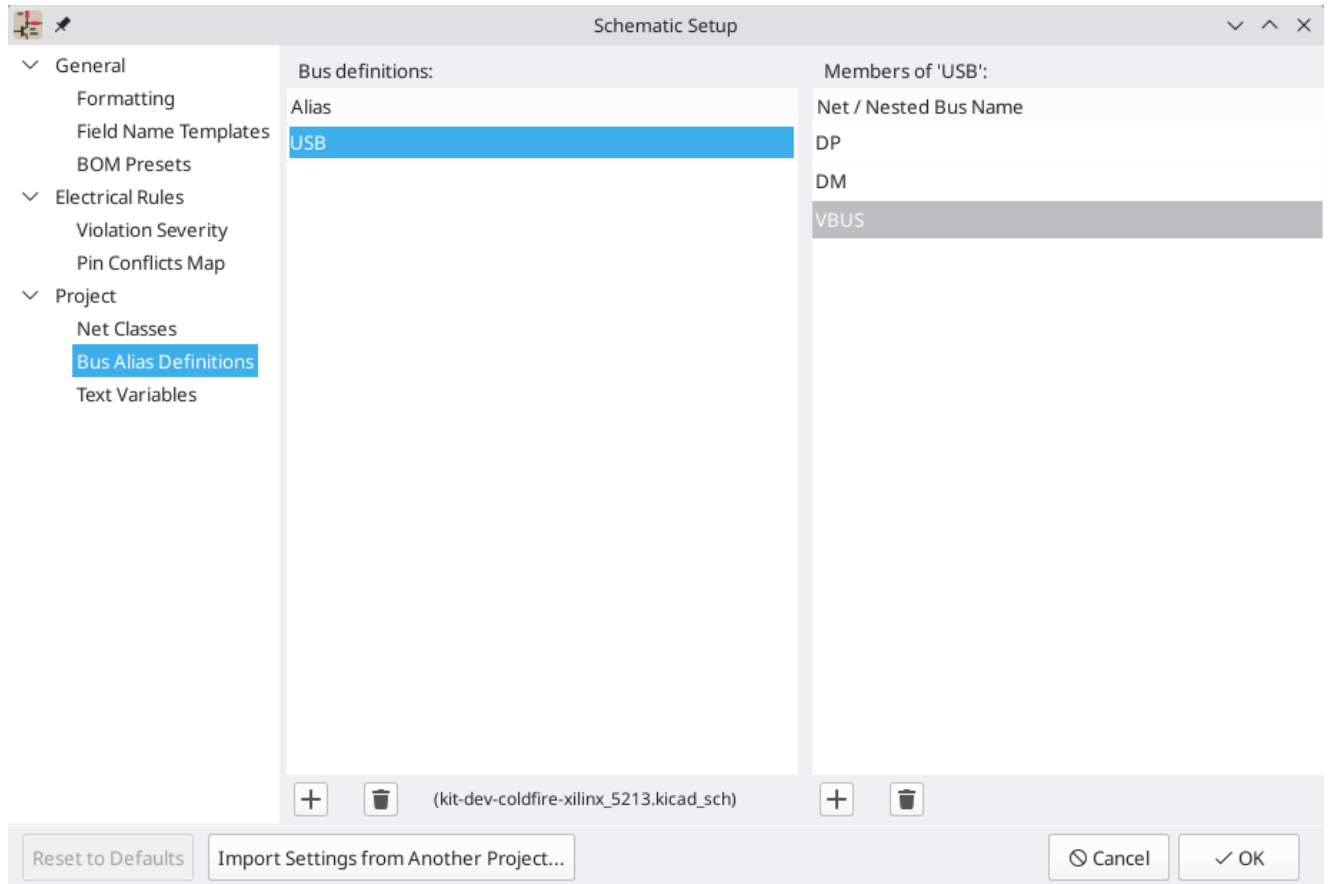

The **Bus Alias Definitions** panel allows you to create bus aliases, which are names for groups of signals in a bus. For more information about bus aliases, see the bus alias documentation.

2.12.7. Variabili di testo

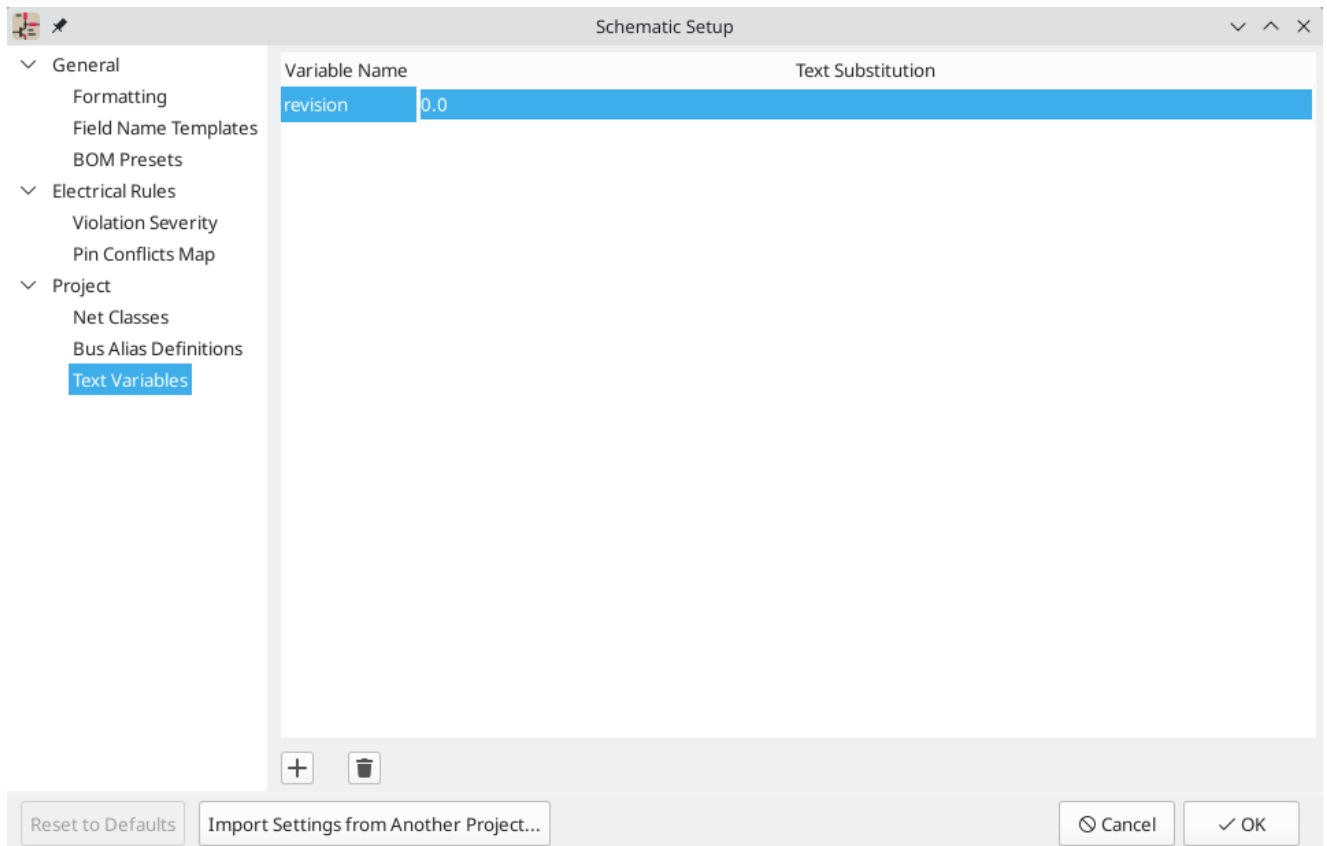

Text replacement variables can be created in the Text Variables section. These variables allow you to substitute the variable name for any text string. This substitution happens anywhere the variable name is used inside the variable replacement syntax of `${VARIABLENAME}`.

For example, you could create a variable named `VERSION` and set the text substitution to `1.0`. Now, in any text object on the PCB, you can enter `${VERSION}` and KiCad will substitute `1.0`. If you change the substitution to `2.0`, every text object that includes `${VERSION}` will be updated automatically. You can also mix regular text and variables. For example, you can create a text object with the text `Version: ${VERSION}` which will be substituted as `Version: 1.0`.


Text variables can also be created in Board Setup. Text variables are project-wide; variables created in the schematic editor are also available in the board editor, and vice versa.

There are also a number of built-in system text variables.

2.12.8. Embedding files

External files can be embedded within a schematic. Embedding a file stores a copy of the file inside the schematic file. The design can then refer to the embedded copy of the file instead of the external file, which makes the project more portable as it doesn't rely on an external file. Fonts, datasheets, drawing sheets, SPICE models, and footprint 3D models can be embedded and used within KiCad. Other arbitrary files can also be embedded to store them in the project for later export, but they are not used by any KiCad functionality. Files embedded in a schematic necessarily increase the schematic's file size, although files are compressed before being embedded to minimize the space required.

Creazione e modifica di schemi elettrici

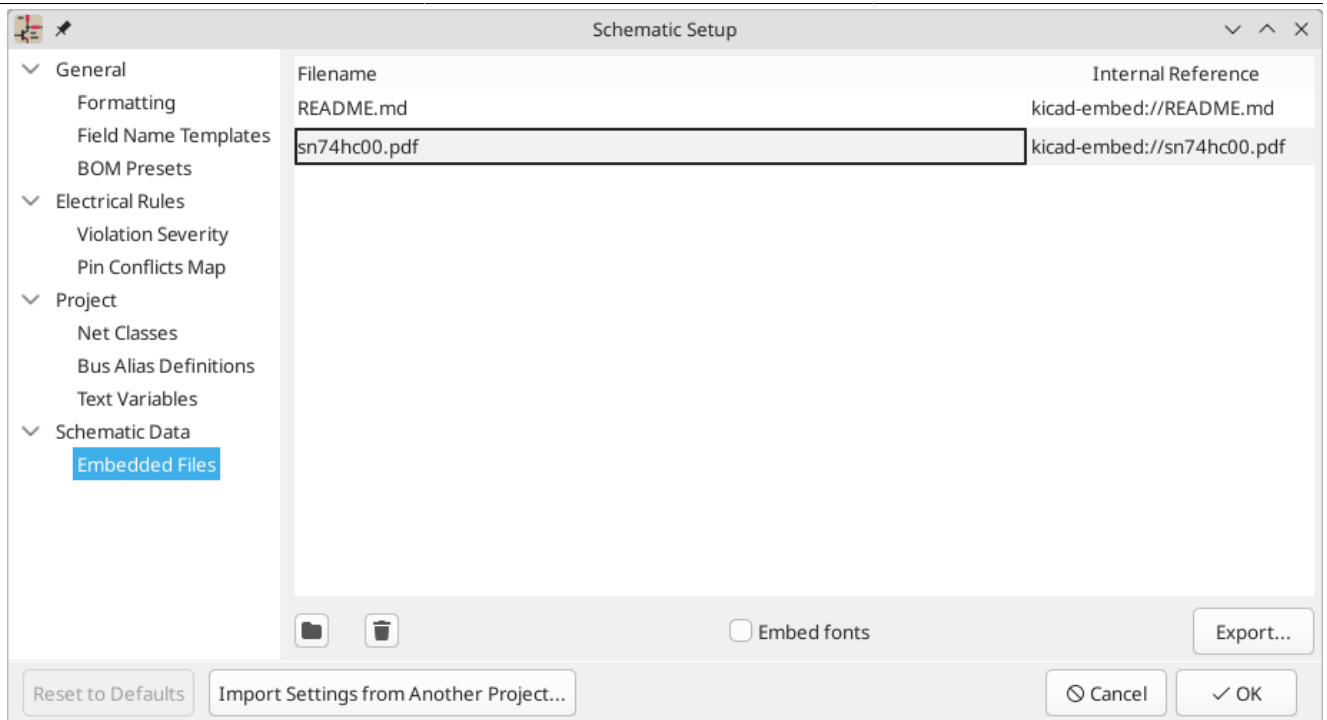

Embedded files are managed in the Embedded Files section of Schematic Setup. All files embedded in a schematic are shown here. To embed a file inside a schematic, click the

 button and select the file. The file is then embedded inside the schematic and is listed in the embedded files list along with its *embedded reference*. The embedded reference is a unique identifier for the embedded file that begins with `kicad-embed://`. You can use the embedded reference elsewhere in the Schematic Editor to refer to the embedded file as if it were an external file path. You can copy the embedded reference by right clicking and selecting **Copy Embedded Reference**. To remove an embedded file, click the

 button. Any remaining links to the removed file will become invalid.

Nota

Datasheets, SPICE models, and drawing sheets can be embedded directly using the file browser when you add them to a symbol (datasheets and SPICE models) or to a schematic (drawing sheets) by enabling the **Embed Files** option in the file browser. This is a single-step shortcut for adding the files in Schematic Setup and then referring to them by their embedded reference; the result is the same.

To embed any fonts used in a schematic, check the **Embed fonts** checkbox. All fonts used in the schematic will be embedded, so text using that font can be edited on any computer regardless of whether the font file is installed.

You can also embed files in a library symbol. Such files will be available within the symbol, but not within the larger schematic or in other symbols. Files embedded in a symbol are deduplicated when the symbol is added to a schematic: if a file is embedded in a symbol, and multiple instances of that symbol are added to the schematic, only one copy of the file will be embedded, and all of the symbol instances will refer to the same embedded file.


As an example, to embed a datasheet in a project and use it within several symbols, you could embed the datasheet using the schematic setup dialog, copy the internal reference, and paste the internal

reference into the datasheet field of each symbol that uses that datasheet. Each symbol would then have a portable reference to the embedded datasheet. Alternatively, you could embed the datasheet within the library symbol. In this case, each symbol will already have the datasheet embedded when the symbol is added to a schematic. A more convenient way to achieve the same thing, however, is to open the symbol's properties dialog, browse for a datasheet file, and enable the **Embed File** option in the file browser. Again, this could be done for a symbol in the schematic or for a symbol in the source symbol library.

Files can also be embedded in boards.

2.12.9. Importing settings

You can import some or all of the schematic setup from an existing schematic. This allows you to choose a schematic to use as a template and select which settings to import.

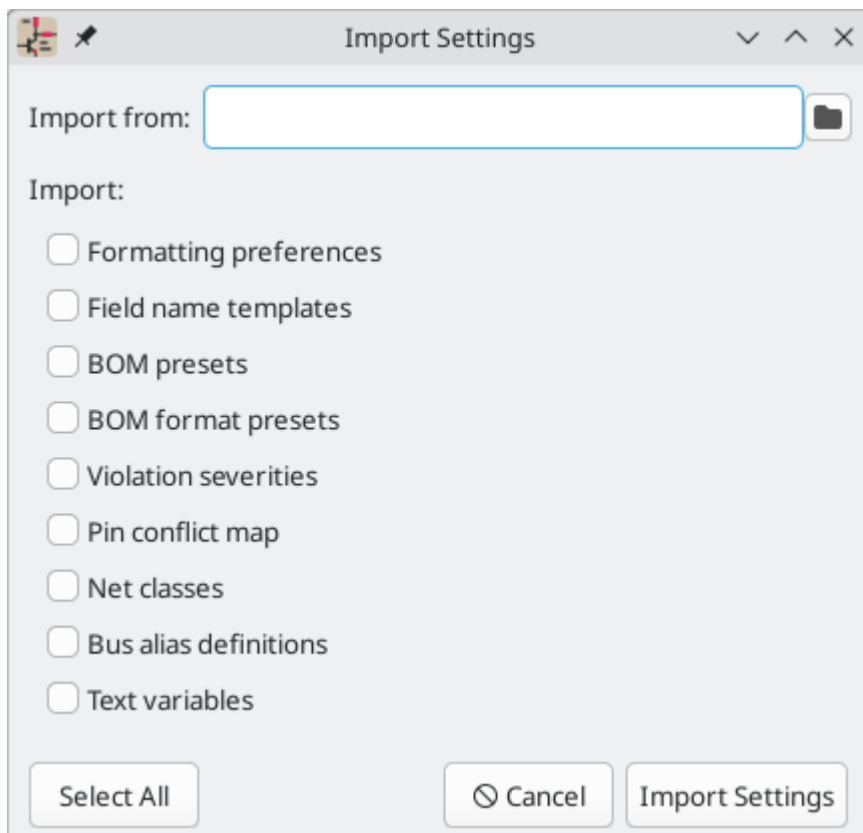

To import settings, click the **Import Settings from Another Project...** button at the bottom of the Schematic Setup dialog and then choose the `.kicad_sch` file you want to import from. Select which settings you want to import and the current settings will be overwritten with the values from the chosen schematic.

The settings that are available to import are:

- Formatting preferences
- Field name templates
- BOM presets
- BOM format presets

- Violation severities
- Pin conflict map
- Net classes
- Bus alias definitions
- Variabili di testo

2.13. Opening legacy schematics

Modern versions of KiCad can always open projects created in older versions of KiCad. However, schematics created in some older versions of KiCad have special considerations that must be observed when opening them in order to prevent any data loss.

2.13.1. Opening KiCad 5.0 and 5.1 schematics

Modern versions of KiCad can open schematics created in versions prior to KiCad 6.0, but the cache library file (`<projectname>-cache.lib`) must be present to load the schematic correctly.

Since version 6.0, KiCad stores all symbols used in a project in the schematic. This means that you can open a schematic made in KiCad 6.0 or later on any computer, even if the libraries used in the project are not installed or have changed. Modern KiCad schematic files use the `.kicad_sch` extension.

Prior to version 6.0, KiCad did not store symbols in the schematic. Instead, KiCad stored references to the symbols and their libraries. It also stored a copy of every symbol used by the project in a separate cache library file (`<projectname>-cache.lib`). As long as the cache library was included with the project, the project could be distributed without the system library files, because KiCad could load any needed symbols from the cache library as a fallback if the libraries referenced in the schematic were missing. Legacy KiCad schematic files use the `.sch` extension.


When you open a legacy schematic, KiCad will look in the cache library to find all of the symbols used in the schematic in the cache library. When you save the legacy schematic, KiCad will save it as a new file in the modern schematic format (`.kicad_sch`), with the necessary symbols embedded in the schematic itself. The original legacy schematic and the cache library will remain, unmodified, but they are no longer necessary once the schematic has been saved in the modern format.

Nota

Projects created in KiCad prior to version 6.0 must have a cache library. If the cache library is missing, the schematic will lose symbol information if the system symbol libraries are modified, reorganized, moved, or deleted. The libraries included with legacy versions of KiCad are substantially different than the modern KiCad libraries, so in practice KiCad will almost always fail to open legacy projects unless the cache library is present.

When you open a legacy schematic, KiCad may display the **Project Rescue Helper** dialog. This means that one or more symbols in the cache library do not match the corresponding symbol in the

external library. The dialog helps you "rescue" symbols from the cache library into your schematic, if desired. You can also open the rescue dialog at any time using **Tools** → **Rescue Symbols....** The cache library file must be present in order to use the rescue tool.

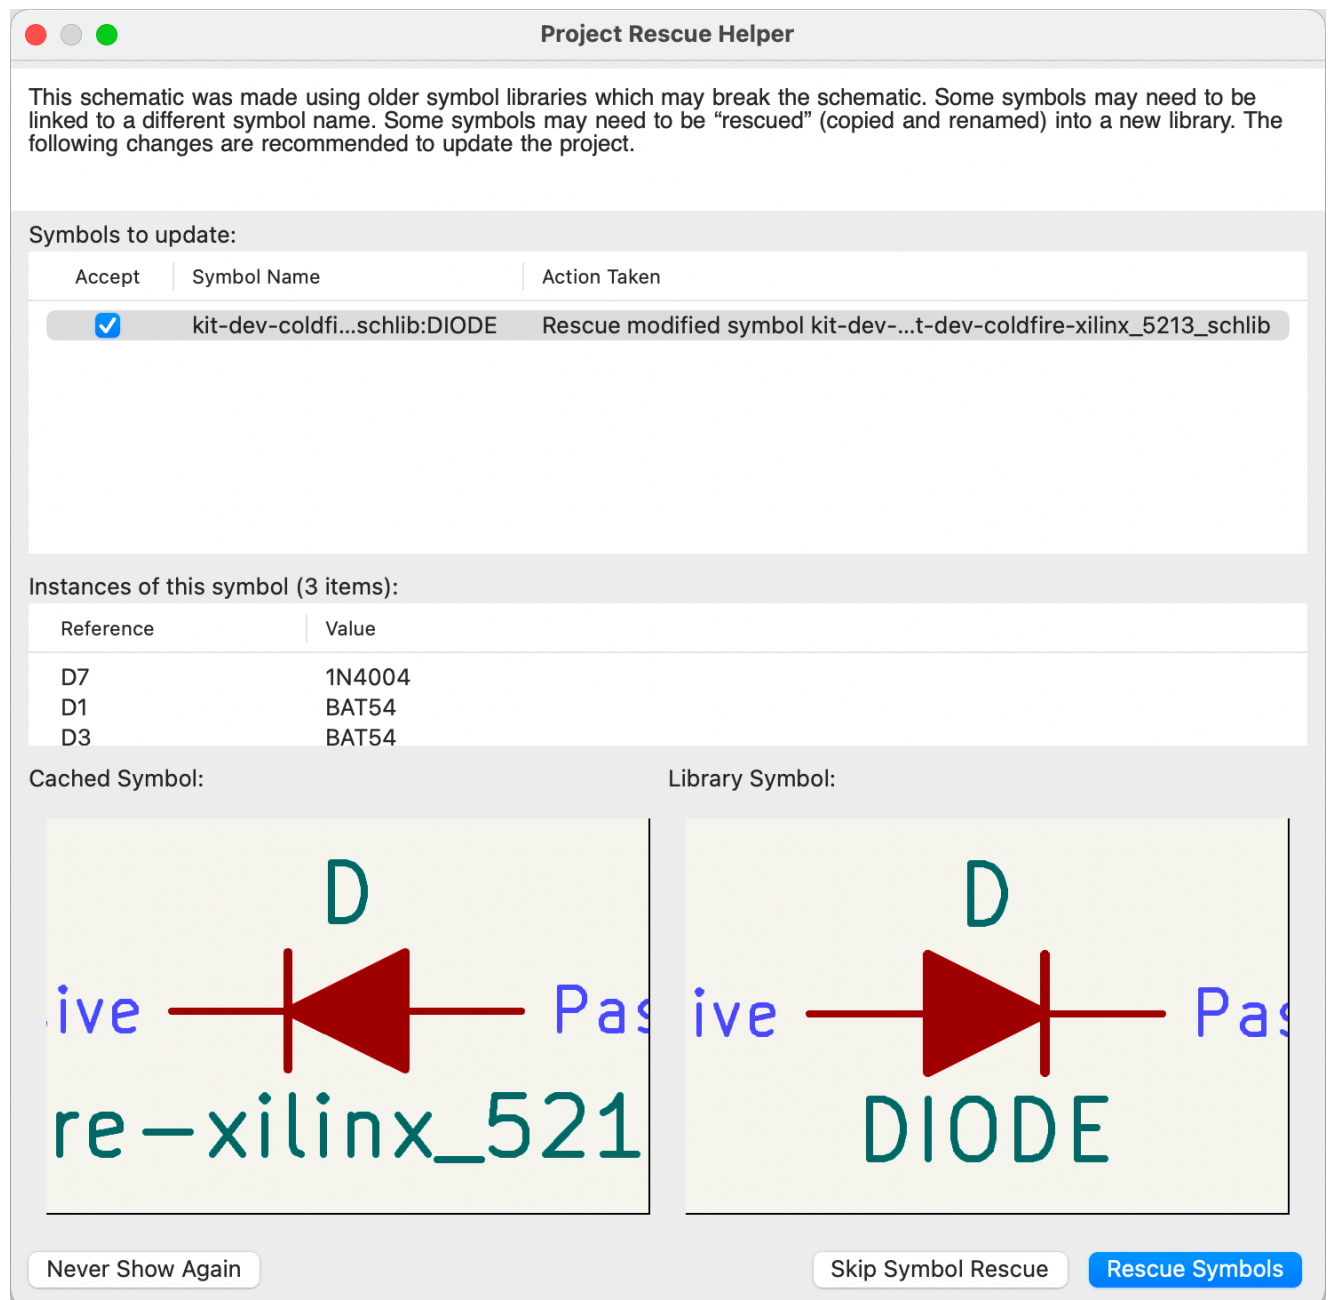

The rescue dialog lists all symbols that don't match between the cache library and the external symbol library. The discrepancy can be because:

- the cached symbol or the library symbol has been modified, so the two symbols no longer match, or
- the cached symbol does not have a corresponding symbol in the symbol library, because the symbol or library was moved, renamed, deleted, or is not present on the current computer.

For each symbol in the list, selecting the symbol displays the reference designator and value for each instance of the symbol, and shows a visual preview of the symbol. If a corresponding symbol exists in the system symbol library, the dialog shows both copies of the symbol for comparison. If the symbol only exists in the cache library, the dialog only shows the cached symbol.

In this example, the project originally used a diode with the cathode facing left, but the library now contains one with the cathode facing right. This change would break the design, so it would be important to use the cached symbol as the original designer intended.


Pressing **Rescue Symbols** here will cause the selected symbols from the cache library to be saved into a special rescue library (<projectname>-rescue.kicad_sym). The corresponding symbols in the schematic will be updated to use the newly rescued symbols. Any unselected symbols will not be rescued, but their symbol linkage can be updated in the schematic later.

Alternatively, pressing **Skip Symbol Rescue** will exit the dialog without rescuing any symbols. KiCad will use the versions of the symbols found in the external libraries. You can run the rescue function again with **Tools** → **Rescue Symbols...**, or manually edit symbol linkage in the symbol's properties.

If you would prefer not to see this dialog, you can press **Never Show Again**. This has the same effect as pressing **Skip Symbol Rescue** for the current schematic and all future schematics.

If a symbol in a legacy schematic cannot be found in either the cache library or the external library, KiCad cannot rescue that symbol. A placeholder symbol is inserted into the schematic in its place, as shown below.

You can attempt to remap these orphaned symbols using the **Change Symbols** or **Edit Symbol Library Links** dialogs, but either option may require manual corrections to the schematic. These tools are explained in more detail in the Updating and exchanging symbols section.

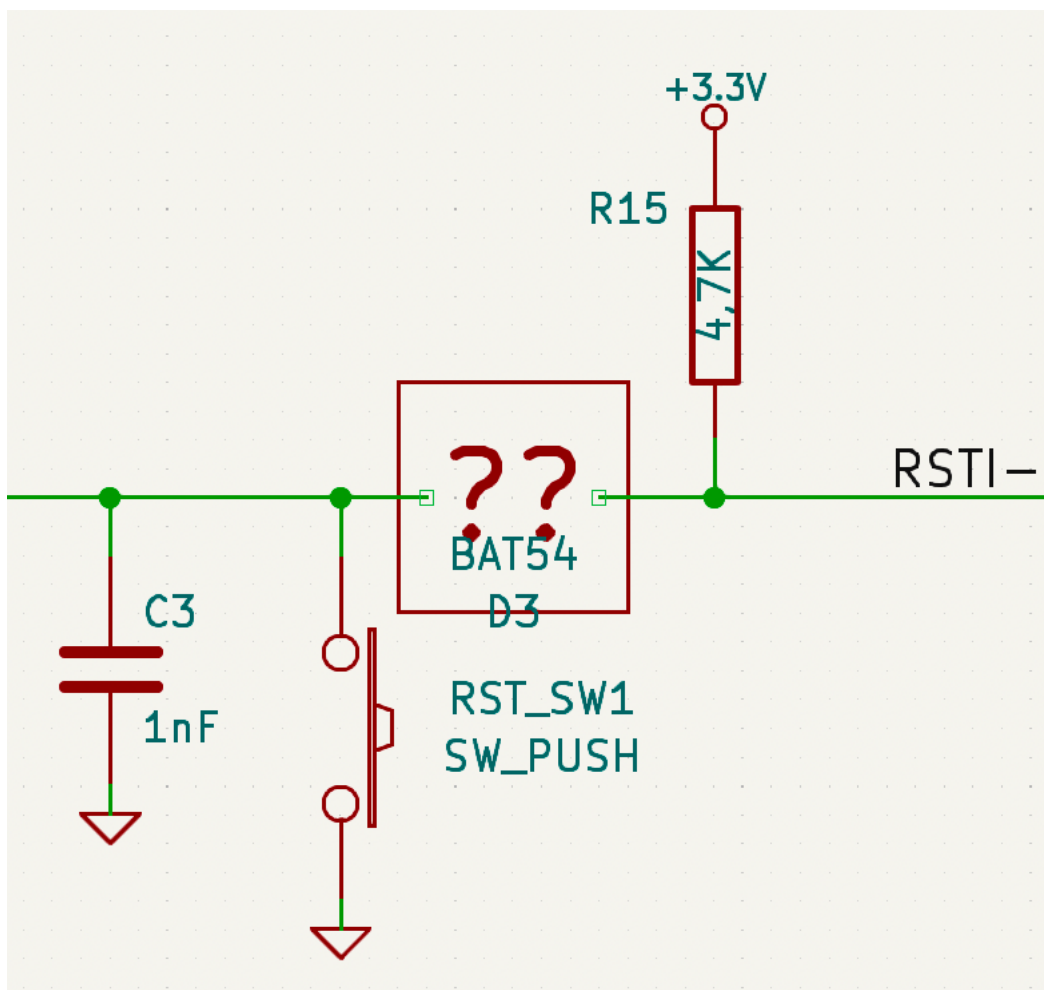


2.13.2. Opening pre-5.0 schematics

Modern versions of KiCad can open schematics created in versions prior to KiCad 5.0, but you will need to go through a symbol remapping process to open the schematic without losing symbol information.

Since version 5.0, KiCad schematics refer to specific symbols using both the symbol and library name. Even if multiple libraries each contain a symbol with the same name, the designer's intended symbol is unambiguously specified.

Prior to version 5.0, KiCad schematics stored only the symbol name, not the library name. Symbols in the schematic were indirectly mapped back to the original library by searching through the project's library list for a matching symbol. When you open a pre-5.0 schematic, KiCad will attempt to automatically "remap" the symbols so that each bare symbol name is replaced with a fully-specified symbol library and symbol name pair. The original schematics will be backed up in a rescue-backup folder.

You can skip the automatic remapping, but you will need to remap the symbols yourself using the Change Symbols dialog. You can also re-run the Remap Symbols tool using **Tools → Remap Legacy Library Symbols...**

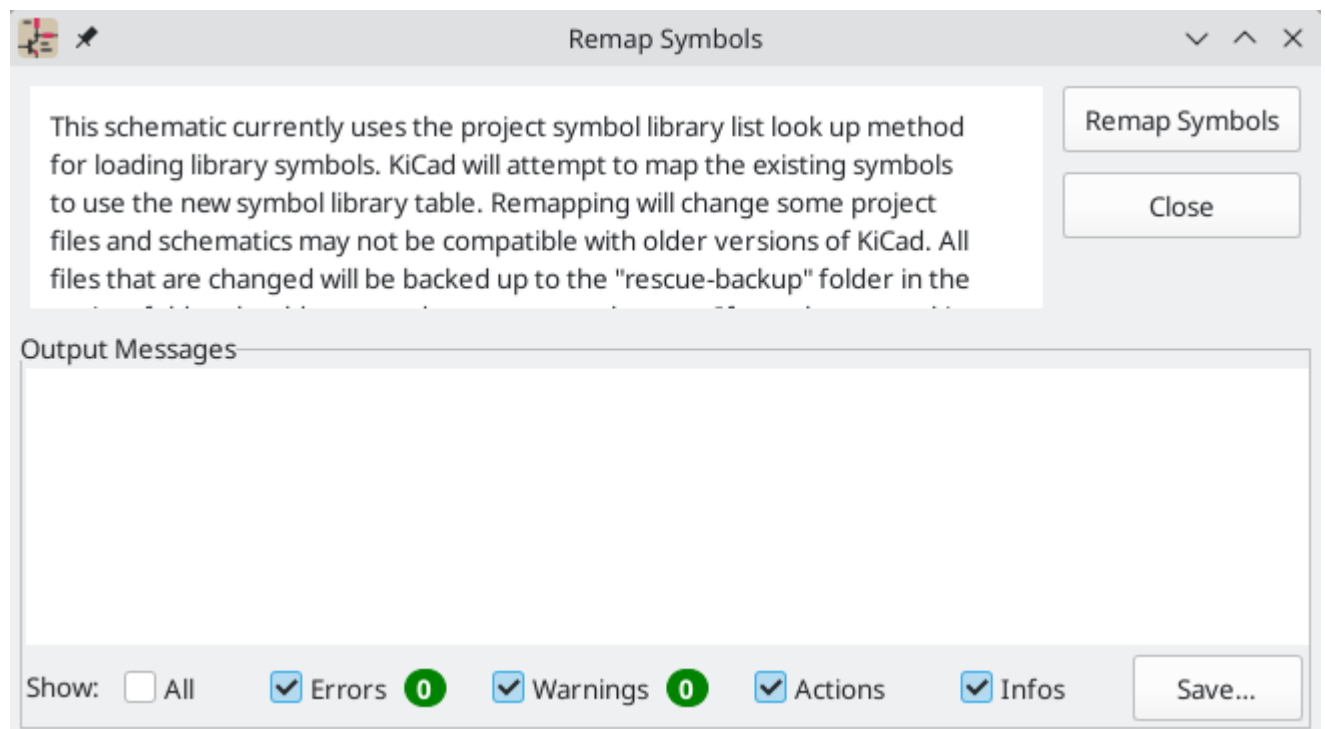

Capitolo 3. Schemi elettrici gerarchici

3.1. Introduzione

In KiCad, multi-sheet schematics are hierarchical: there is a single root sheet, and additional sheets are created as subsheets of either the root sheet or another subsheet. Sheets can be included in a hierarchy multiple times, if desired.

Carefully drawing a schematic as a hierarchical design improves schematic legibility and reduces repetitive drawing.


Creating a hierarchical schematic starts from the root sheet. The process is to create a subsheet, then draw the circuit in the subsheet and make the necessary electrical connections between sheets. Connections can be made between nets in a subsheet and nets in the parent sheet using hierarchical pins and labels, or between any two nets in the hierarchy using global labels.

3.2. Adding sheets to a design

You can add a subsheet to a design with the Add Hierarchical Sheet tool (kbd:[S] hotkey, or the



button in the right toolbar). Launch the tool, then click twice in the canvas to draw the upper left and lower right corners of the subsheet symbol. Make the sheet outline large enough to fit the hierarchical pins you will add later.

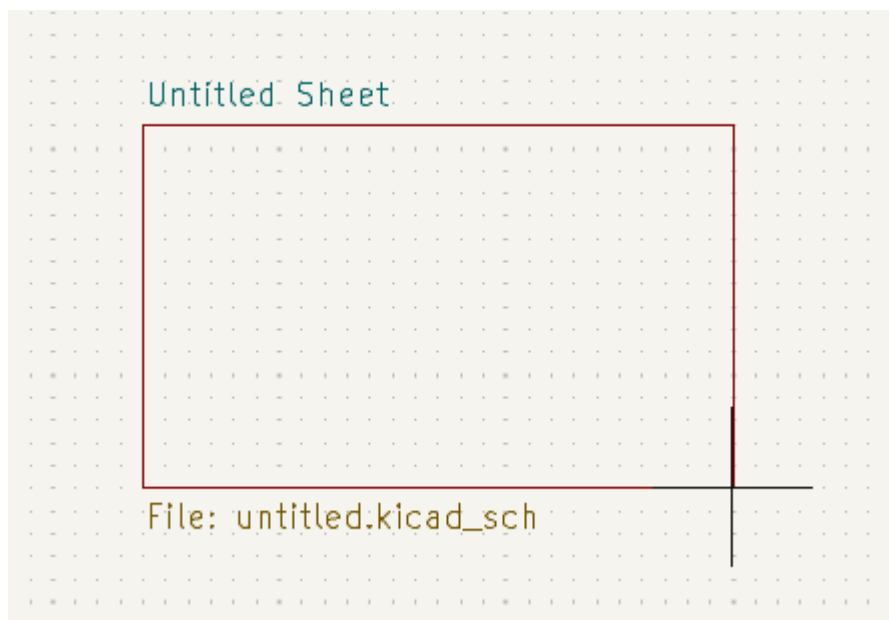

The Sheet Properties dialog will appear and prompt you for a sheet name and filename.

Name	Value	Show	Show Name	H Align	V Align	Italic	Bold
Sheetname	xilinx	☒	☐	Left	Bottom	☐	☐
Sheetfile	xilinx.kicad_sch	☒	☐	Left	Top	☐	☐

Attributes

Page number:

☐ Exclude from simulation

☐ Exclude from bill of materials

☐ Exclude from board

☐ Do not populate

Style

Border

Width: mils Color:

Fill

Color:

Hierarchical path: kit-dev-coldfire-xilinx_5213/xilinx

The **sheet name** must be unique, as it is used in the full net name for any nets in the subsheet. For example, a net with the local label `net1` in the sheet `sheet1` would have a full net name of `/sheet1/net1`. The sheet name is also used to refer to the sheet in various places in the GUI, including the title block and the hierarchy navigator. The sheet name can also be changed in the hierarchy navigator.

The **sheet file** specifies the file that the new sheet will be saved to or loaded from. The path to the sheet file can be relative or absolute. It is usually preferable to save subsheet files in the project directory and use a relative path so that the project is portable.

A single sheet file can be used more than once in a project by specifying the same filename for each repeated sheet; the circuit drawn in the sheet will be instantiated once per usage, and any edits in once instance will be reflected in the other instances.

Nota

Sheet files can be shared between multiple projects to allow design reuse between projects. However, this is not recommended due to path portability concerns and the risk of unintentionally changing other projects while editing a shared sheet.

The sheet's **page number** is configurable here. The page number is displayed in the sheet title block and the hierarchy navigator, and sheets are sorted by page number in the hierarchy navigator and when printing or plotting. The sheet number can also be changed in the hierarchy navigator or for the current page with **Edit** → **Edit Sheet Page Number...**

Other attributes for sheets are **Exclude from simulation**, **Exclude from bill of materials**, **Exclude from board**, and **Do not populate**. When any of these attributes are set for a sheet, they are inherited by all symbols in that sheet, as if they were set on the symbols themselves.

Several graphical options are also available. **Border width** sets the width of the border around the sheet shape. **Border color** and **Background fill** set the color for the border and fill of the sheet shape, respectively. If no color is set, a checkerboard swatch is shown and the default values from the color theme are used.

Sheets support arbitrary custom fields, which can be added and removed with the



buttons, respectively. Sheet fields can be optionally displayed on the schematic by checking their **Show** box, and they can be accessed from inside the sheet or in other sheet fields using text variables.

The Sheet Properties dialog can be accessed at any time by selecting a sheet symbol and using the `kbd:[E]` hotkey, or by right-clicking on a sheet symbol and selecting **Properties...**

3.3. Navigating between sheets

You can enter a hierarchical sheet from the parent sheet by double-clicking the child sheet's shape, or right-clicking the child sheet and selecting **Enter Sheet**.

Return to the parent sheet by using the



button in the top toolbar, or by right-clicking in an empty part of the schematic and clicking **Leave Sheet**.

You can jump to the next sheet with the



button, or to the previous sheet with the




button.

Alternatively, you can jump to any sheet with the hierarchy navigator. To open the hierarchy navigator, click the



button in the left toolbar. The hierarchy navigator docks at the left of the screen. Each sheet in the design is displayed as an item in the tree. Clicking a sheet name opens that sheet in the editing canvas. You can also use the hierarchy navigator to rename or renumber a sheet by right clicking on the sheet name and selecting **Edit page number** or **Rename**.

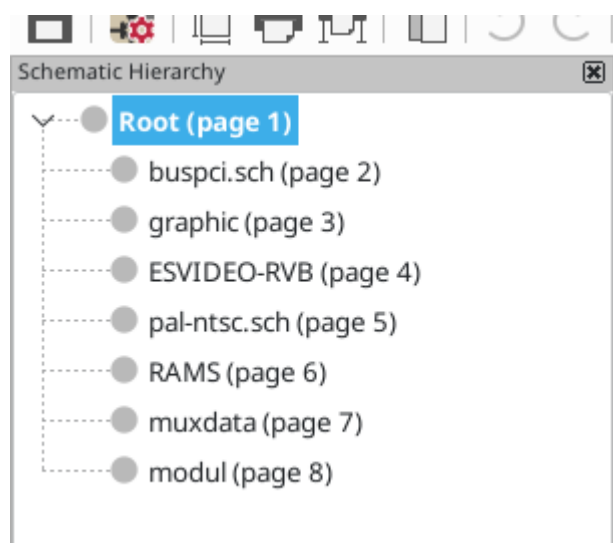

3.4. Electrical connections between sheets

3.4.1. Label overview

Electrical connections between sheets are made with labels. There are several kinds of labels in KiCad, each with a different connection scope.

- **Local labels** only make connections within a sheet. Therefore local labels cannot be used to connect between sheets. Local labels are added with the  button.
- **Global labels** make connections anywhere in a schematic, regardless of sheet. Global labels are added with the  button.
- **Hierarchical labels** connect to **hierarchical sheet pins** accessible in the parent sheet. Hierarchical designs rely on hierarchical labels and pins to make connections between parent sheets and child sheets. You can think of sheet pins as defining the interface for a sheet; hierarchical labels within the child sheet connect to corresponding sheet pins which are visible in the parent sheet. Hierarchical labels are added inside a child sheet using the  button.

Nota

Labels that have the same name will connect, regardless of the label type, if they are in the same sheet.

Nota


Hidden power pins can also be considered global labels, because they connect anywhere in the schematic hierarchy.

3.4.2. Hierarchical sheet pins

After placing hierarchical labels within the subsheet, matching **hierarchical sheet pins** can be added to the subsheet symbol in the parent sheet. You can then make connections to the hierarchical pins with wires, labels, and buses. Hierarchical sheet pins in a subsheet symbol are connected to the matching hierarchical labels in the subsheet itself.

Nota

Hierarchical labels must be defined in the subsheet before the corresponding hierarchical sheet pin can be imported in the sheet symbol.

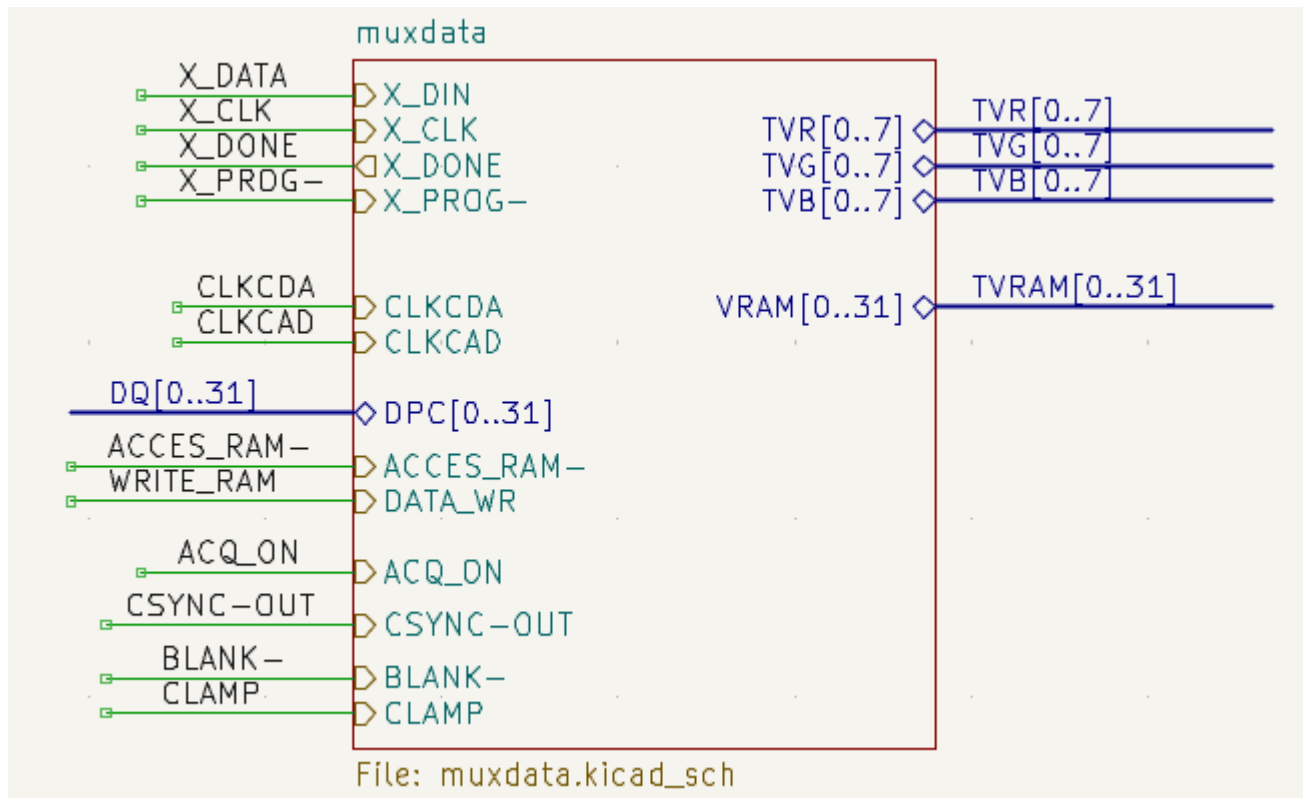


For every hierarchical label in the subsheet, add the corresponding hierarchical pin onto the sheet symbol by clicking the



button in the right toolbar, then clicking on the sheet symbol. A sheet pin for the first unmatched hierarchical label will be attached to the cursor, where it can be placed anywhere along the border of the sheet symbol. Clicking again with the tool will continue to add additional sheet pins until all of the hierarchical labels in the subsheet have a matching sheet pin on the sheet symbol. Sheet pins can also be imported by selecting **Place Sheet Pin** in a sheet symbol's right-click context menu.

You can edit the properties of a sheet pin in the Sheet Pin Properties dialog. Open this dialog by double-clicking a sheet pin, selecting a sheet pin and using the kbd:[E] hotkey, or right-clicking a sheet pin and selecting **Properties....**

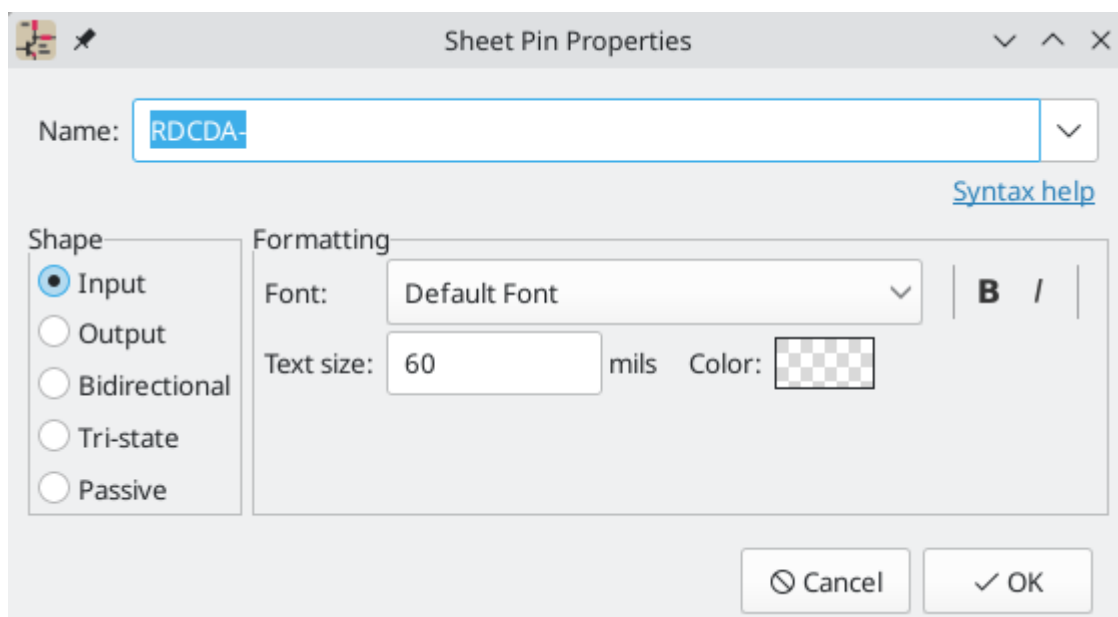

The sheet pin's **name** can be edited in the textbox or by selecting from the dropdown list of hierarchical labels in the subsheet. A sheet pin's name has to match the corresponding hierarchical label in the subsheet, so if you change a pin name you must change the label name as well.


Shape changes the shape of the sheet pin, and has no electrical effect. It can be set to Input, Output, Bidirectional, Tri-state, or Passive. The pin's **font**, **text size**, **color**, and emphasis (bold or italic) can also be changed.

3.4.3. Syncing sheet pins

Another way to manage the connections between hierarchical labels and sheet pins is to use the Sync Sheet Pins tool. Launch this tool using the



button in the right toolbar or with **Sync Sheet Pins** in a sheet symbol's right click context menu.

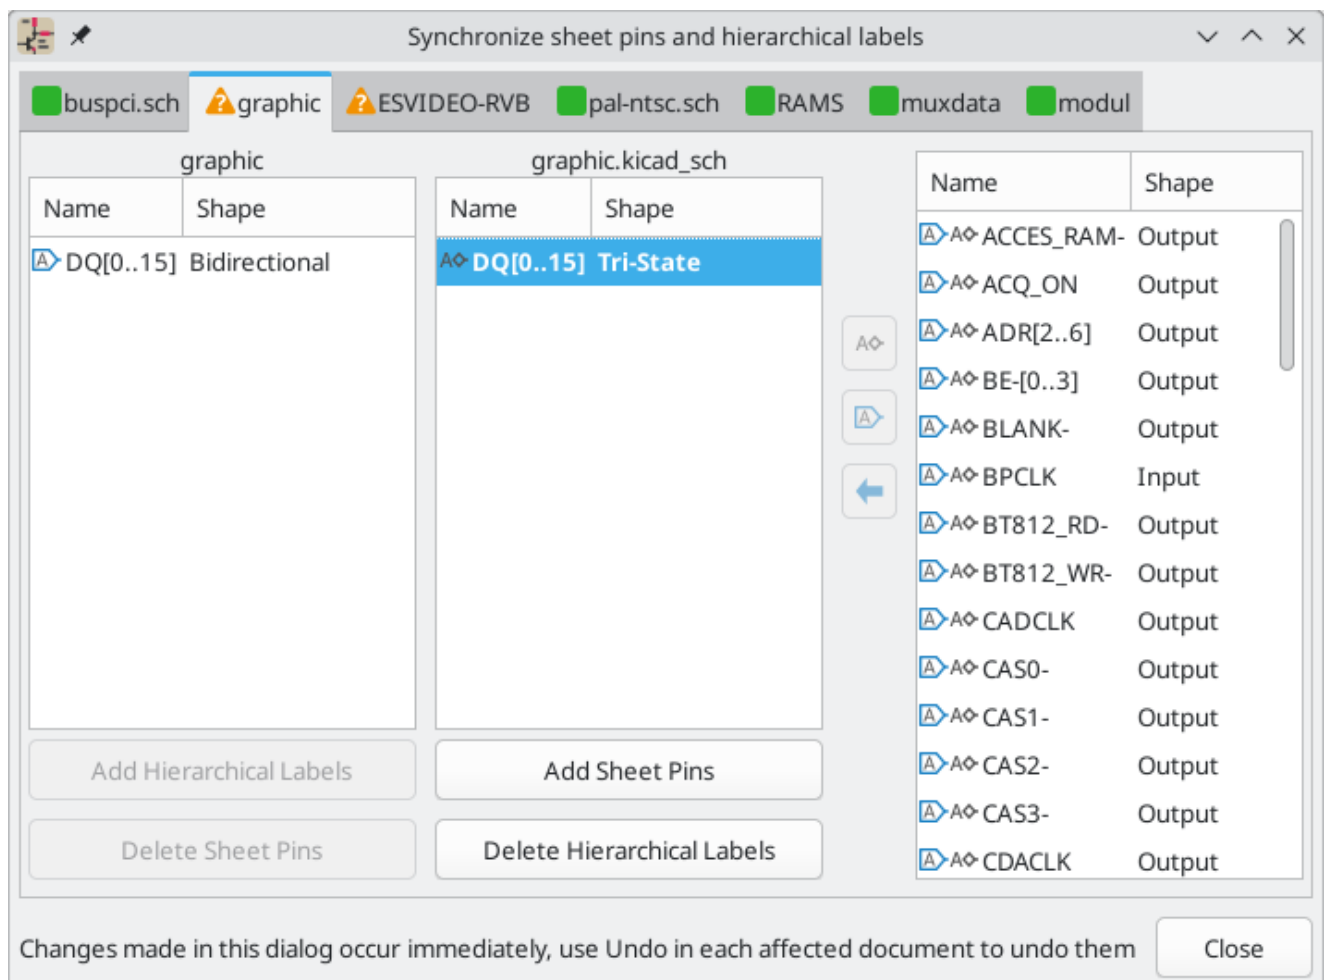

This dialog shows the hierarchical labels and hierarchical sheet pins for each hierarchical sheet. If the tool was launched from the context menu of a sheet symbol, only one tab will be available, with the labels and sheet pins for that specific sheet. If the tool was started globally, i.e. with the



button or with **Place** → **Sync Sheet Pins**, a tab will be shown for each hierarchical sheet.

The icon in each tab indicates whether the hierarchical sheet pins on the sheet symbol are correctly matched with the hierarchical labels inside the sheet. If the tab has a



icon, then there is a hierarchical label in the sheet without a matching sheet pin, or a sheet pin without a corresponding hierarchical label, or both. If the tab has a



icon, then the hierarchical labels and hierarchical sheet pins are matched up correctly. Sheet pins and labels are considered matching if they have the same name and the same graphic shape (input, output, bidirectional, tri-state, or passive).

The column on the left lists sheet pins for the current sheet that do not have a corresponding hierarchical label in the sheet. The middle column lists hierarchical labels in the current sheet that do not have a corresponding hierarchical sheet pin on the sheet symbol. The right column lists pairs of matching sheet pins and hierarchical labels. The name of each pin or label is shown along with its graphic shape.

If you click the **Add Hierarchical Labels** button, new hierarchical labels corresponding to the selected sheet pins will be created for you to place sequentially in the sheet. The selected sheet pins are then removed from the left column and added to the right column for matching sheet pins and labels. Clicking **Delete Sheet Pins** will delete the selected sheet pins from the sheet symbol.

If you click the **Add Sheet Pins** button, new sheet pins corresponding to the selected hierarchical labels will be created for you to place on the sheet symbol. The hierarchical labels are then removed from the middle column and added to the right column for matching sheet pins and labels. Clicking **Delete Hierarchical Labels** will delete the selected hierarchical labels from inside the sheet.

Clicking the



button will match the selected sheet pin and hierarchical label by renaming the sheet pin to match the hierarchical label's name. Clicking the



button will do the opposite, matching the selected sheet pin and hierarchical label by renaming the label to match the sheet pin.

Clicking the



button will unmatch a matched pair, moving both the sheet pin and the hierarchical label back to their respective unmatched columns. The unmatched sheet pin and hierarchical label can then be edited or rematched as desired.

Any changes made in the Sync Sheet Pins dialog are applied immediately, before the dialog is closed. To cancel a change made in the Sync Sheet Pins dialog, use Undo.

3.5. Hierarchical design examples


Hierarchical designs can be put into one of several categories:

- **Simple:** each sheet is used only once.
- **Complex:** some sheets are instantiated multiple times.
- **Flat:** a sub-case of a **simple** hierarchy, without connections between subsheets and their parent. Flat hierarchies can be used to represent a non-hierarchical design.

Each hierarchy model can be useful; the most appropriate one depends on the design.

3.5.1. Simple hierarchy


An example of a simple hierarchy is the video demo project included with KiCad. The root sheet contains seven unique subsheets, each with hierarchical labels and sheet pins linking the sheets to each other in the root sheet. Two of the subsheet symbols are shown below.

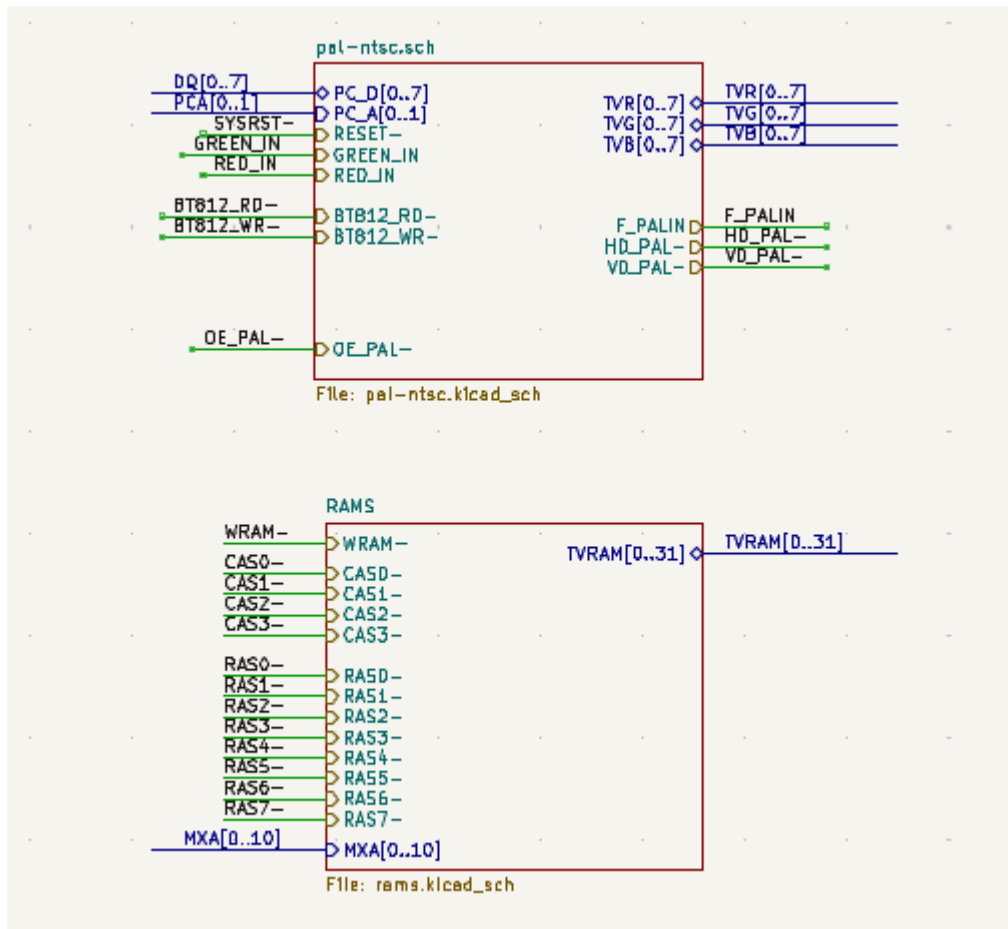

3.5.2. Gerarchia complessa

The complex_hierarchy demo project is an example of a complex hierarchy. The root sheet contains two subsheet symbols, which both refer to the same sheet file (ampli_ht.kicad_sch). This allows the design to include two copies of the same amplifier circuit. Although the two sheet symbols refer to the same filename, the sheet names are unique (ampli_ht_vertical and ampli_ht_horizontal). Inside each subsheet the circuits are identical except for the reference designators, which as always are unique.

This project contains no sheet pin connections. The only connections between the root sheet and the subsheets are global power connections made with power symbols. However, sheets in a complex hierarchy could include sheet pin connections if appropriate for the design.

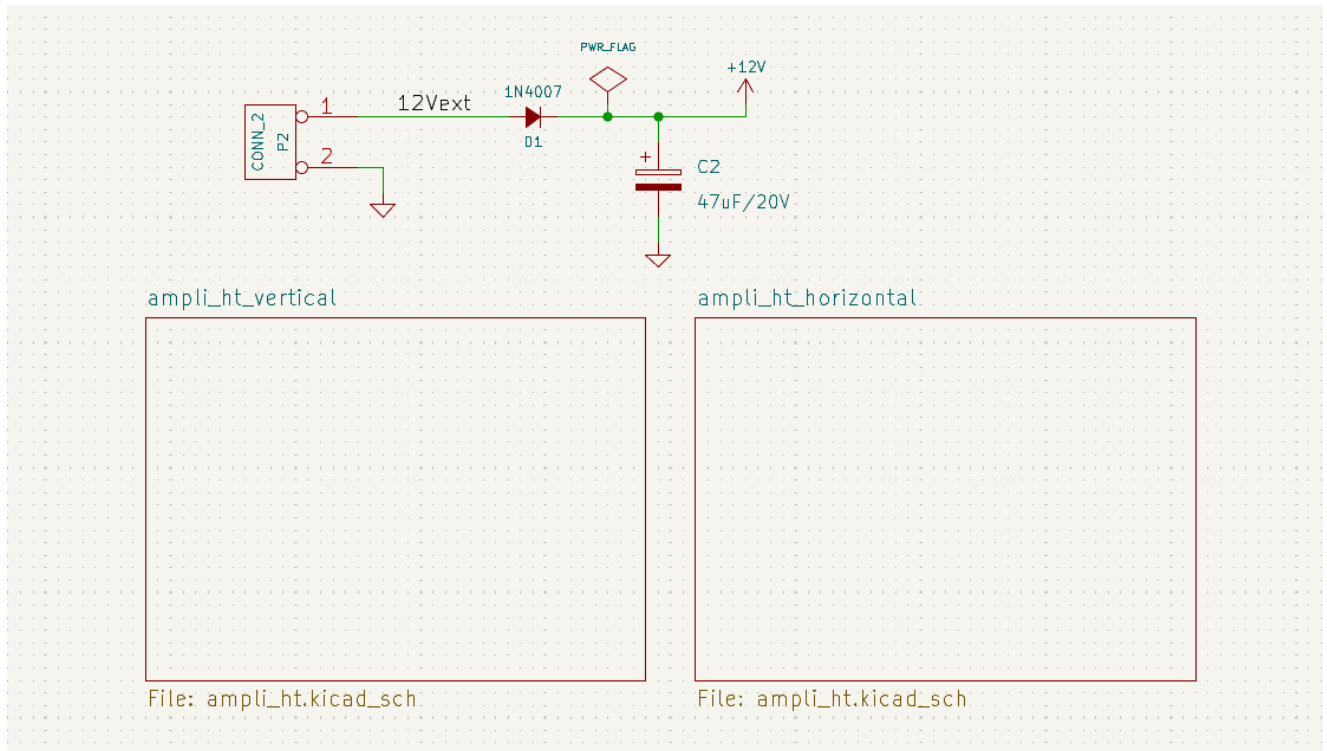


3.5.3. Gerarchia piatta

The flat_hierarchy demo project is an example of a flat hierarchy. The root sheet contains two unique subsheet symbols with no hierarchical sheet pins. The root sheet in this project does nothing except hold the subsheets, and the subsheets are used only as additional pages in the schematic.

Nota

This is the simplest way to create multi-page schematics in KiCad.

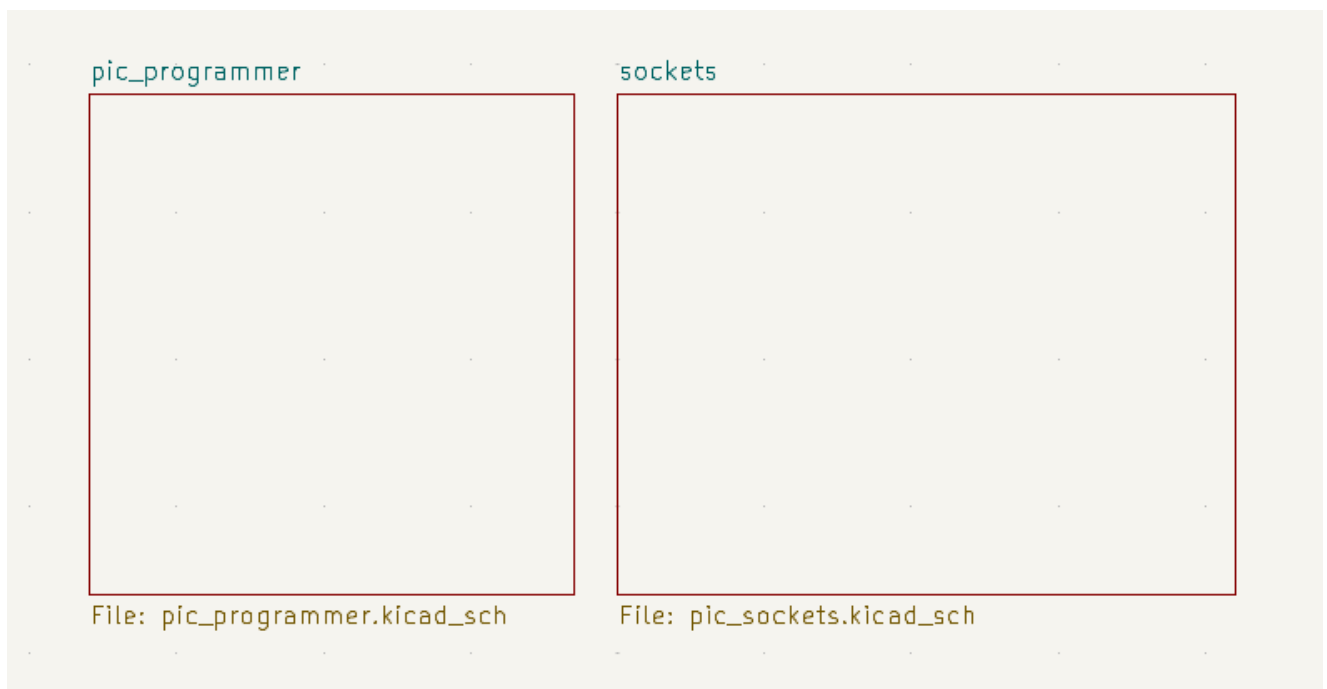


Capitolo 4. Inspecting a schematic

4.1. Find tool

The Find tool searches for text in the schematic, including reference designators, pin names, symbol fields, and graphic text. When the tool finds a match, the canvas is zoomed and centered on the match and the text is highlighted. Launch the tool using the



button in the top toolbar.

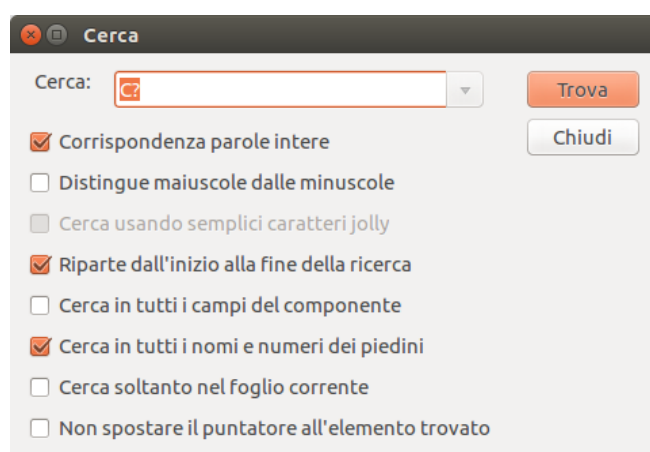

The Find tool has several options:

- **Match case:** Selects whether the search is case-sensitive.
- **Whole words only:** When selected, the search will only match the search term with complete words in the schematic. When unselected, the search will match if the search term is part of a larger word in the schematic.
- **Regular Expression:** When selected, regular expressions can be used in the search terms.
- **Search pin names and numbers:** Selects whether the search should apply to pin names and numbers.
- **Search net names:** Selects whether the search should apply to net names (labels, symbol pins, sheet pins, and bus members).
- **Search hidden fields:** Selects whether the search should apply only to visible fields or if it should include hidden symbol fields.
- **Search the current sheet only:** Selects whether the search should be limited to the current schematic sheet.
- **Search the current selection only:** Selects whether the search should be limited to the current selection.

There is also a Find and Replace tool which is activated with the



button in the top toolbar. This tool behaves the same as the Find tool, but additionally can replace some or all matches with different text.

The Find and Replace tool has the same options as the Find tool, with one addition:

- **Replace matches in reference designators:** When selected, reference designators will be modified if they contain matching text. Otherwise reference designators will not be affected.

4.2. Search panel

The search panel is a docked panel that lists information about symbols, text, and labels from the schematic. Show or hide the search panel with **View** → **Panels** → **Search** or use the kbd:[Ctrl+G] shortcut.

Search									
C1									
Reference	Value	Footprint	Page	X	Y	Excl. sim	Excl. BOM	Excl. board	DNP
C101	100nF	Capacitor_SMD:C_0805_2012Metric	1	13300 mils	1250 mils				
C102	1nF	Capacitor_SMD:C_0805_2012Metric	1	6750 mils	1650 mils				
C103	100nF	Capacitor_SMD:C_0805_2012Metric	1	7100 mils	1650 mils				
C104	100nF	Capacitor_SMD:C_0805_2012Metric	1	13300 mils	2050 mils				
C105	1nF	Capacitor_SMD:C_0805_2012Metric	1	1900 mils	3300 mils				
C106	10pF	Capacitor_SMD:C_0805_2012Metric	1	1900 mils	8850 mils				
C107	10pF	Capacitor_SMD:C_0805_2012Metric	1	1100 mils	8900 mils				
C108	10uF	kit-dev-coldfire:SM1206POL	1	2600 mils	10250 mils				

You can optionally filter the list based on a search string. When no filter is used, all items in the design are listed in the corresponding tab. Items from the entire schematic are listed, not just items in the current sheet. Items are filtered based on their properties:

- Symbols and power symbols are filtered by the contents of their fields. You can select whether to search hidden fields by enabling the **Search Hidden Fields** option in the



menu

- Text (text and textboxes) is filtered by the text content
- Labels are filtered by their netnames

You can sort the filtered results in ascending or descending order of the value in a particular column by clicking on that column header.

Filters support wildcards: * matches any characters, and ? matches any single character. You can also use regular expressions [http://docs.wxwidgets.org/3.2/overview_resyntax.html], such as /symbol value/.

The displayed information depends on the item type:

- All items list their name and/or value, page number, and X/Y location in the sheet
- Symbols additionally list their reference designator, footprint and attributes (Exclude from Simulation, Exclude from BOM, Exclude from Board, and Do Not Populate)
- Power symbols additionally list their reference designator
- Text and labels additionally list their type, e.g. textbox or hierarchical

When you click an item in the search panel, the schematic editor switches to the item's schematic sheet, and the item is selected in the editing canvas. Depending on what is configured in the  menu, the schematic editor will also pan and/or zoom to the selected item in the editing canvas. Double-clicking an item in the search panel opens its properties dialog.

4.3. Net highlighting


An electrical net can be highlighted in the schematic editor to visualize all of the places it appears in the schematic. Net highlighting can be activated in the Schematic Editor or by highlighting the corresponding net in the PCB editor when cross-probe highlighting is enabled (see below). When net highlighting is active, the highlighted net will be shown in a different color. By default this color is pink, but it is configurable in the Color section of the Preferences dialog.

Nets can be highlighted by clicking on a wire or pin using the Highlight Net tool in the right toolbar (). Alternatively, the Highlight Net hotkey (kbd:[`]) highlights the net under the cursor.

Net highlighting can be cleared by using the Clear Net Highlight action (hotkey kbd:[~]) or by using the Highlight net tool on an empty region in the schematic. By default, kbd:[Esc] also clears net highlighting, but this can be disabled if desired in **Preferences** → **Schematic Editor** → **Editing Options**.

4.4. Net navigator

The net navigator is a docked panel that shows the location of every occurrence of a highlighted net in a schematic. Show or hide the net navigator with **View** → **Panels** → **Net Navigator**.

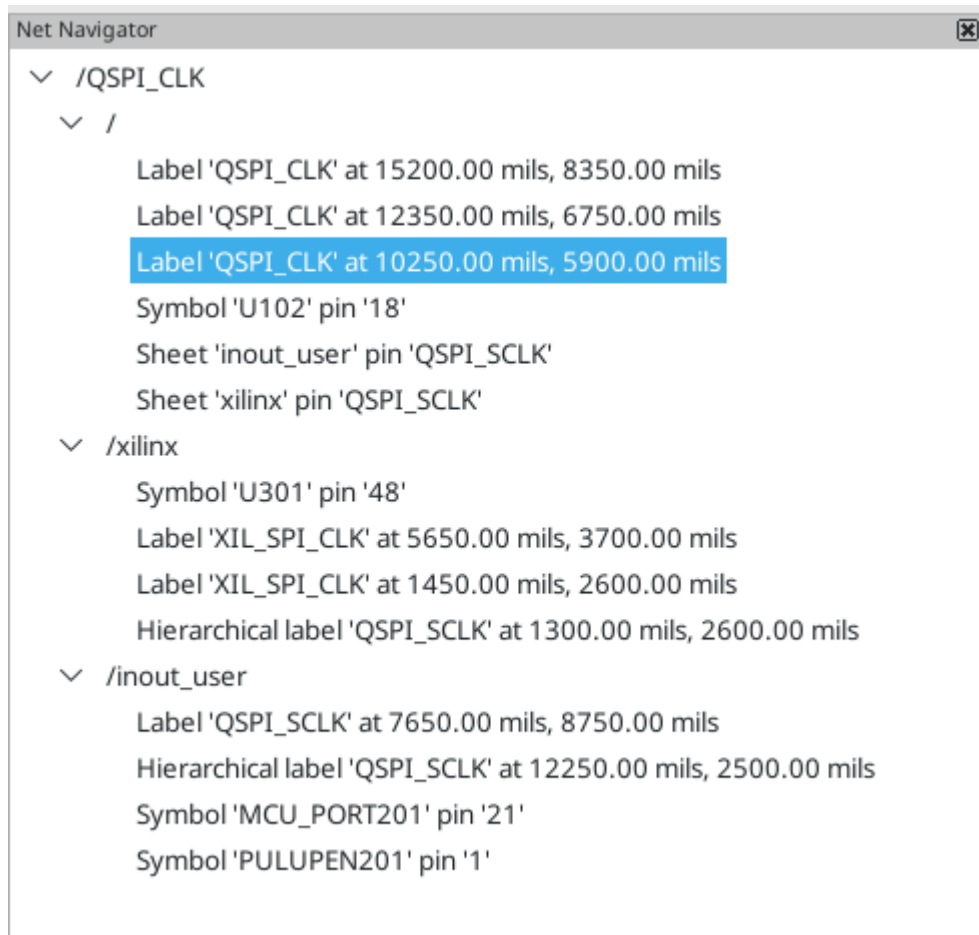

When you highlight a net in the schematic, every place where that net is shown in the schematic is listed in the net navigator panel. All labels, symbol pins, and sheet pins connected to the net are listed. Each occurrence is sorted under its schematic sheet. Clicking on an occurrence displays that item in the editing canvas.

When no net is highlighted, the net navigator displays this information for all nets in the schematic.

Nota

The net navigator displays highlighted nets, not selected nets.

With the net navigator open and a net highlighted, you can quickly select various items on that net (net labels, sheet pins, and symbol pins) by selecting one of the items on the highlighted net in the schematic canvas and pressing `kbd:[Tab]`/`kbd:[Shift+Tab]` to cycle through the net items. Pressing `kbd:[Tab]` selects the next item on the net, while `kbd:[Shift+Tab]` selects the previous item.

4.5. Cross-probing from the PCB

KiCad allows bi-directional cross-probing between the schematic and the PCB. There are several different types of cross-probing.

Selection cross-probing allows you to select a symbol or pin in the schematic to select the corresponding footprint or pad in the PCB (if one exists) and vice-versa. By default, cross-probing will result in the display centering on the cross-probed item and zooming to fit. You can disable the

centering and zooming behavior, or disable selection cross-probing entirely, in the Display Options section of the Preferences dialog. Even when selection cross-probing is disabled, you can manually cross-probe from the schematic to the PCB by right-clicking an object and selecting **Select on PCB**, or from the PCB to the schematic by right-clicking an object and choosing ***Select → Select on Schematic***.

Highlight cross-probing allows you to highlight a net in the schematic and PCB at the same time. If the option "Highlight cross-probed nets" is enabled in the Display Options section of the Preferences dialog, highlighting a net or bus in the schematic editor will cause the corresponding net or nets to be highlighted in the PCB editor, and vice versa.

4.6. Electrical rules checking


The Electrical Rules Checker (ERC) tool checks for certain errors in your schematic, such as unconnected pins, unconnected hierarchical symbols, shorted outputs or other illegal connections, etc. ERC violations are reported as errors or warnings depending on the severity of the issue detected.

ERC is imperfect and cannot detect all errors, but it can detect many common issues and oversights. All detected issues should be checked and addressed before proceeding. The quality of the ERC is directly related to the care taken in declaring electrical pin properties during symbol creation. If symbols are designed incorrectly, ERC will not report accurate information.

ERC can be started by clicking on the



button in the top toolbar and clicking the **Run ERC** button.

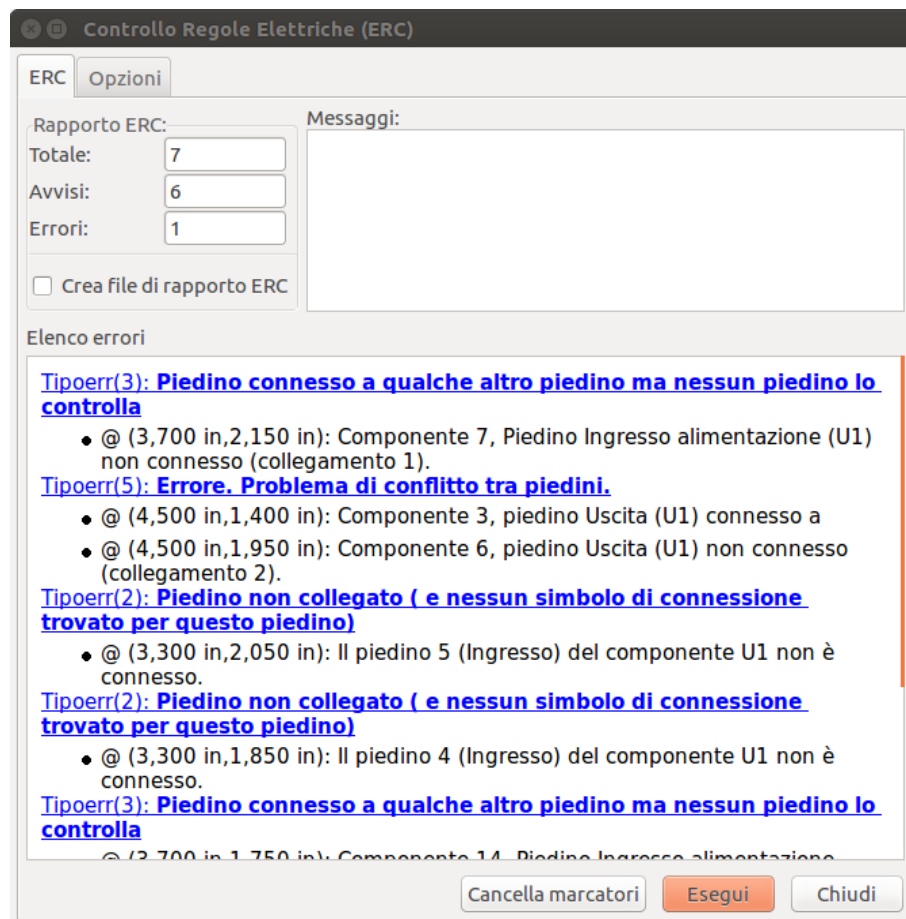


Any warnings or errors are reported in the **Violations** tab, and markers for each violation are placed in the schematic so that they point to the relevant part of the schematic. Warnings are indicated by yellow arrows, and errors have red arrows. Excluded violations are shown as green arrows. A list of the ignored tests are shown in the **Ignored Tests** tab. A report file in plain text format can be created after running DRC using the **Save...** button.

Nota

Selecting a violation in the ERC window jumps to the selected violation marker in the schematic.

The numbers at the bottom of the window show the number of errors, warnings, and exclusions. Each type of violation can be filtered from the list using the respective checkboxes. Clicking **Delete Marker** will clear the selected violation until ERC is run again, while clicking **Delete All Markers** will clear all violations until the next ERC run.

Violations can be right-clicked in the dialog to ignore them or change their severity:

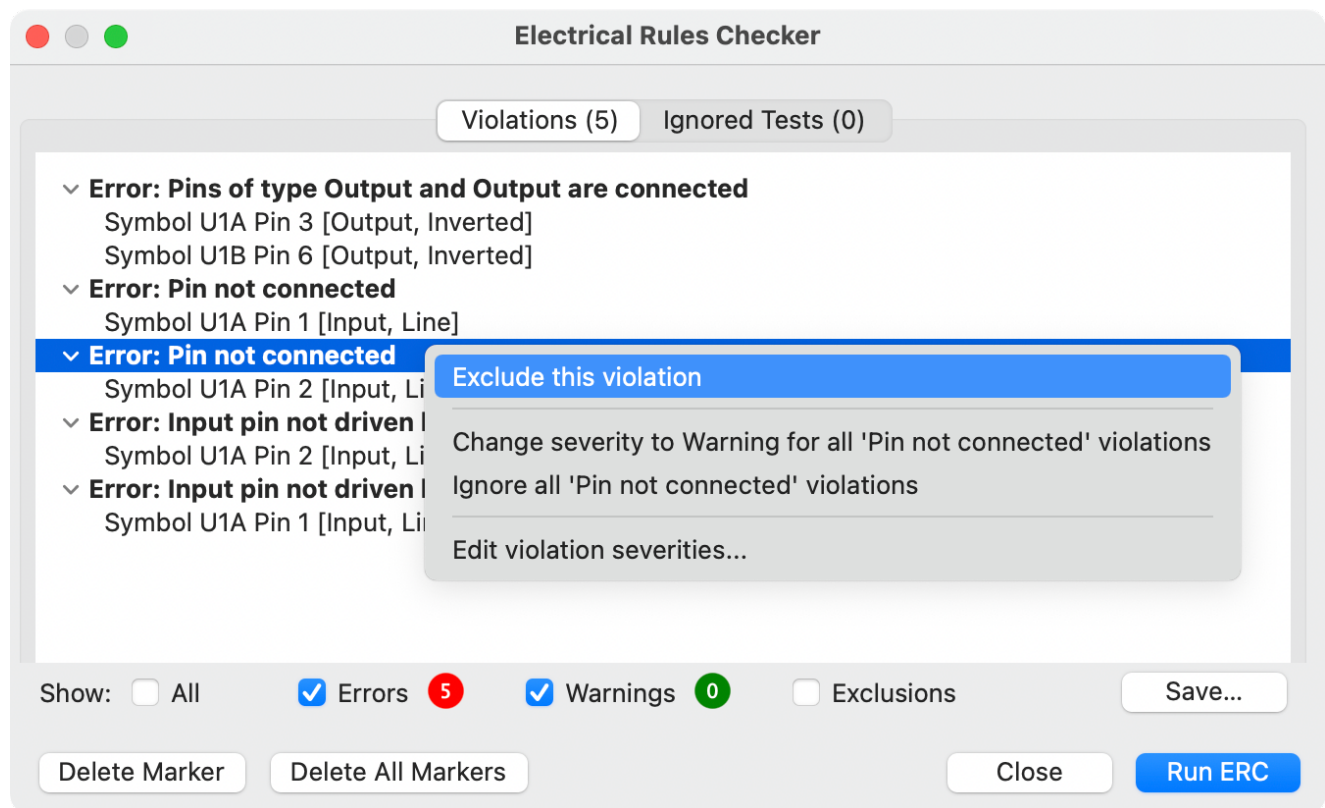


- **Exclude this violation:** ignores this particular violation, but does not affect any other violations. You can un-exclude a violation by right clicking the excluded violation and selecting **Remove exclusion for this violation**.
- **Exclude with comment...:** the same as **Exclude this violation**, but prompts for a comment explaining the reason for the exclusion. When excluded violations are unhidden (using the **Exclusions** checkbox), exclusion comments are shown with the corresponding excluded violation. To edit an existing exclusion comment or add a comment to an existing exclusion, right click an excluded violation and select **Edit exclusion comment...**
- **Change severity:** changes a type of violation from warning to error, or error to warning. This affects all violations of a given type.

- **Ignore all:** ignores all violations of a given type. This test will now appear in the **Ignored Tests** tab rather than the **Violations** tab. You can un-ignore the test again by right clicking the test in the **Ignored Tests** tab, or in the Violation Severity panel in Schematic Setup.
- *Edit violation severities...: opens the Violation severity panel in Schematic Setup, for editing the severities of all DRC violation types.

You can also exclude the selected marker with **Inspect** → **Exclude Marker**, and show or hide each category of marker (errors, warnings, and exclusions) with the **View** menu.

Excluded and ignored violations are remembered between runs of the design rule checker. Excluded violations are hidden unless the **Exclusions** checkbox is enabled. Ignored violations are not shown, but there is a list of ignored tests in the **Ignored Tests** tab.


4.6.1. ERC example

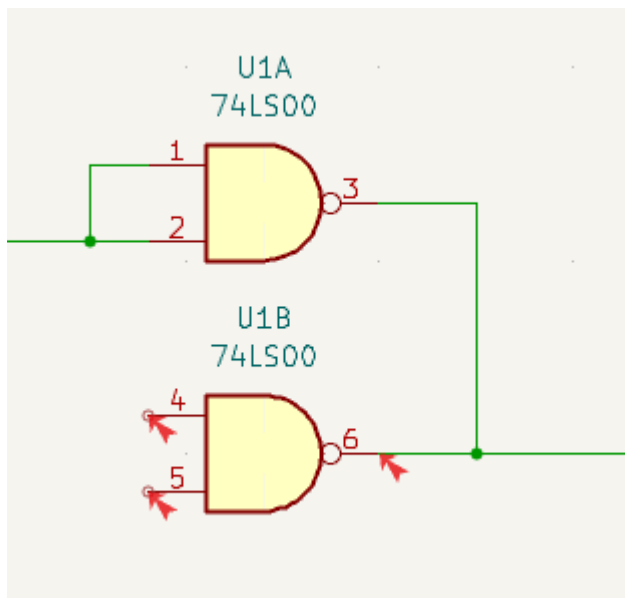

There are three errors in the screenshot above.

- Two outputs have been connected together (red arrow at right).
- Two inputs have been left unconnected (red arrows at left). This is actually two errors per pin: each pin is unconnected, and each pin is an input pin that is not driven by an output pin.


Selecting an ERC marker displays a description of the violation in the message pane at the bottom of the window.

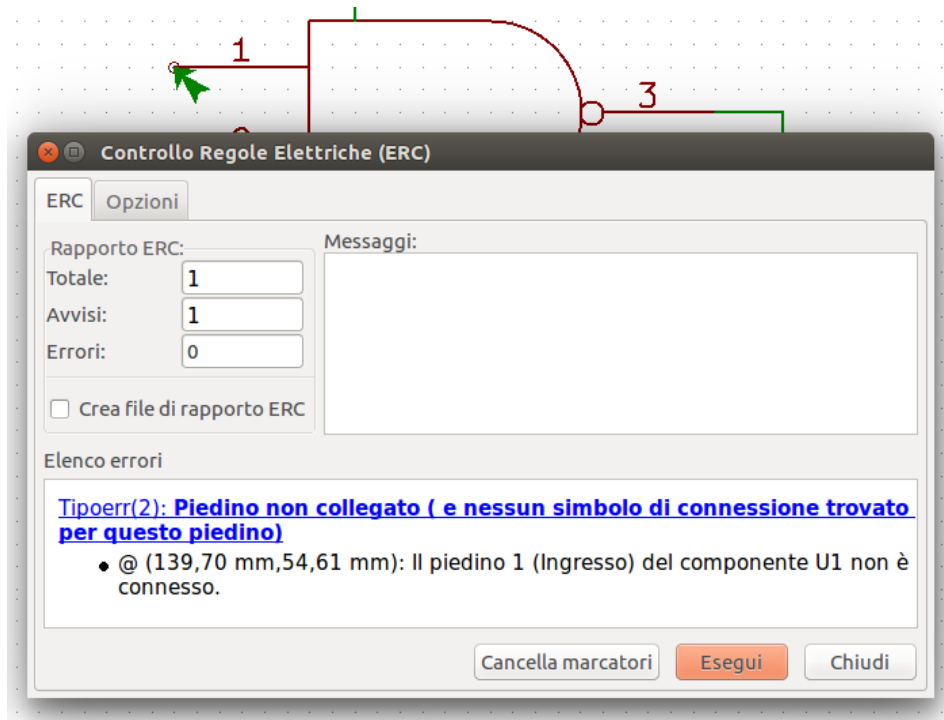

4.6.2. Per-net ERC markers

Some violations are reported only once per net. For example, the "Input Power pin not driven by any Output Power pins" error technically applies to each Input Power pin on an un-driven net, but only one marker is shown per net. This is to avoid producing a large number of markers for a single root cause. In this case, exactly where the marker is placed in the schematic is arbitrary and does not necessarily indicate the ideal location for fixing the issue.

In the example below, there are four un-driven Input Power pins (one per power symbol), but only two ERC markers. Adding two PWR_FLAG symbols, one to each un-driven net, will clear the errors. The "correct" location for the PWR_FLAG symbol depends on the schematic and may not be near the particular power symbol where the marker was placed, or even in the same schematic sheet.

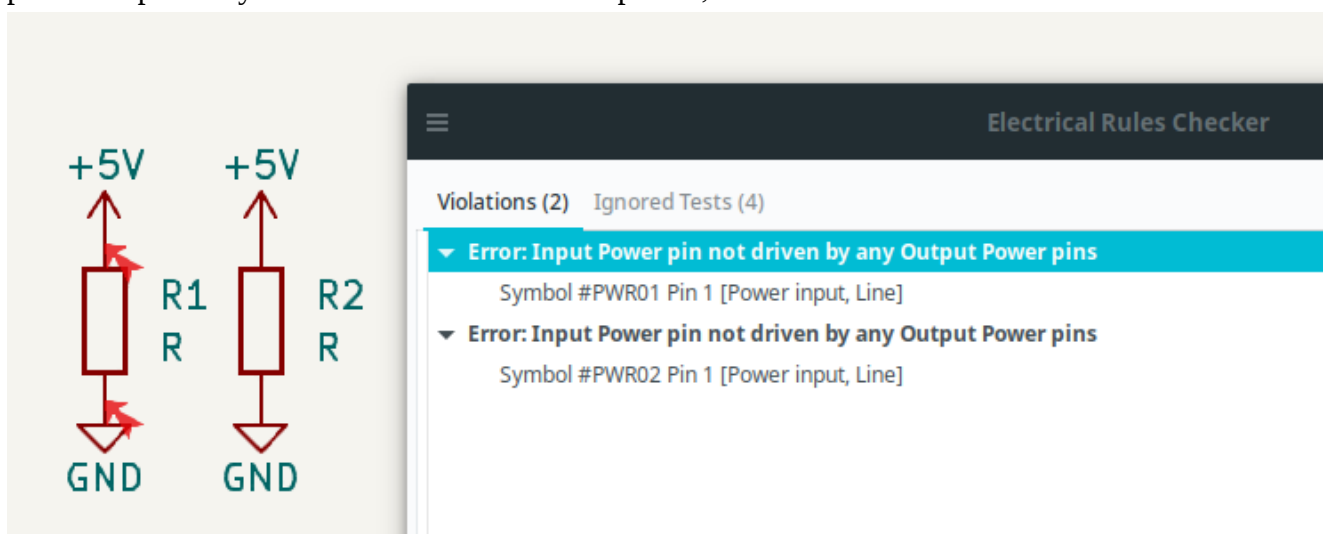


4.6.3. Power pins and power flags


It is common to have an "Input Power pin not driven by any Output Power pins" error on power pins, as shown in the example below, even though the power pins seem to be properly connected

to a power rail. This happens in designs where the power is provided through connectors or other components that are not marked as power outputs. In these cases ERC won't detect any Output Power pins connected to the net and will determine the Input Power pin is not driven by a power source.

For example, in the below schematic, VCC and GND are connected to a connector with passive pins, so the Input Power pins of U1 are not considered driven by a power source.

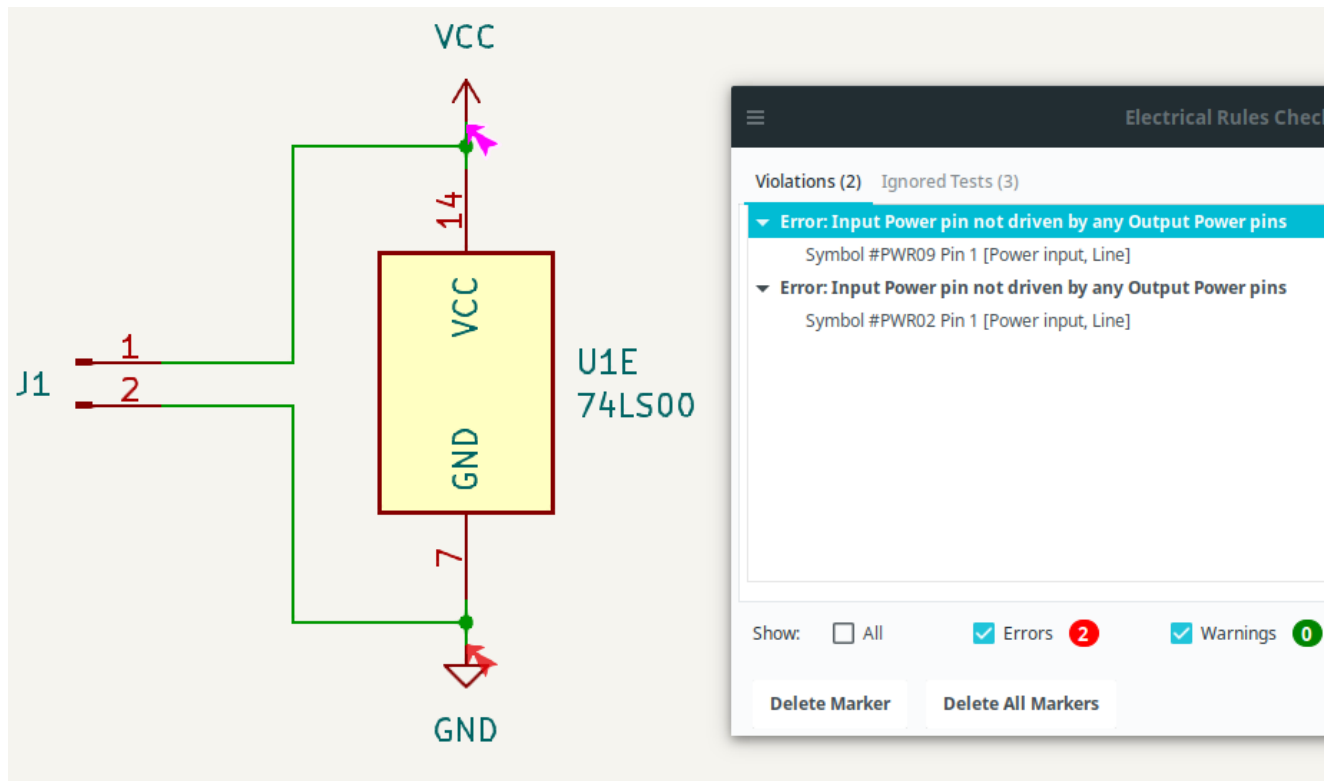


To avoid this warning, connect the net to PWR_FLAG symbol on such a power net as shown in the following example. The PWR_FLAG symbol is found in the power symbol library. Alternatively, connect any Output Power pin to the net; PWR_FLAG is simply a symbol with a single Output Power pin.

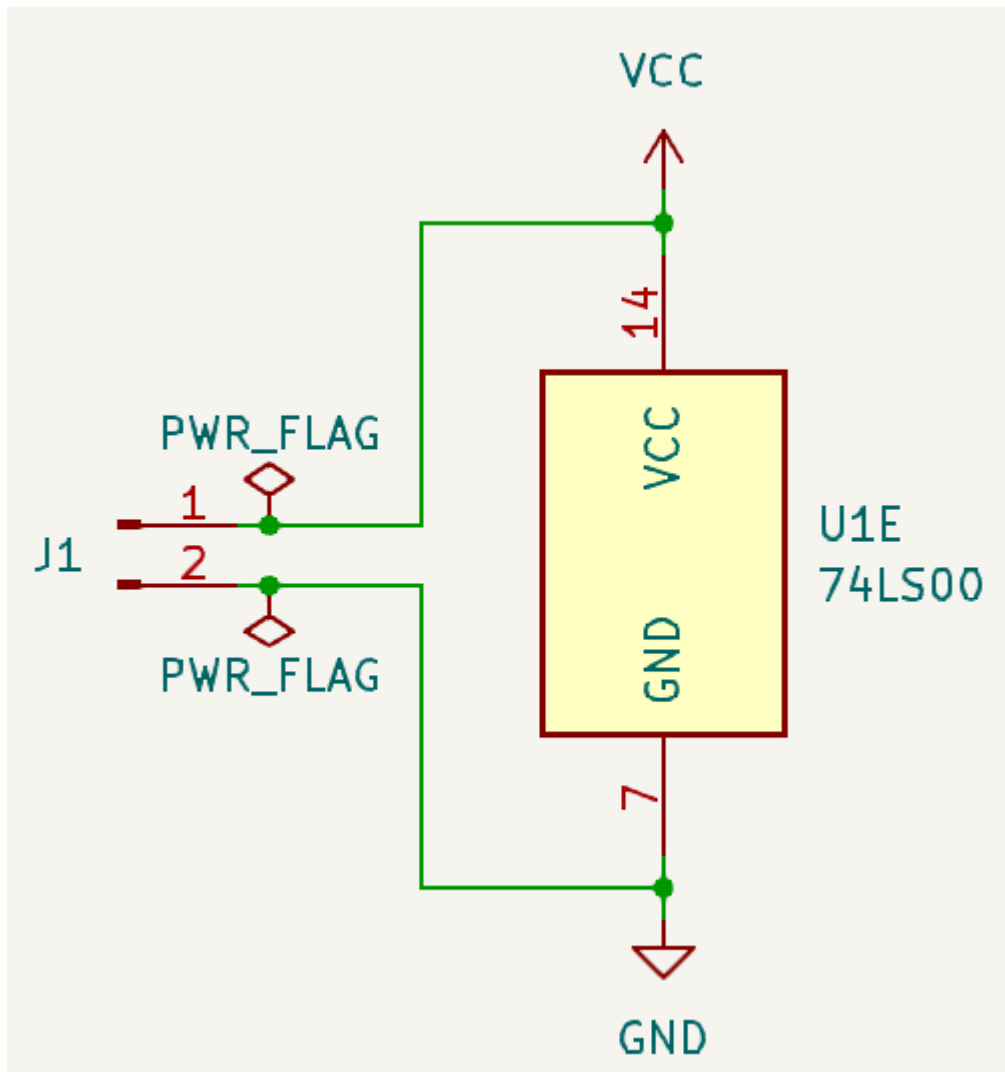

Ground nets often need a PWR_FLAG to be manually added, even when power rails do not, because voltage regulators have outputs declared as Output Power, but their ground pins are typically marked as Power Inputs. Therefore grounds are not considered driven by these voltage regulators. This is so multiple regulators can share a common ground without errors caused by two Output Power pins being connected together.

Power nets do not "jump" across components, so, components like passive inline filtering elements may need a PWR_FLAG on their downstream side to indicate that the net is still connected to a power source.

In the below schematic, although there is a PWR_FLAG on the nets connected to the connectors (VCC_IN and GND_IN), a PWR_FLAG is also needed to mark each of VCC and GND as power nets, because the filter FL1 has only Passive pins.

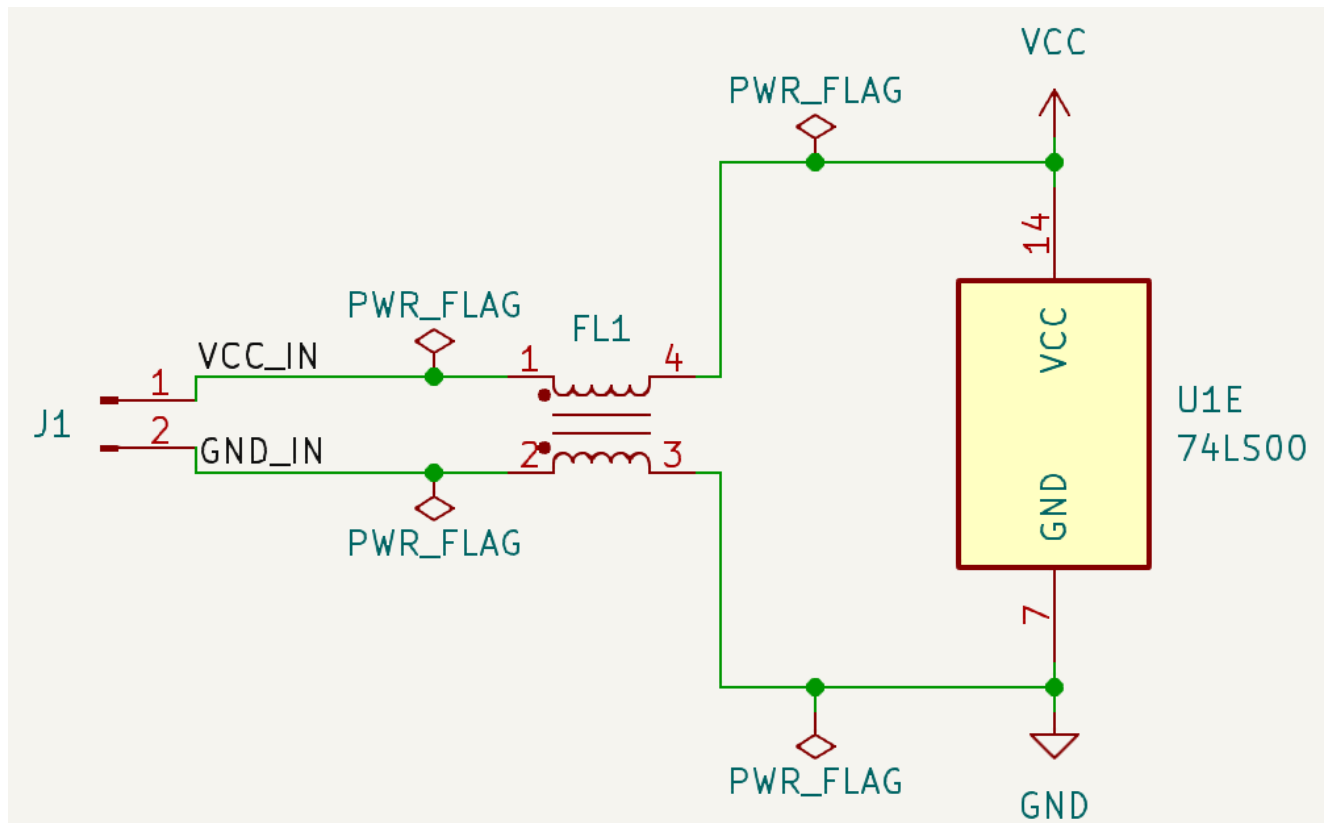


This would be the case also if the VCC_IN and GND_IN nets were connected to a symbol with Output Power pins. In fact, in this schematic, the PWR_FLAG symbols are on VCC_IN and GND_IN are not required, as there are no Input Power pins on those nets.


For more information about power pins and power flags, see the PWR_FLAG documentation.

4.6.4. ERC Configuration

The **Violation Severity** panel in Schematic Setup lets you configure what types of ERC messages should be reported as Errors, Warnings, or ignored.

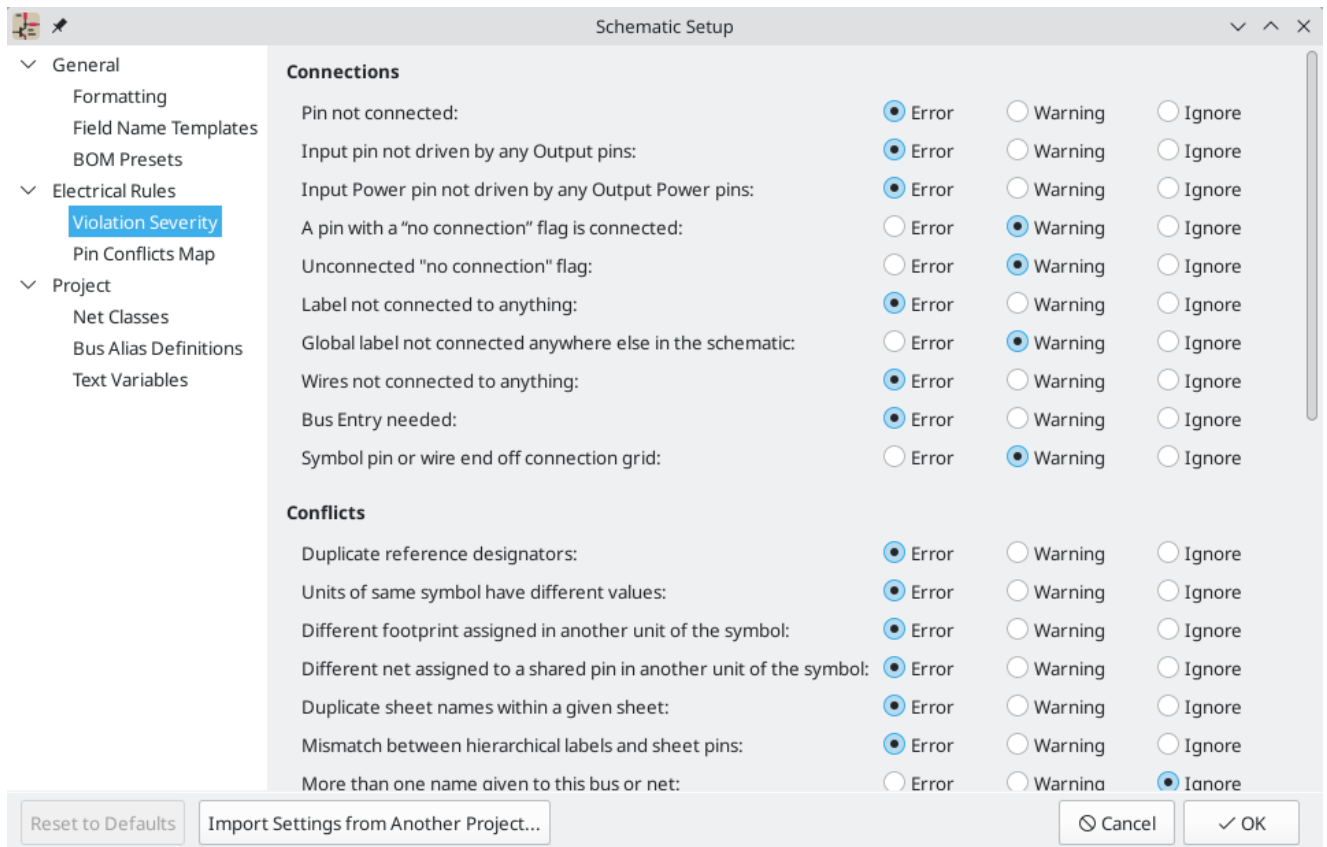

The **Pin Conflicts Map** panel in Schematic Setup allows you to configure connectivity rules to define electrical conditions for errors and warnings based on what types of pins are connected to each other. For example, by default an error is produced when an output pin is connected to another output pin.

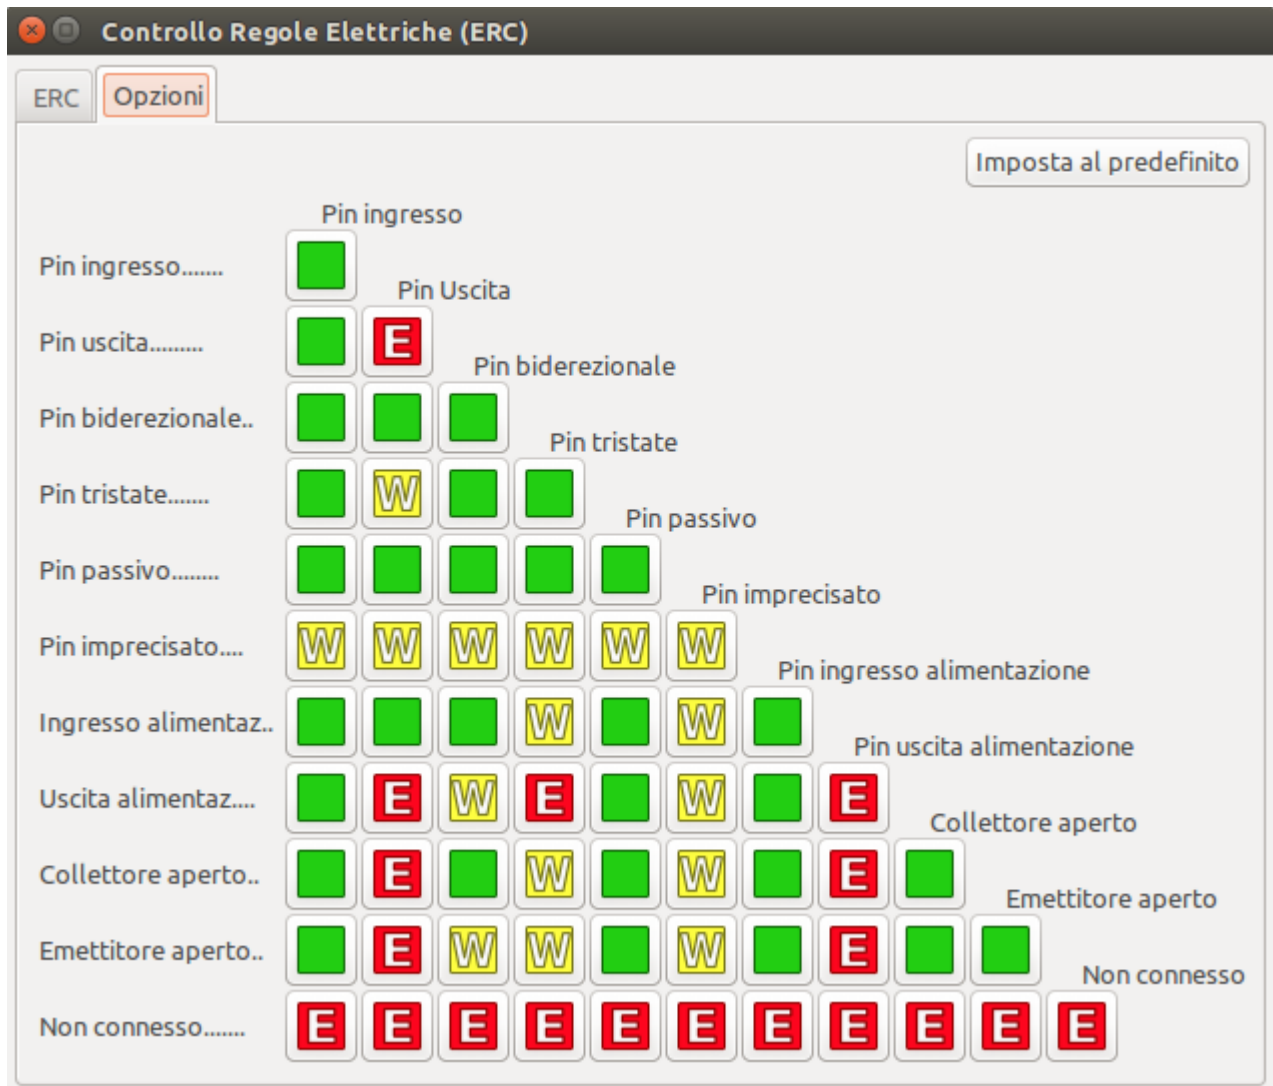

Rules can be changed by clicking on the desired square of the matrix, causing it to cycle through the choices: allowed, warning, error.

4.6.5. List of ERC checks

The table below lists the electrical rules that KiCad checks and the default violation severity for each check. All severities are configurable.

Connections ERC checks

These ERC checks look for issues with wire and label connections in the schematic.

Violation	Description	Default Severity
Pin not connected	This violation occurs when a symbol pin is not connected to a net, unless the pin has a no-connect flag or has electrical type Unconnected.	Error
Input pin not driven by any Output pins	This violation occurs when a symbol pin with electrical type Input is not connected to a driving pin. Driving pins are pins with the type output,	Error

Violation	Description	Default Severity
	bidirectional, tristate, power output, or passive pins.	
Input Power pin not driven by any Output Power pins	This violation occurs when a symbol pin with electrical type Input Power is not connected to an Output Power pin. A common cause of this violation is described above.	Error
A pin with a "no connection" flag is connected	The violation occurs when a symbol pin with a no connection flag is connected to a net.	Warning
Unconnected "no connection" flag	This violation occurs when a No connection flag is not connected to a pin or label.	Warning
Label not connected to anything	This violation occurs when a global, hierarchical, local, or directive label is not connected to a pin or another label.	Error
Global label not connected anywhere else in the schematic	This violation occurs when there are fewer than two symbol pins on a net with a global label (if there are fewer than two pins, then the label isn't being used to connect anything as it is only connected to a single symbol pin).	Warning
Global label only appears once in the schematic	This violation occurs when a global label only appears once in the schematic, meaning that the label is not forming any global connections. This violation is ignored by default to allow users to use global labels to label nets, even if the net does not connect anywhere else.	Ignore
Local and global labels have the same name	This violation occurs when a local label has the same name as a global label. If these labels are on separate sheets, they will not connect, although they may have been intended to connect. Note that while a local label and a global label with the same name won't connect if they are on different sheets, they will connect if they are on the same sheet.	Warning
Wires not connected to anything	This violation occurs when a wire is not connected to any pin or label.	Error
Bus Entry needed	This violation only applies to projects imported from EAGLE projects. It indicates places where the importer was unable to automatically add bus entries to the imported schematic, so you must add them by hand.	Error
Symbol pin or wire end off connection grid	This violation occurs when a symbol pin or wire end is not aligned to the connection grid. Symbol pins and wire ends need to be aligned to the grid in order to connect to each other. The grid used for this check is defined by the connection grid	Warning

Violation	Description	Default Severity
	setting in Schematic Setup → Formatting → Connection grid .	
Four connection points are joined together	This violation occurs when wires join in a four-way (cross) junction. Such junctions are sometimes considered harmful because it can be unclear if all four wires are intended to be joined or if two wires were intended to cross without a junction.	Ignore
Multiple pins with the same pin number	This violation occurs when two pins in the same symbol have the same pin number. Symbol pins must be uniquely numbered within a symbol, and therefore this violation is always an error.	Error (not configurable)
Label connects more than one wire	This violation occurs when a label anchor connects to two wires (where two wires cross without connecting). In this situation is not possible to determine which net the label should connect to.	Warning
Unconnected wire endpoint	This violation occurs when a wire endpoint is not connected to anything.	Warning

Conflicts ERC checks

These ERC checks look for conflicting information in symbols, sheets, and buses.

Violation	Description	Default Severity
Duplicate reference designators	This violation occurs when two symbols have the same reference designator.	Error
Units of same symbol have different values	This violation occurs when units of a single symbol have different values.	Error
Different footprint assigned in another unit of the symbol	This violation occurs when units of a single symbol have different assigned footprints.	Error
Different net assigned to a shared pin in another unit of the symbol	This violation occurs when a pin that is shared between multiple units of a symbol is not connected to the same net in each unit.	Error
Duplicate sheet names within a given sheet	This violation occurs when two hierarchical sheets in the same parent sheet have the same name.	Error
Mismatch between hierarchical labels and sheet pins	This violation occurs when a hierarchical label does not have a corresponding hierarchical sheet pin in the parent sheet, or a hierarchical sheet pin does not have a corresponding hierarchical label in the child sheet.	Error
More than one name given to this bus or net	This violation occurs when a net has multiple labels attached. Nets can only have a single name,	Warning

Violation	Description	Default Severity
	so if multiple labels are attached to a net, one name will be selected and used as the canonical name.	
Conflict between bus alias definitions across schematic sheets	This violation occurs when a bus alias has different members in different sheets. If the same bus alias name is used in multiple sheets, the members of the alias must be the same for each sheet.	Error
Buses are graphically connected but share no bus members	This violation occurs when buses that are graphically connected do not have bus members in common.	Error
Invalid connection between bus and net items	This violation occurs when a bus is connected to a net item, such as a wire, a label referring to a single net, or a sheet pin referring to a single net. Labels and sheet pins can only be connected to buses if they refer to buses rather than individual signals.	Error
Net is graphically connected to a bus but not a bus member	This violation occurs when a net is connected to a bus with a bus entry but the net is not a member of that bus.	Warning

Miscellaneous ERC checks

These ERC checks look for other miscellaneous issues in the schematic.

Violation	Description	Default Severity
Symbol is not annotated	This violation occurs when a symbol is not annotated with a unique reference designator.	Error
Unresolved text variable	This violation occurs when a text variable (<code>\${variable_name}</code>) is used without being defined in Schematic Setup.	Error
SPICE model issue	This violation occurs when a SPICE model has a syntax error or other problem.	Ignore
Labels are similar (lower/upper case difference only)	This violation occurs when two labels are similar and differ only by the case of some letters. This may be a typo causing two labels to be disconnected when they are intended to be connected.	Warning
Power pins are similar (lower/upper case difference only)	This violation occurs when the net names driven by two global power pins are similar and differ only by the case of some letters. This may be a typo causing two global power pins to be disconnected when they are intended to be connected.	Warning

Violation	Description	Default Severity
Power pin and label are similar (lower/upper case difference only)	This violation occurs when a label and the net name driven by a global power pin are similar and differ only by the case of some letters. This may be a typo causing two global power pins to be disconnected when they are intended to be connected.	Warning
Library symbol issue	This violation occurs when one of several symbol library issues is detected: - The symbol library for a symbol is not included and enabled in the library table - A symbol in the schematic does not exist in its symbol library	Warning
Symbol doesn't match copy in library	This violation occurs when a symbol in the schematic is different than the library version of the symbol. You can compare between the schematic and library versions of the symbol using the Compare Symbol with Library tool, which is available by right clicking the violation in the ERC window. If desired, you can update the schematic symbol to match the library symbol.	Warning
Footprint link issue	This violation occurs when one of several footprint assignment issues is detected: - The footprint assignment for a symbol is not a valid footprint identifier - The footprint library given in a symbol's footprint assignment is not included and enabled in the library table - The footprint assigned to a symbol does not exist in the specified footprint library	Warning
Assigned footprint doesn't match footprint filters	This violation occurs when the footprint assigned to a symbol does not match the symbol's footprint filters. If the symbol doesn't have any footprint filters, no violation occurs.	Warning
Symbol has more units than are defined	This violation occurs when a symbol has more units placed in the schematic than are defined in the symbol. Units in the schematic must correspond exactly to the symbol definition.	Error
Symbol has units that are not placed	This violation occurs when a unit from a multi-unit symbol is not placed in the schematic. Unplaced units will not be connected to anything.	Warning

Violation	Description	Default Severity
Symbol has input pins that are not placed	This violation occurs when a multi-unit symbol has units with input pins that are not placed, so those input pins will not be connected to anything.	Warning
Symbol has bidirectional pins that are not placed	This violation occurs when a multi-unit symbol has units with bidirectional pins that are not placed, so those input pins will not be connected to anything.	Warning
Symbol has power input pins that are not placed	This violation occurs when a multi-unit symbol has units with power input pins that are not placed, so those input pins will not be connected to anything.	Error
Conflict problem between pins	This violation occurs when a connection between pins is not allowed per the allowed connections in the Pin Conflicts Map.	From Pin Conflicts Map

4.6.6. User-definable ERC violations

You can manually trigger schematic ERC warnings or errors using special text variables. These items will appear as errors or warnings when ERC runs. This can be useful to flag items for later followup or review.

To cause an ERC violation, use the text variable `${ERC_ERROR <violation name>}` or `${ERC_WARNING <violation name>}` depending on whether an error or warning is desired. You can place this in a text item, text box, or field, including symbol fields, sheet fields, and label fields. When ERC runs, this will generate a ERC violation with the given violation name. These text variables resolve to an empty string in the schematic, and any text after the braces is included in the ERC violation's description. The text variable must be placed at the start of the text object in order to trigger a violation.

For example, a text item containing `${ERC_ERROR TODO}Calculate resistor value` will appear in the board as just the text "Calculate resistor value", and will generate an ERC error named "TODO" with "Calculate resistor value" in the description.

4.6.7. File rapporto ERC

An ERC report file can be generated and saved by clicking the **Save...** button in the ERC dialog. The file extension for ERC report files is `.rpt`. An example ERC report file is given below.

```
ERC report (Fri 21 Oct 2022 02:07:05 PM EDT, Encoding UTF8)

***** Sheet /
[pin_not_driven]: Input pin not driven by any Output pins
; Severity: error
@(149.86 mm, 60.96 mm): Symbol U1B [74LS00] Pin 4 [, Input, Line]
[pin_not_connected]: Pin not connected
; Severity: error
@(149.86 mm, 60.96 mm): Symbol U1B [74LS00] Pin 4 [, Input, Line]
```

```
[pin_not_connected]: Pin not connected
; Severity: error
  @(149.86 mm, 66.04 mm): Symbol U1B [74LS00] Pin 5 [, Input, Line]
[pin_to_pin]: Pins of type Output and Output are connected
; Severity: error
  @(165.10 mm, 63.50 mm): Symbol U1B [74LS00] Pin 6 [, Output, Inverted]
  @(165.10 mm, 46.99 mm): Symbol U1A [74LS00] Pin 3 [, Output, Inverted]
[pin_not_driven]: Input pin not driven by any Output pins
; Severity: error
  @(149.86 mm, 66.04 mm): Symbol U1B [74LS00] Pin 5 [, Input, Line]

** ERC messages: 5  Errors 5  Warnings 0
```

Capitolo 5. Assigning Footprints

Before routing a PCB, footprints need to be selected for every component that will be assembled on the board. Footprints define the copper connections between physical components and the routed traces on a circuit board.

Some symbols come with footprints pre-assigned, but for many symbols there are multiple possible footprints, so the user needs to select the appropriate one.

KiCad offers several ways to assign footprints:

- Proprietà del simbolo
 - Symbol Properties Dialog
 - Symbol Fields Table
- While placing symbols
- Strumento di assegnamento impronte

Each method will be explained below. Which to use is a matter of preference; one method may be more convenient depending on the situation. All of these methods are equivalent in that they store the name of the selected footprint in the symbol's Footprint field.


Nota

The Footprint Library Table needs to be configured before footprints can be assigned. For information on configuring the Footprint Library Table, please see the PCB Editor manual.

5.1. Assigning Footprints in Symbol Properties

A symbol's Footprint field can be edited directly in the symbol's Properties window.

Assigning Footprints

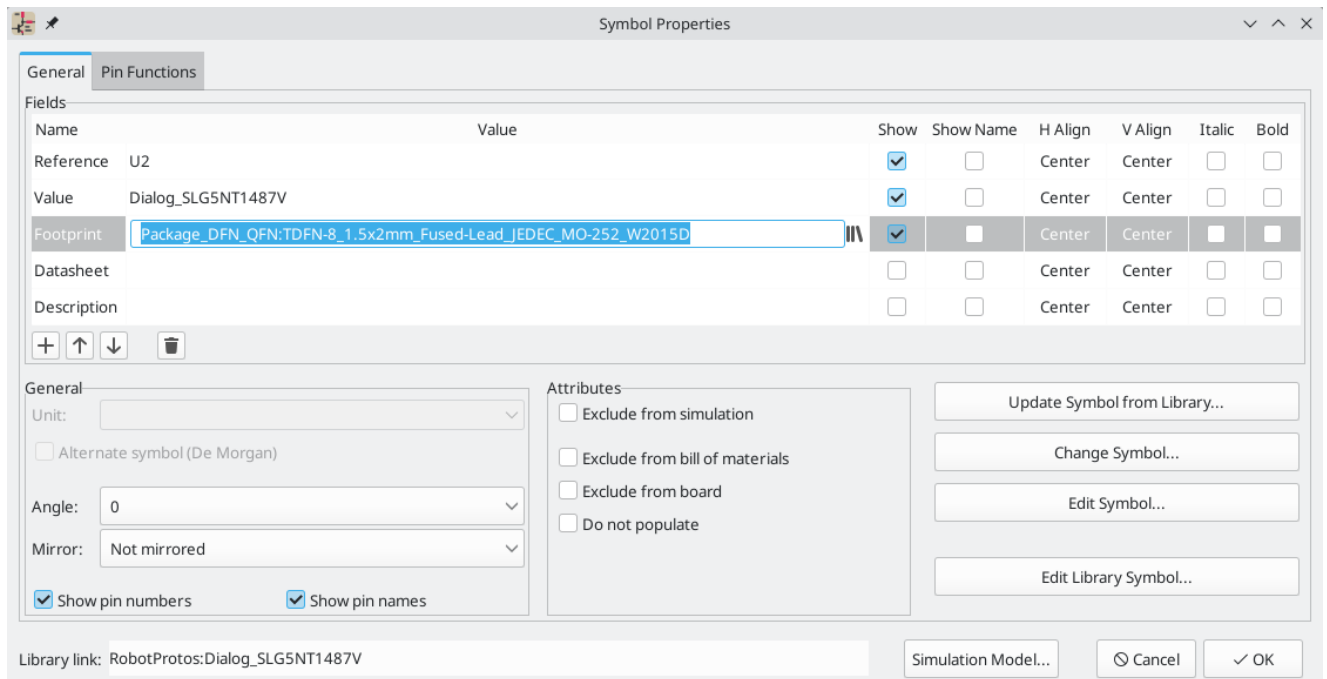

Clicking the



button in the Footprint field opens the Footprint Chooser, which shows the available footprints sorted by footprint libraries.

The Footprint Chooser filters footprints by name, description, and keywords, as well as any fields that are shown as columns, according to what you type into the search field. * and ? wildcards are available. The footprint search behaves the same as in the symbol chooser dialog.

If the symbol defines any footprint filters, the **apply footprint filters** option can be used to hide footprints that don't match those filters. If the **filter by pin count** option is selected, only footprints that match the symbol's pincount will be listed. You can choose to sort search results alphabetically or by best match by clicking on the



button.


Single clicking a footprint name selects the footprint and displays it in the preview pane on the right. You can switch between a 2D and 3D preview of the footprint by clicking the



and



buttons. Double clicking on a footprint closes the chooser and sets the symbol's Footprint field to the selected footprint.

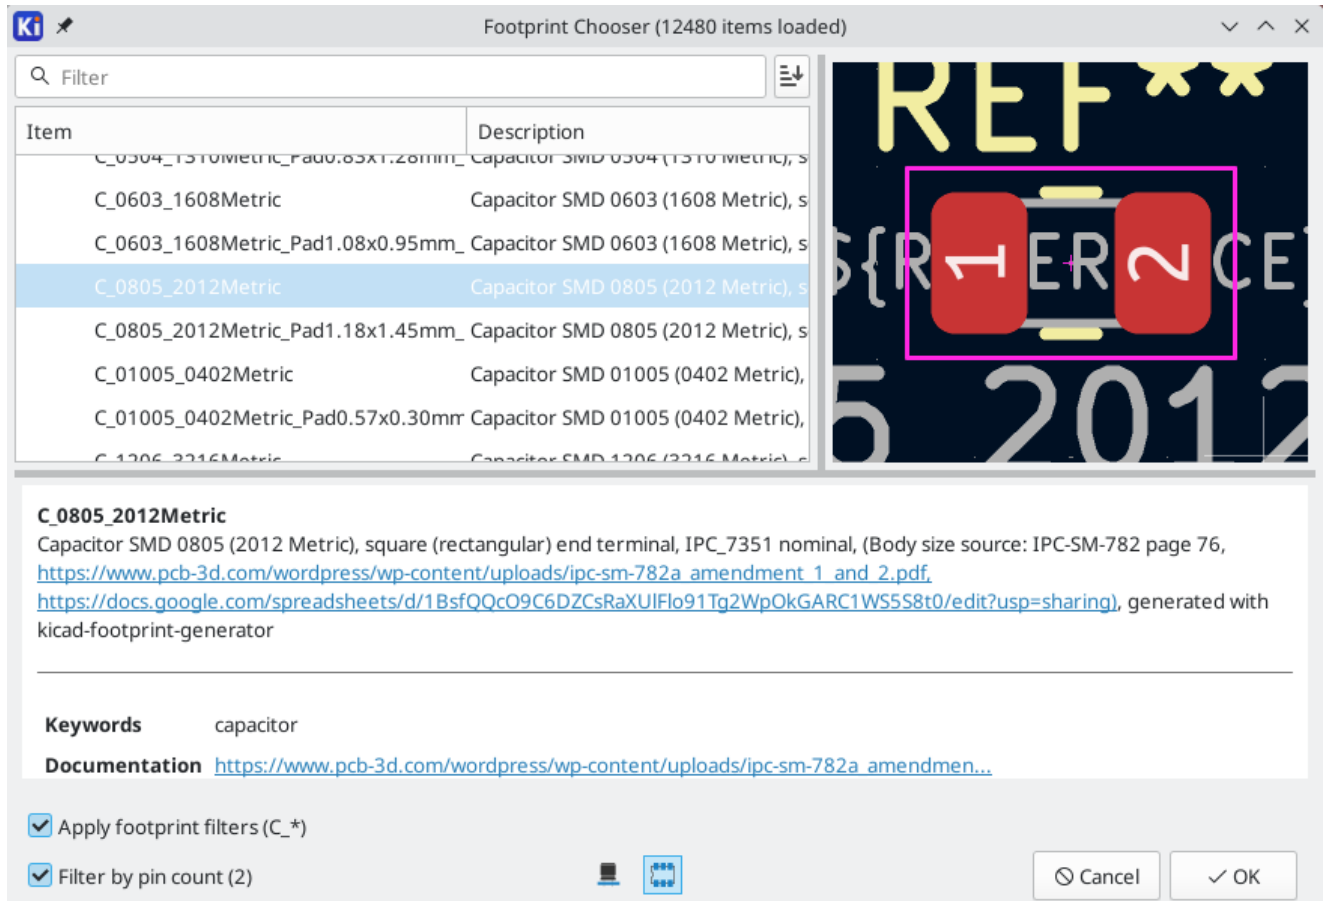

5.1.1. Assigning Footprints with the Symbol Fields Table


Rather than editing the properties of each symbol individually, the Symbol Fields Table can be used to view and edit the properties of all symbols in the design in one place. This includes assigning footprints by editing the Footprint field of each symbol.

The Symbol Fields Table is accessed with **Tools** → **Edit Symbol Fields...**, or with the



button on the top toolbar.

The Footprint field behaves the same here as in the Symbol Properties window: it can be edited directly, or footprints can be selected visually with the Footprint Library Browser.

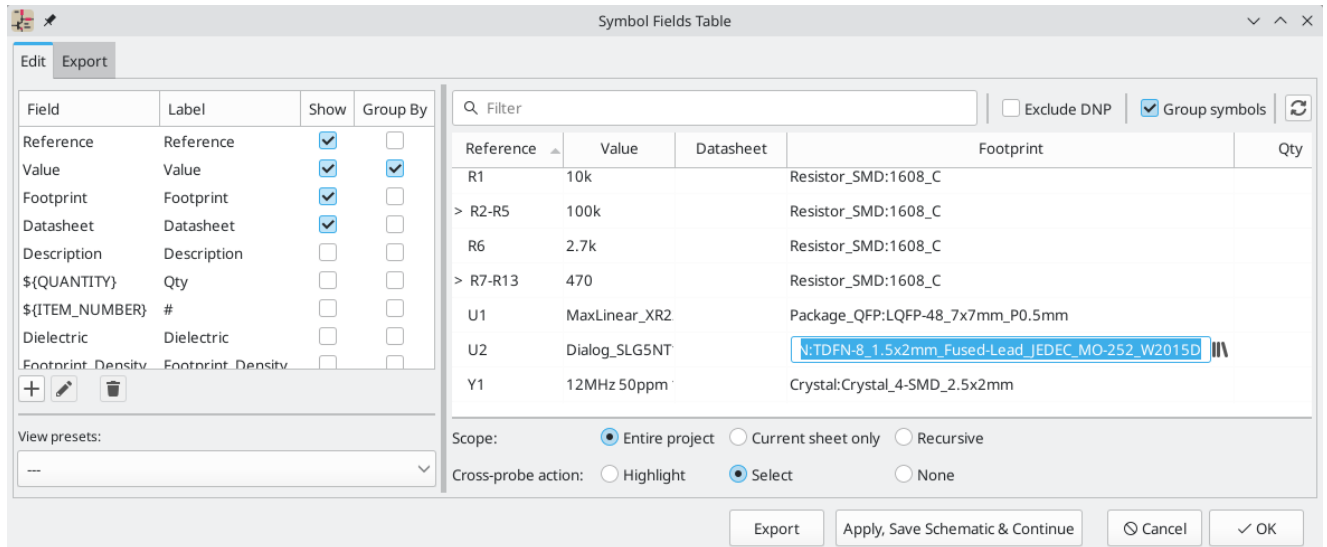


For more information on the Symbol Fields Table, see the section on editing symbol properties.

5.2. Assigning Footprints While Placing Symbols

Footprints can be assigned to symbols when the symbol is first added to the schematic.

Some symbols are defined with a default footprint. These symbols will have this footprint preassigned when they are added to the schematic. If a symbol has a default footprint, the footprint will be graphically previewed in the symbol chooser dialog when the symbol is selected. For symbols without a default symbol defined, the footprint dropdown will say "No default footprint", and the footprint preview canvas will say "No footprint specified".

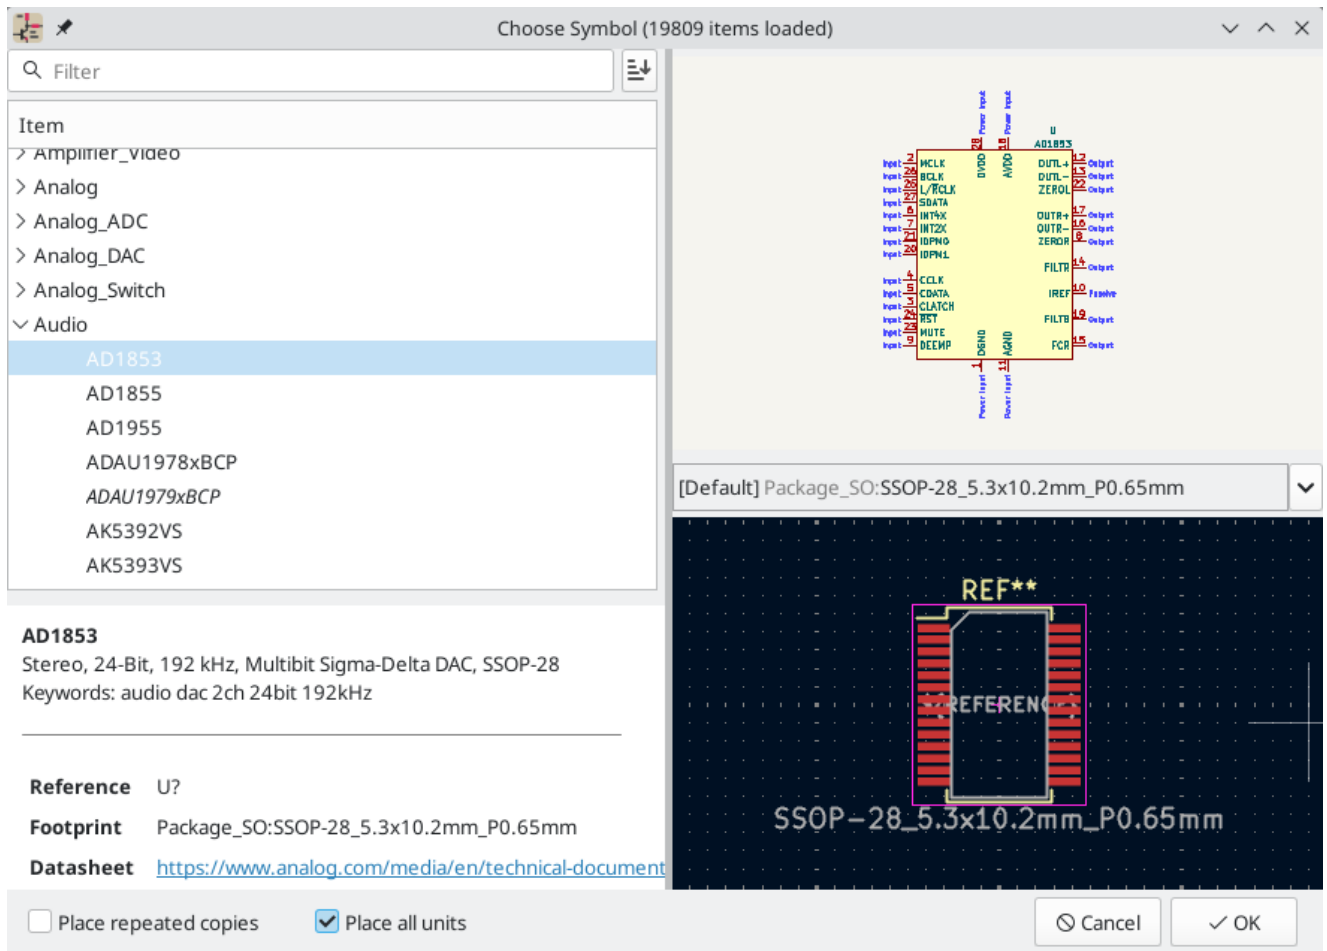

Symbols can have footprint filters that specify which footprints are appropriate to use with that symbol. If footprint filters are defined for the selected symbol, all footprints that match the footprint filters will appear as options in the footprint dropdown. The selected footprint will be displayed in the preview canvas and will be assigned to the symbol when the symbol is added to the schematic.

Nota

Footprint options will not appear in the footprint dropdown unless the footprint libraries are loaded. Footprint libraries are loaded the first time the Footprint Editor or Footprint Library Browser are opened in a session.

For more information on footprint filters, see the Symbol Editor Documentation.

5.3. Assigning Footprints with the Footprint Assignment Tool

The Footprint Assignment Tool allows you to associate symbols in your schematic to footprints used when laying out the printed circuit board. It provides footprint list filtering, footprint viewing, and 3D component model viewing to help ensure the correct footprint is associated with each component.

Components can be assigned to their corresponding footprints manually or automatically by creating equivalence files (.equ files). Equivalence files are lookup tables associating each component with its footprint.


Run the tool with **Tools** → **Assign Footprints...**, or by clicking the



icon in the top toolbar.

5.3.1. Footprint Assignment Tool Overview

The image below shows the main window of the Footprint Assignment Tool.

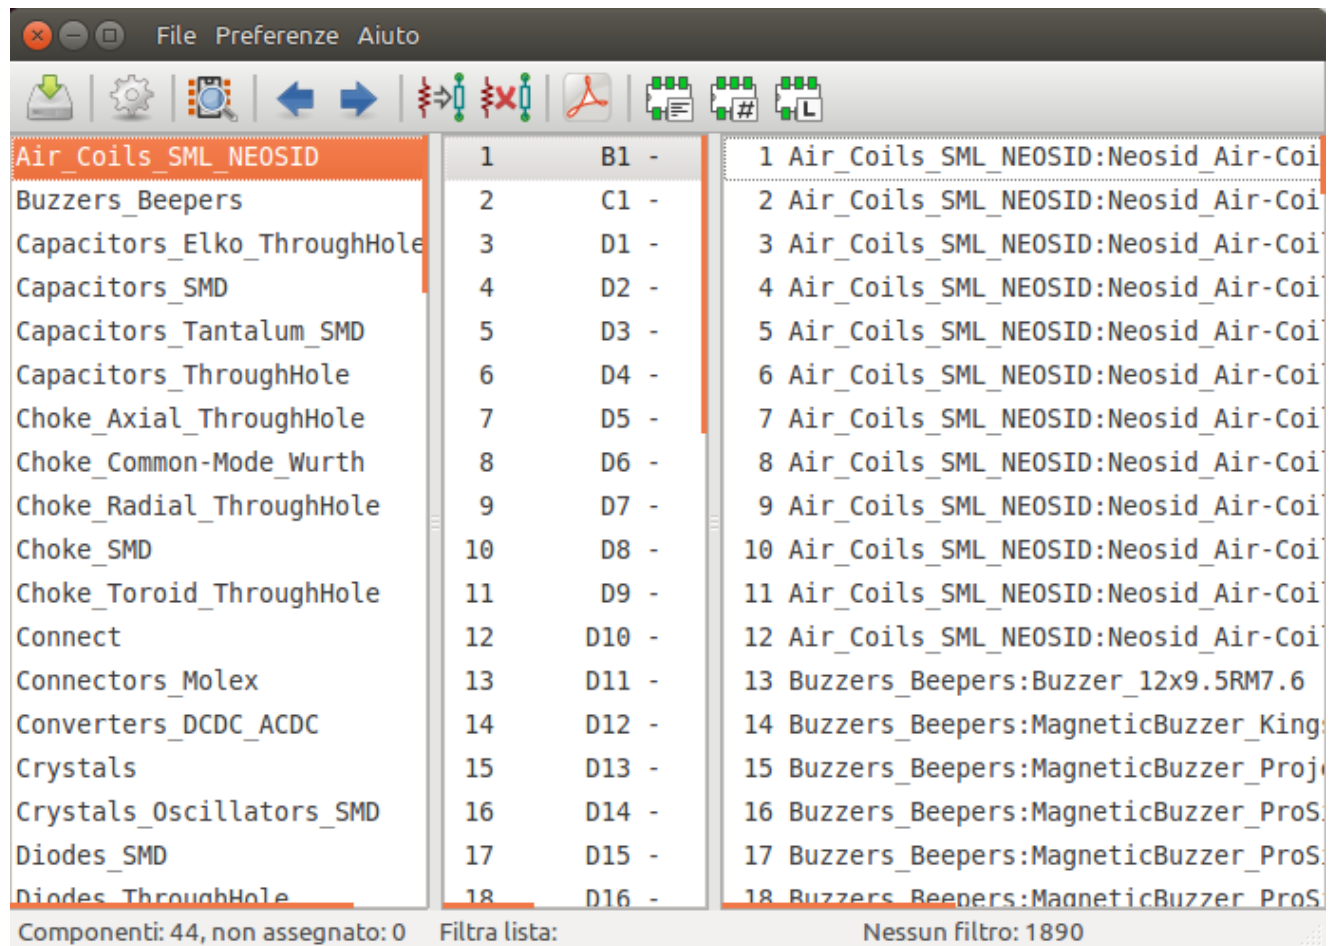

- The left pane contains the list of available footprint libraries associated with the project.
- The center pane contains the list of symbols in the schematic.
- The right pane contains the list of available footprints loaded from the project footprint libraries.
- The bottom pane describes the filters that have been applied to the footprint list and prints information about the footprint selected in the rightmost pane.

The top toolbar contains the following commands:

	Transfer the current footprint associations to the schematic.
	Edit the global and project footprint library tables.
	View the selected footprint in the footprint viewer.

	Select the previous symbol without a footprint association.
	Select the next symbol without a footprint association.
	Undo last edit.
	Redo last edit.
	Perform automatic footprint association using an equivalence file.
	Delete all footprint assignments.
	Filter footprint list by footprint filters defined in the selected symbol.
	Filter footprint list by pin count of the selected symbol.
	Filter footprint list by selected library.

The following table lists the keyboard commands for the Footprint Assignment Tool:

Right Arrow / Tab	Activate the pane to the right of the currently activated pane. Wrap around to the first pane if the last pane is currently activated.
Left Arrow	Activate the pane to the left of the currently activated pane. Wrap around to the last pane if the first pane is currently activated.
Up Arrow	Select the previous item of the currently selected list.
Down Arrow	Select the next item of the currently selected list.
Page Up	Select the item one full page upwards of the currently selected item.
Page Down	Select the item one full page downwards of the currently selected item.
Home	Select the first item of the currently selected list.
End	Select the last item of the currently selected list.

5.3.2. Manually Assigning Footprints with the Footprint Assignment Tool

To manually associate a footprint with a component, first select a component in the component (middle) pane. Then select a footprint in the footprint (right) pane by double-clicking on the name of the desired footprint. The footprint will be assigned to the selected component, and the next component without an assigned footprint is automatically selected.

Nota

If no footprints appear in the footprint pane, check that the footprint filter options are correctly applied.

When all components have footprints assigned to them, click the **OK** button to save the assignments and exit the tool. Alternatively, click **Cancel** to discard the updated assignments, or **Apply, Save Schematic & Continue** to save the new assignments without exiting the tool.


Filtro dell'elenco impronte

There are four filtering options which restrict which footprints are displayed in the footprint pane. The filtering options are enabled and disabled with three buttons and a textbox in the top toolbar.

- 
 : Activate filters that can be defined in each symbol. For example, an opamp symbol might define filters that show only SOIC and DIP footprints.
- 
 : Only show footprints that match the selected symbol's pin count.
- 
 : Only show footprints from the library selected in the left pane.
- Entering text in the textbox hides footprints that do not match the text. This filter is disabled when the box is empty.

When all filters are disabled, the full footprint list is shown.

The applied filters are described in the bottom pane of the window, along with the number of footprints that meet the selected filters. For example, when the symbol's footprint filters and pin count filters are enabled, the bottom pane prints the footprint filters and pin count:

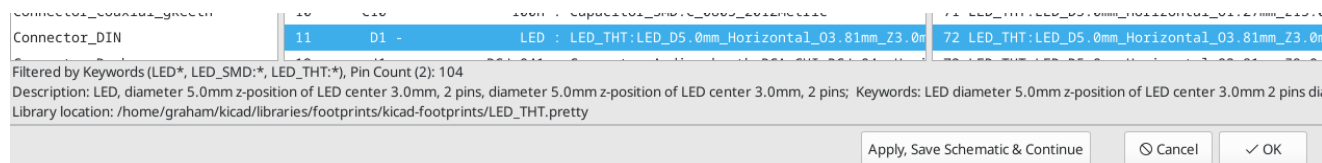


Multiple filters can be used at once to help narrow down the list of possibly appropriate footprints in the footprint pane. The symbols in KiCad's standard library define footprint filters that are designed to be used in combination with the pin count filter.

5.3.3. Automatically Assigning Footprints with the Footprint Assignment Tool

The Footprint Assignment Tool allows you to store footprint assignments in an external file and load the assignments later, even in a different project. This allows you to automatically associate symbols with the appropriate footprints.

The external file is referred to as an equivalence file, and it stores a mapping of a symbol value to a corresponding footprint. Equivalence files typically use the .equ file extension. Equivalence files are plain text files with a simple syntax, and must be created by the user using a text editor. The syntax is described below.

You can select which equivalence files to use by clicking **Preferences** → **Manage Footprint Association Files** in the Footprint Assignment Tool.

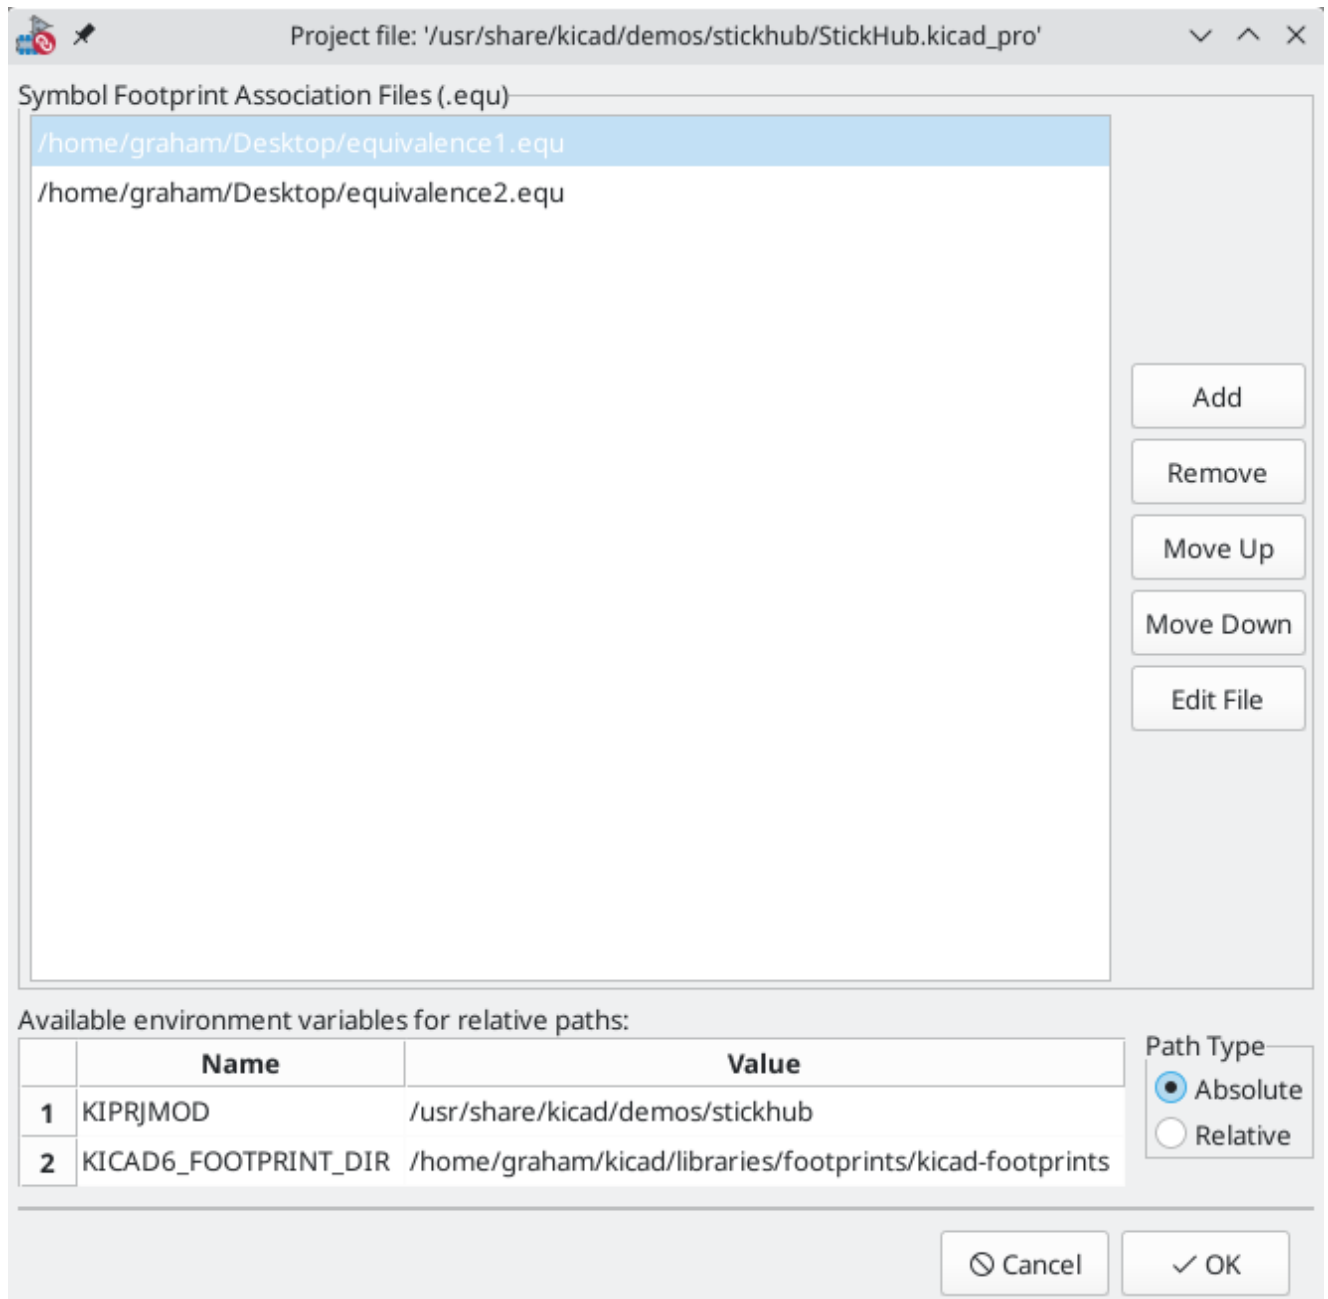

- Add new equivalence files by clicking the **Add** button.
- Remove the selected equivalence file by clicking the **Remove** button.
- Change the priority of equivalence files by clicking the **Move Up** and **Move Down** buttons.
If a symbol's value is found in multiple equivalence files, the footprint from the last matching equivalence file will override earlier equivalence files.
- Open the selected equivalence file by clicking the **Edit File** button.

Relevant environment variables are shown at the bottom of the window. When the **Relative** path option is checked, these environment variables will automatically be used to make paths to selected equivalence files relative to the project or footprint libraries.

Once the desired equivalence files have been loaded in the correct order, automatic footprint association can be performed by clicking the



button in the top toolbar of the Footprint Assignment Tool.

All symbols with a value found in a loaded equivalence file will have their footprints automatically assigned. However, symbols that already have footprints assigned will not be updated.

Formato file delle equivalenze

Equivalence files consist of one line for each symbol value. Each line has the following structure:

```
'<symbol value>' '<footprint library>:<footprint name>'
```

Each name/value must be surrounded by single quotes (') and separated by one or more spaces. Lines starting with # are comments.

For example, if you want all symbols with the value LM4562 to be assigned the footprint Package_S0:S0IC-8_3.9x4.9_P1.27mm, the line in the equivalence file should be:

```
'LM4562' 'Package_S0:S0IC-8_3.9x4.9_P1.27mm'
```

Ecco un esempio di file di equivalenze:

```
#integrated circuits (smd):
'74LV14' 'Package_S0:S0IC-14_3.9x8.7mm_P1.27mm'
'EL7242C' 'Package_S0:S0IC-8_3.9x4.9_P1.27mm'
'DS1302N' 'Package_S0:S0IC-8_3.9x4.9_P1.27mm'
'LM324N' 'Package_S0:S0IC-14_3.9x8.7mm_P1.27mm'
'LM358' 'Package_S0:S0IC-8_3.9x4.9_P1.27mm'
'LTC1878' 'Package_S0:MSOP-8_3x3mm_P0.65mm'
'24LC512I/SM' 'Package_S0:S0IC-8_3.9x4.9_P1.27mm'
'LM2903M' 'Package_S0:S0IC-8_3.9x4.9_P1.27mm'
'LT1129_S08' 'Package_S0:S0IC-8_3.9x4.9_P1.27mm'
'LT1129CS8-3.3' 'Package_S0:S0IC-8_3.9x4.9_P1.27mm'
'LT1129CS8' 'Package_S0:S0IC-8_3.9x4.9_P1.27mm'
'LM358M' 'Package_S0:S0IC-8_3.9x4.9_P1.27mm'
'TL7702BID' 'Package_S0:S0IC-8_3.9x4.9_P1.27mm'
'TL7702BCD' 'Package_S0:S0IC-8_3.9x4.9_P1.27mm'
'U2270B' 'Package_S0:S0IC-16_3.9x9.9_P1.27mm'


#regulators
'LP2985LV' 'Package_T0_S0T_SMD:S0T-23-5_HandSoldering'
```

5.3.4. Visualizzazione dell'impronta corrente

The Footprint Assignment Tool contains a footprint viewer. Clicking the



button in the top toolbar launches the footprint viewer and shows the selected footprint.

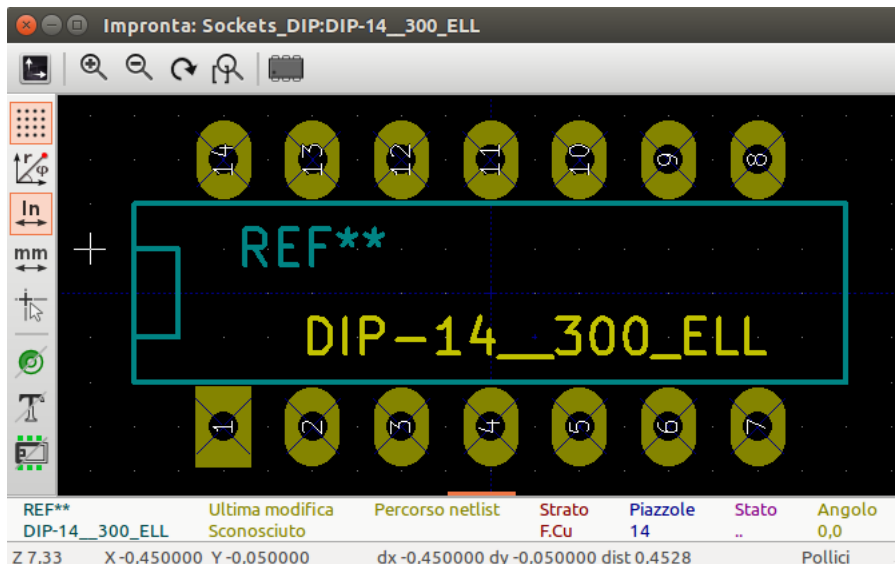

The top toolbar contains the following commands:

	Refresh view
	Zoom in
	Zoom out
	Zoom to fit drawing in display area
	Show 3D viewer

The left toolbar contains the following commands:

	Use the select tool
	Interactively measure between two points
	Display grid dots or lines
	Switch between polar and cartesian coordinate systems
	Use inches
	Display coordinates in mils (1/1000 of an inch)
	Display coordinates in millimeters
	Toggle display of full-window crosshairs
	Toggle between drawing pads in sketch or normal mode
	Toggle between drawing pads in normal mode or outline mode
	Toggle between drawing text in normal mode or outline mode
	Toggle between drawing graphic lines in normal mode or outline mode

Visualizzazione del modello 3D corrente


Clicking the



button opens the footprint in the 3D model viewer.

Nota

If a 3D model does not exist for the current footprint, only the footprint itself will be shown in the 3D Viewer.

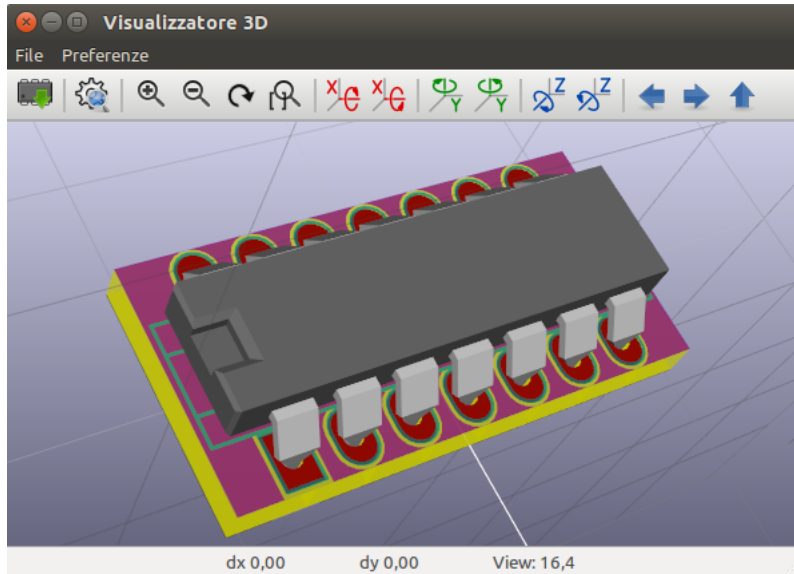

The 3D Viewer is described in the PCB Editor manual.

Capitolo 6. Forward and back annotation

6.1. Update PCB from Schematic (forward annotation)


Use the Update PCB from Schematic tool to sync design information from the Schematic Editor to the Board Editor. The tool can be accessed with **Tools** → **Update PCB from Schematic** (kbd:[F8]) in both the schematic and board editors. You can also use the



icon in the top toolbar of the Board Editor. This process is often called forward annotation.

Nota

Update PCB from Schematic is the preferred way to transfer design information from the schematic to the PCB. In older versions of KiCad, the equivalent process was to export a netlist from the Schematic Editor and import it into the Board Editor. It is no longer necessary to use a netlist file.

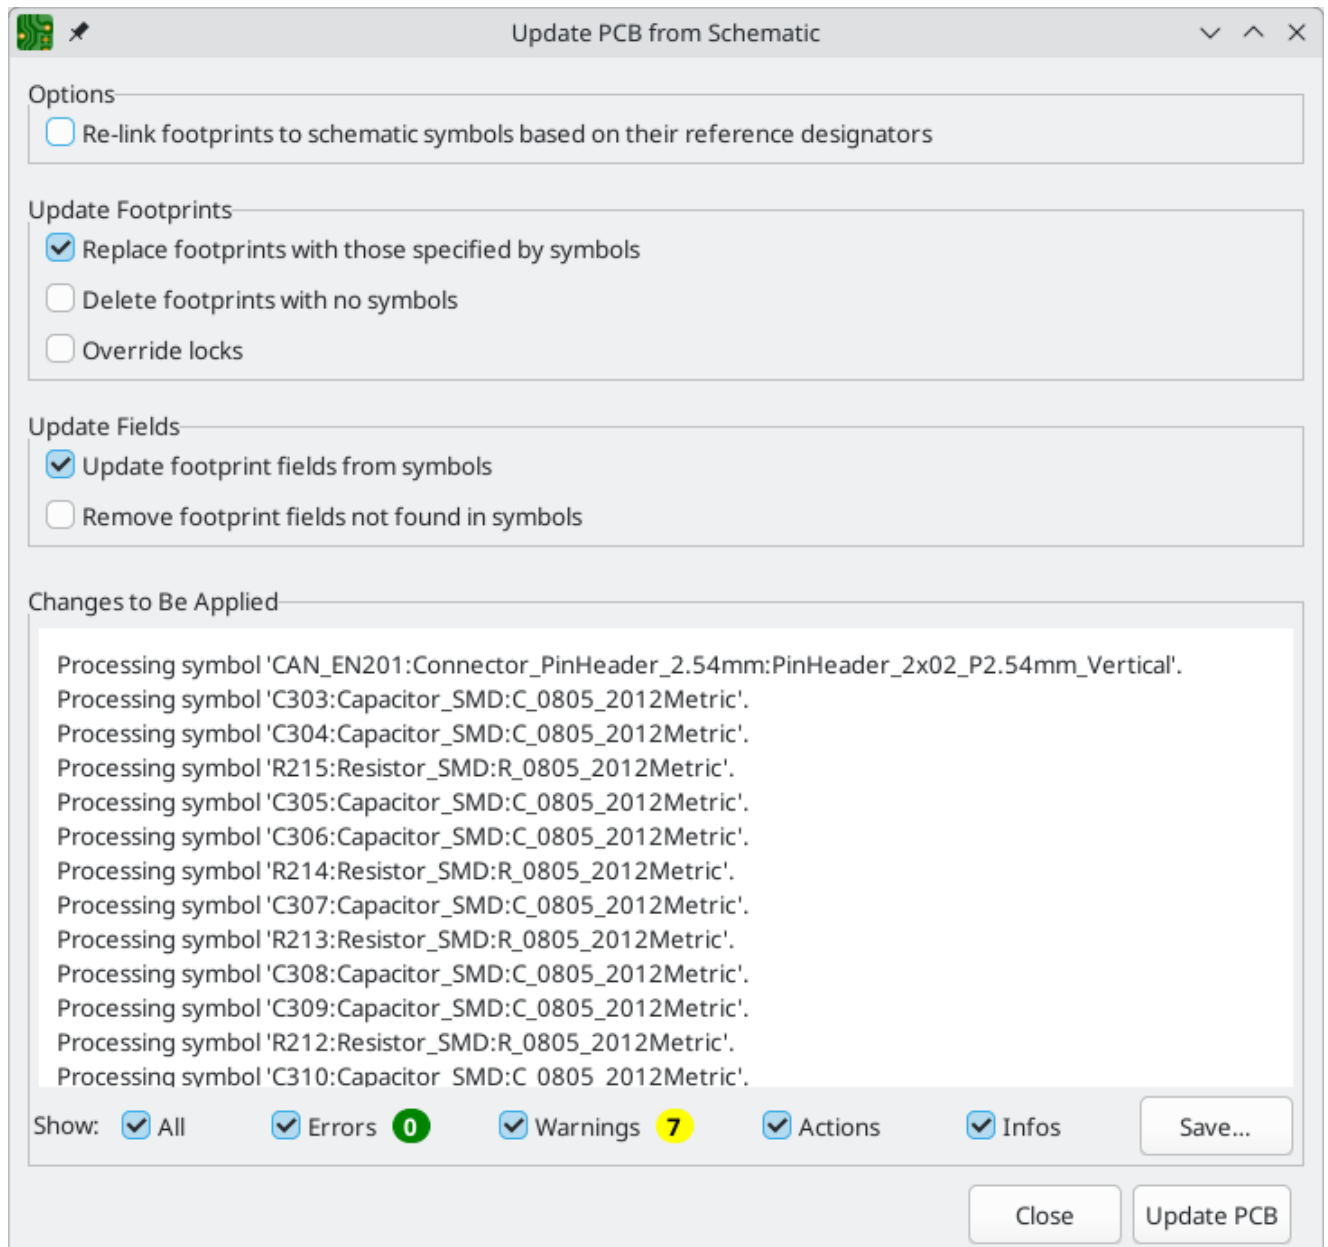

The tool adds the footprint for each symbol to the board and transfers updated schematic information to the board. In particular, the board's net connections are updated to match the schematic. Symbols with the **Exclude from board** attribute are not transferred to the PCB.

The changes that will be made to the PCB are listed in the *Changes To Be Applied* pane. The PCB is not modified until you click the **Update PCB** button.

You can show or hide different types of messages using the checkboxes at the bottom of the window. A report of the changes can be saved to a file using the **Save...** button.

6.1.1. Options

The tool has several options to control its behavior.

Option	Description
--------	-------------

Re-link footprints to schematic symbols based on their reference designators	Footprints are normally linked to schematic symbols via a unique identifier created when the symbol is added to the schematic. A symbol's unique identifier cannot be changed, but will be lost when the symbol is deleted, even if a symbol with the same reference designator replaces it. If checked, each footprint in the PCB will be re-linked such that each footprint has its unique identifier updated to match the symbol that has the same reference designator as the footprint. This option should generally be left unchecked. See below for more details on when to use this option.
Replace footprints with those specified by symbols	If checked, footprints in the PCB will be replaced with the footprint that is specified in the corresponding schematic symbol. If unchecked, footprints that are already in the PCB will not be changed, even if the schematic symbol is updated to specify a different footprint.
Delete footprints with no symbols	If checked, any footprint in the PCB without a corresponding symbol in the schematic will be deleted from the PCB. Footprints with the "Not in schematic" attribute will be unaffected. If unchecked, footprints without a corresponding symbol will not be deleted.
Override locks	If checked, locking a footprint will not affect whether a footprint is deleted or replaced based on changes in the schematic. If unchecked, locked footprints will never be deleted or replaced even if they otherwise would be.
Update footprint fields from symbols	If checked, new and updated fields in symbols will be transferred to the corresponding footprints, keeping symbol and footprint fields in sync. If unchecked, footprint fields will not be updated when fields change in the corresponding symbols.
Remove footprint fields not found in symbols	If checked, footprint fields will be removed if they do not exist in the corresponding symbol. If unchecked, footprint fields that do not exist in the corresponding symbol will not be removed, allowing footprints to have additional fields compared to the corresponding symbols.


6.1.2. Re-linking symbols and footprints

Symbols and footprints are linked together using unique identifiers (also called UUIDs). These are handled automatically within KiCad and are not usually visible to users. They allow a symbol and its partner footprint to keep their connection between schematic and PCB, even if the reference designator is changed. New objects get assigned their identifiers upon creation.


Re-linking by unique identifier (default)

In normal use, the **Re-link footprints to schematic symbols based on their reference designators** option should be unchecked. In this mode, symbols with the same identifier as a footprint will update that footprint, regardless of the reference designator. Symbols which have an identifier that doesn't match any footprint will add a new footprint linked to that identifier.

For example, in the below schematic, both R1 and R2 are linked via their unique IDs to footprints on the PCB:

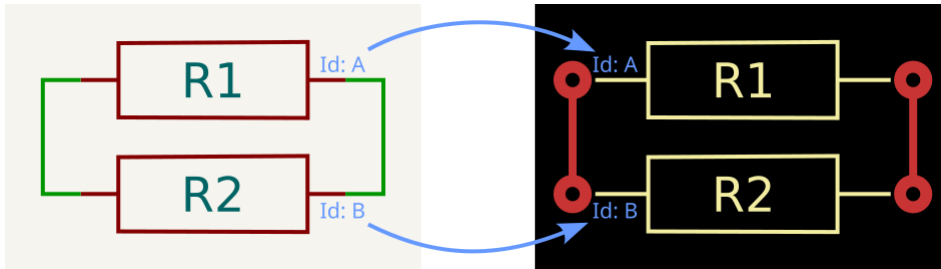


If symbol reference designators are changed in the schematic (e.g. by re-annotation), running the **Update PCB from Schematic** process will update the reference designators on the PCB.

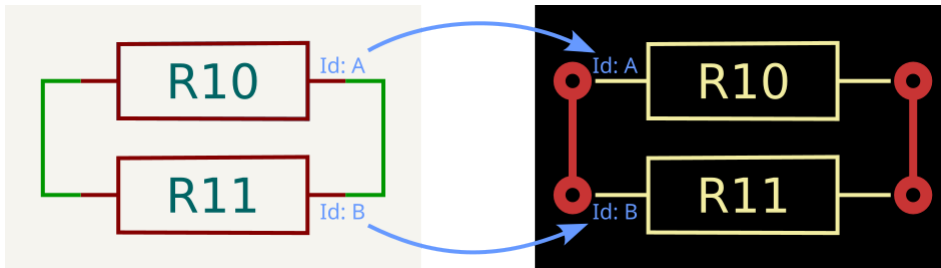


Re-linking by reference designator

If the checkbox is checked, the linking process is done using the reference designators. This can be useful for workflows that result in a symbol being deleted and replaced by another one, rather than being updated in-place. For example, cut-and-pasting a block of schematic or a sheet and copy-pasting and re-annotating will usually break the identifier-based links.

For example in the below case, the resistors R1 and R2 have been deleted and replaced, then re-annotated. While the reference designators are the same, the internal identifiers have changed. Updating the PCB by identifier would cause the existing footprints to be deleted and new ones added - to KiCad, the existing footprints have no matching symbol. This would cause the footprints to lose their positions and need placing again.

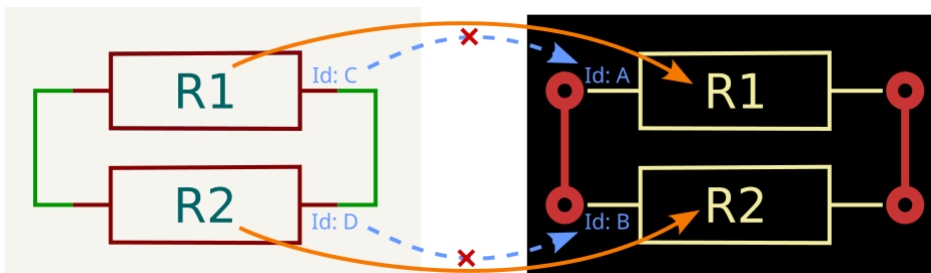


Re-linking the footprints by reference designator causes KiCad to re-create the links, using the matching reference designators as a guide.

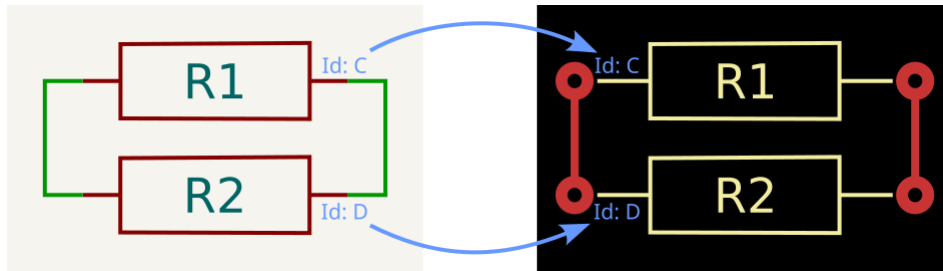

Because the links have been re-established, the next forward annotation should use the normal identifier-based linking (i.e. the checkbox should be unchecked).

6.2. Update Schematic from PCB (back annotation)

The typical workflow in KiCad is to make changes in the schematic and then sync the changes to the board using the Update PCB From Schematic tool. However, the reverse process is also possible: design changes can be made in the board and then synced back to the schematic using **Tools** → **Update Schematic From PCB** in either the schematic or board editors. This process is also known as backannotation.

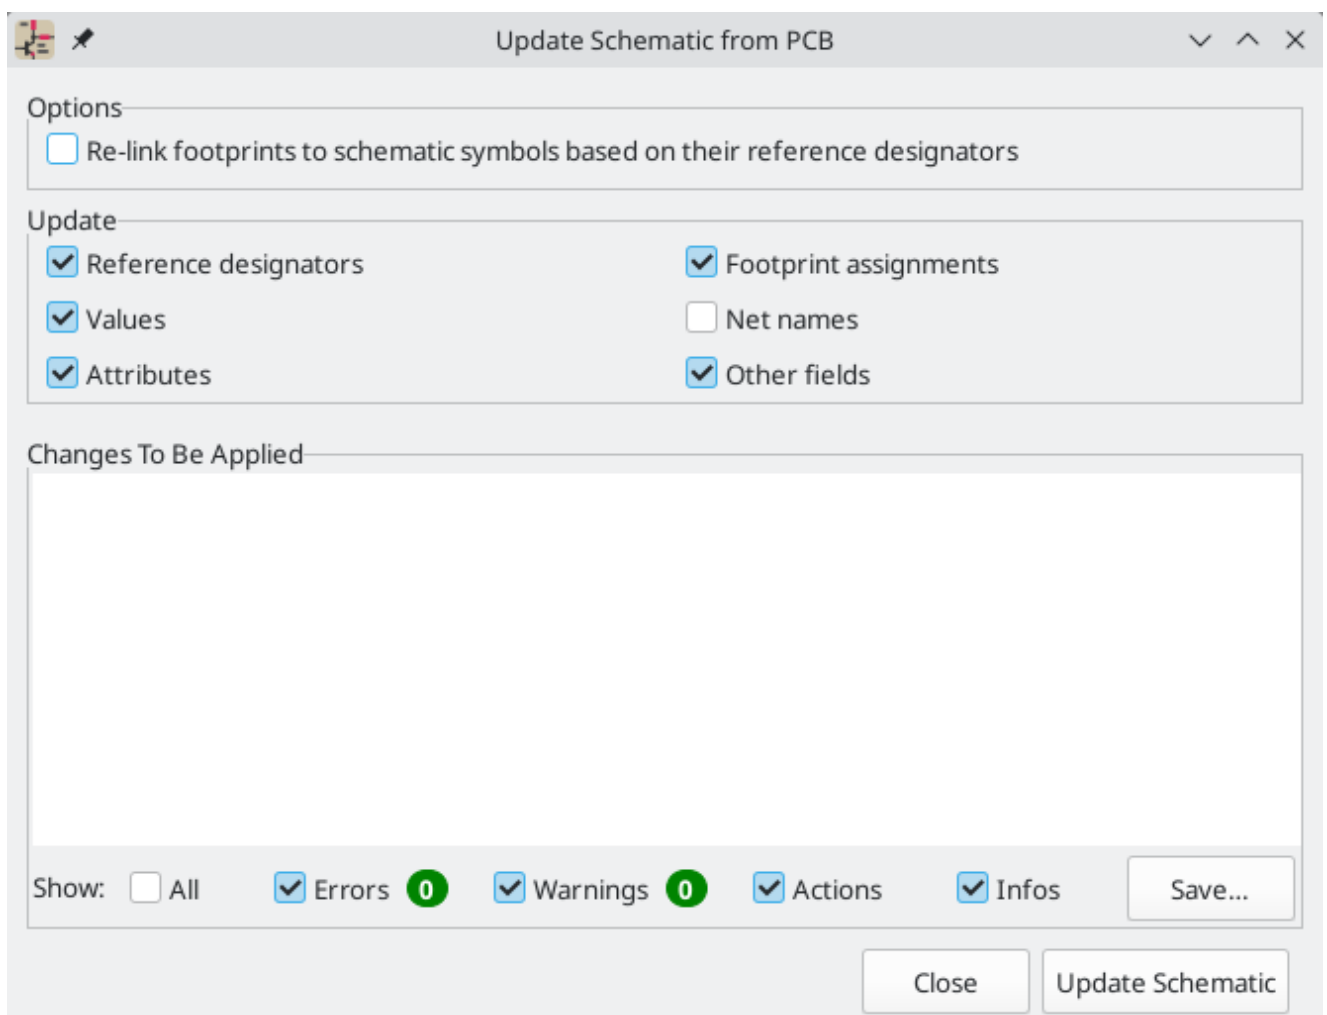

The tool syncs changes in reference designators, values, attributes (like DNP or Exclude From BOM), footprint assignments, other fields, and net names from the board to the schematic. Each type of change can be individually enabled or disabled.

The changes that will be made to the schematic are listed in the *Changes To Be Applied* pane. The schematic is not modified until you click the **Update Schematic** button.

You can show or hide different types of messages using the checkboxes at the bottom of the window. A report of the changes can be saved to a file using the **Save...** button.

6.2.1. Options

The tool has several options to control its behavior.

Option	Description
Re-link footprints to schematic symbols based on their reference designators	If checked, each footprint in the PCB will be re-linked to the symbol that has the same reference designator as the footprint. This option is incompatible with updating symbol reference designators. If unchecked, footprints and symbols will be linked by unique identifier as usual, rather than by reference designator.
Reference designators	If checked, symbol reference designators will be updated to match the reference designators of the linked footprints. If unchecked, symbol reference designators will not be updated.
Values	If checked, symbol values will be updated to match the values of the linked footprints.
Values	If checked, symbol attributes (like exclude from BOM and DNP) will be updated to match the corresponding attributes of the linked footprints. If unchecked, symbol values will not be updated.
Footprint assignments	If checked, footprint assignments will be updated for symbols which have had their footprints changed or replaced in the board. If unchecked, symbol footprint assignments will not be updated.
Net names	If checked, the schematic will be updated with any net name changes that have been made in the board. Net labels will be updated or added to the schematic as necessary to match the board.
Other fields	If checked, other symbol fields will be updated to match the corresponding fields of the linked footprints. Reference designator, value, and footprint are each controlled by their own separate option. If unchecked, net names will not be updated in the schematic.

Nota

The Geographical Reannotation feature can be used in combination with backannotating reference designators to reannotate all components in the design based on their location in the layout.

6.2.2. Back annotation with CMP files

Select changes can also be synced from the PCB back to the schematic by exporting a CMP file from the PCB editor (**File** → **Export** → **Footprint Association (.cmp) File...**) and importing it in the Schematic Editor (**File** → **Import** → **Footprint Assignments...**).


Nota

This method can only sync changes made to footprint assignments and footprint fields. It is recommended to use the Update Schematic from PCB tool instead.

Capitolo 7. Generating Outputs

7.1. Printing

KiCad can print the schematic to a standard printer using **File** → **Print...**

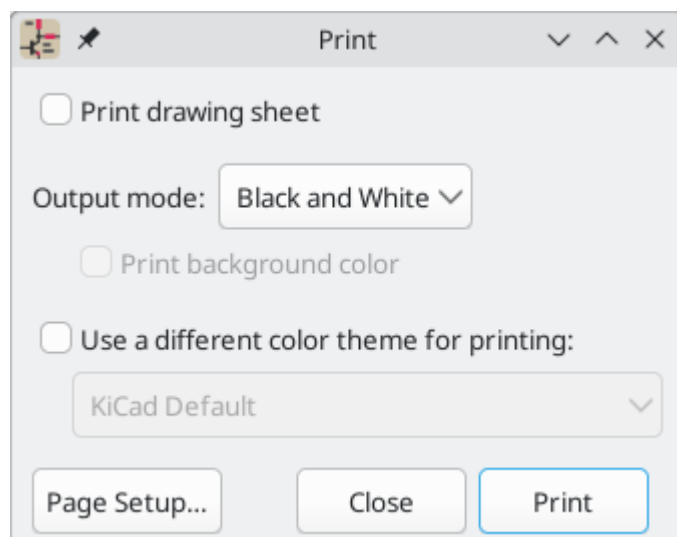

7.1.1. Printing options

- **Print drawing sheet:** Include the drawing sheet border and title block in the printed schematic.
- **Output mode:** Print the schematic in color or black and white.
- **Print background color:** Include the background color in the printed schematic. This option is only enabled when printing in color.
- **Use a different color theme for printing:** Select a different color scheme for printing than the one selected for display in the Schematic Editor.
- **Page Setup...:** Opens a page setup dialog for setting paper size and orientation.
- **Close:** Closes the dialog without printing.
- **Print:** Opens the system print dialog.

Nota

Printing uses platform- and printer-specific drivers and may have unexpected results. When printing to a file, **Plotting** is recommended instead of **Printing**.

7.2. Plotting

KiCad can plot schematics to a file using **File** → **Plot...**

The supported output formats are Postscript, PDF, SVG, DXF, and HPGL.

The **Output Messages** pane displays messages about the generated files. Different kinds of messages can be shown or hidden using the checkboxes, and the messages can be saved to a file using the **Save...** button.

The **Plot Current Page** button plots the current page of the schematic. The **Plot All Pages** button plots all pages of the schematic. One file is generated for each page, except for PDF output, which plots each schematic page as a separate page in a single PDF file.


7.2.1. Plotting options

- **Output directory:** Specify the location to save plotted files. If this is a relative path, it is created relative to the project directory. This path can use text variables, including both project text variables and built-in text variables.
- **Output Format:** Select the format to plot in. Some formats have different options than others.
- **Page size:** Sets the page size to use for the plotted output. This can be set to match the schematic size or to another sheet size.
- **Plot drawing sheet:** Include the drawing sheet border and title block in the printed schematic.
- **Output mode:** Sets the output to color or black and white. Not all output formats support color.
- **Color theme:** Selects the color theme to use for the plotted output.

- **Plot background color:** Includes the schematic background color in the plotted output. The background color will not be plotted if the output format does not support color or the output mode is black and white.
- **Minimum line width:** Selects the minimum width for lines. Any lines narrower than this width will be plotted with this minimum width.
- **Position and units:** Sets the plotter origin and units. This option only applies for HPGL output.
- **Pen width:** Sets the plotter's pen width. This option only applies for HPGL output.
- **Generate property popups:** Enables the interactive PDF features described below. This option only applies for PDF output.
- **Generate clickable links for hierarchical elements:** Enables clickable hierarchical sheets, hierarchical sheet pins, and hierarchical labels. When enabled, clicking a hierarchical sheet or sheet pin in the PDF will open the PDF page for that subsheet. Clicking a hierarchical label will open the page for the parent sheet. If **Generate property popups** is also enabled, links will be generated instead of property popups for hierarchical sheets, pins, and labels (i.e. this option takes priority). This option only applies for PDF output.
- **Generate metadata from AUTHOR and SUBJECT variables:** Sets the Author and Subject PDF document properties for the generated PDF based on the AUTHOR and SUBJECT project text variables, if you have defined them. This option only applies for PDF output.
- **Open file after plot:** automatically opens the plotted output file when plotting is complete.

7.2.2. Interactive PDF features

Plotted PDFs can optionally have several interactive features.

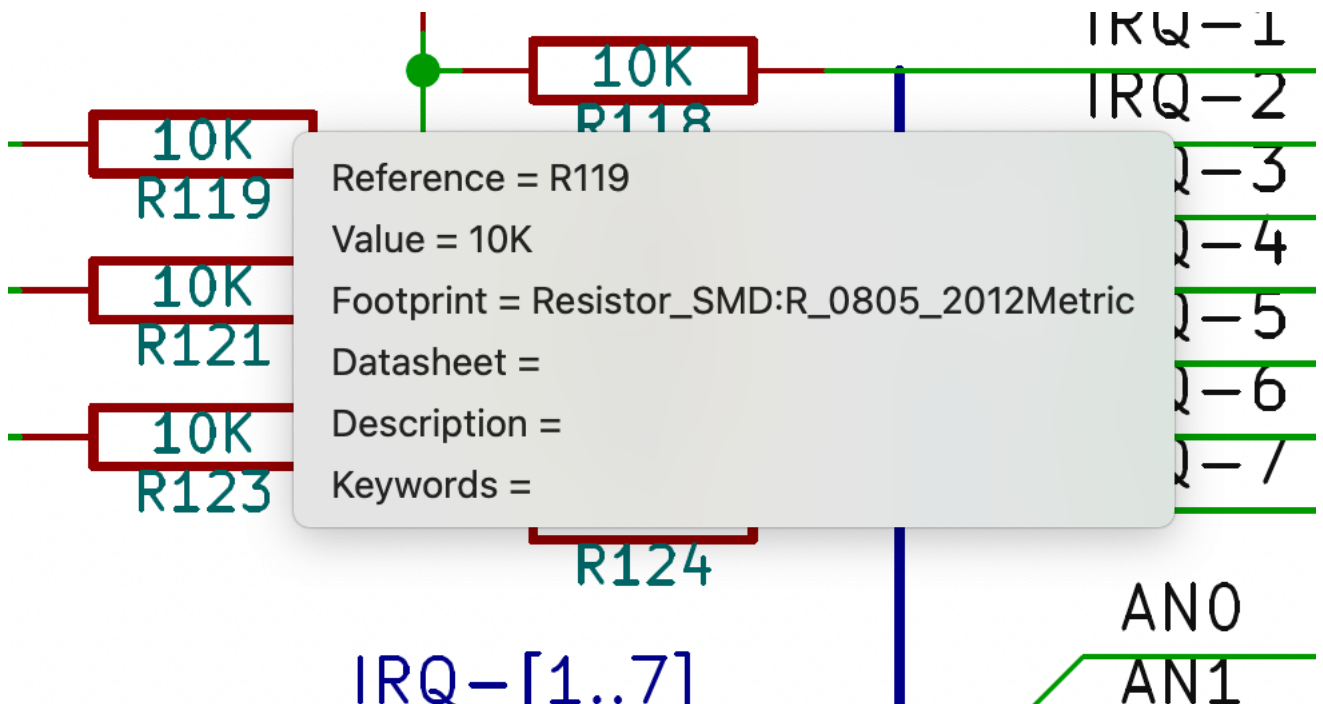

- Hyperlinks can be clicked.

- The table of contents is populated with schematic sheets as well as the symbols and hierarchical labels in each sheet.
- Clicking on many schematic elements displays a popup menu containing relevant information.
 - Symbols display their symbol fields.
 - Hierarchical subsheets display their sheetname and filename, as well as an option to enter the sheet itself. This is replaced by a direct link to the subsheet if the **Generate clickable links for hierarchical elements** option is enabled.
- Labels display the resolved net and netclass.
- Buses display their members.

Nota

Some of these features are not supported in all PDF readers. The clickable links generated by the **Generate clickable links for hierarchical elements** option are more widely supported than other interactive features.

7.3. Generating a bill of materials

KiCad can generate a bill of materials that lists all of the components in the design. BOMs are configurable: you can select which components are included, how components are ordered, which symbol fields are included and in what order, and what the output format is.

BOMs are exported using the Symbol Fields Table. As a shortcut to open the **Export** tab of this dialog, you can select **Tools** → **Generate Bill of Materials...** or use the




button on the top toolbar.

The contents of the BOM are configured in the **Edit** tab. The format of the exported BOM file is configured in the **Export** tab. The BOM is written when you press the **Export** button at the bottom of the dialog.

7.3.1. BOM contents

The exported BOM will contain exactly the components (rows) and fields (columns) shown in the **Edit** tab, with the same grouping and sorting. Components with the **Exclude from BOM** attribute set are hidden in the **Edit** tab and not included in the BOM export unless the **Show Exclude from BOM** box is checked. Components with the DNP (do not populate) attribute set can be optionally excluded from both the table in the **Edit** tab and the exported BOM by checking the **Exclude DNP** box. You can also limit the displayed components to those in the current sheet, the current sheet and all of its subsheets, or the entire schematic by adjusting the **Scope** settings.

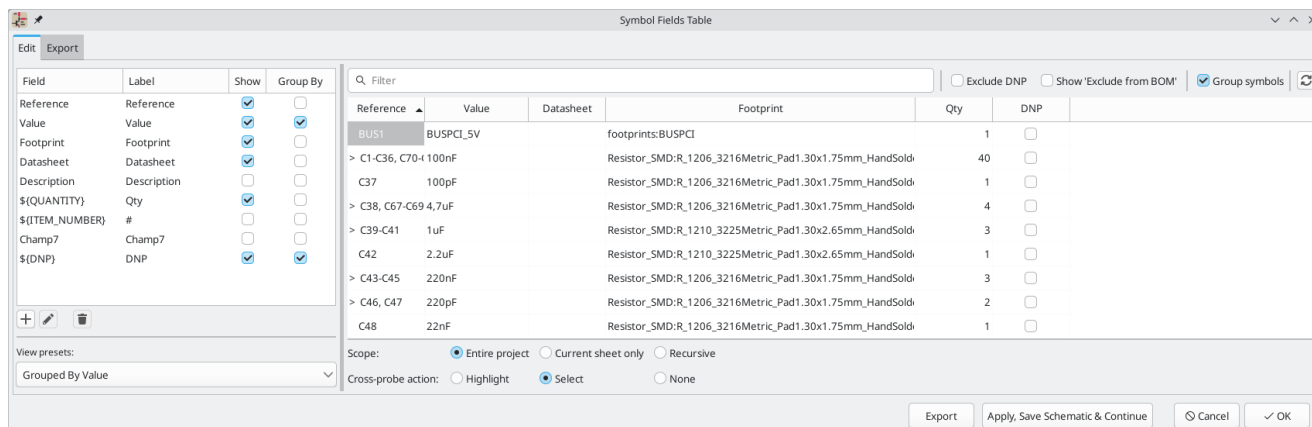

Fields with the **Show** box checked will be included as columns in the BOM, and fields with the **Group By** box checked are used to group components together. Components are grouped into the same line if all of their **Group By** fields are identical and the **Group symbols** box is checked. You can set an arbitrary column name for each field and reorder columns by dragging their headers.

Presets are available to configure the list of fields. Presets store which fields are displayed, which fields are used for grouping, and the column order. You can create and save your own presets or use one of several default presets. Custom presets can be deleted in this dialog or in the Schematic Setup dialog.

The built-in presets "Grouped By Value" and "Grouped By Value and Footprint" replicate legacy BOM scripts, while "Attributes" shows only the reference and value fields and the DNP, exclude from board, exclude from simulation, and exclude from BOM attributes.

Some virtual fields are available that may be useful in BOM exports. Adding a field in the Symbol Fields Table beginning with a text variable will not create a new field in the symbols, but will create a special column in the table and BOM with auto-generated values for each component. The following variables may be especially useful for creating virtual fields in custom BOM formats:


- `${QUANTITY}` creates a field that contains the number of grouped instances of that component.
- `${ITEM_NUMBER}` creates a field that contains the row number of the component in the BOM.
- `${SYMBOL_NAME}` creates a field that contains the name of the schematic symbol.
- `${SYMBOL_LIBRARY}` creates a field that contains the name of the schematic symbol library.
- `${DNP}` creates a field with a checkbox that controls the component's DNP attribute. In the BOM, this field resolves to the string "DNP" if the component's DNP attribute is set, or an empty string otherwise.
- `${EXCLUDE_FROM_BOARD}` creates a field with a checkbox that controls the component's exclude from board attribute. In the BOM, this field resolves to the string "Excluded from board" if the component's exclude from board attribute is set, or an empty string otherwise.
- `${EXCLUDE_FROM_SIM}` creates a field with a checkbox that controls the component's exclude from simulation attribute. In the BOM, this field resolves to the string "Excluded from simulation" if the component's exclude from simulation attribute is set, or an empty string otherwise.
- `${EXCLUDE_FROM_BOM}` creates a field with a checkbox that controls the component's exclude from BOM attribute. Components with the exclude from BOM attribute set are not included in the BOM.

Other text variables are also available.

The full functionality of the **Edit** tab, including virtual field behavior, is explained in more detail in the Symbol Fields Table documentation.

7.3.2. BOM format

The **Export** tab contains settings concerning the output file format for the BOM and displays a preview of the raw BOM file output.

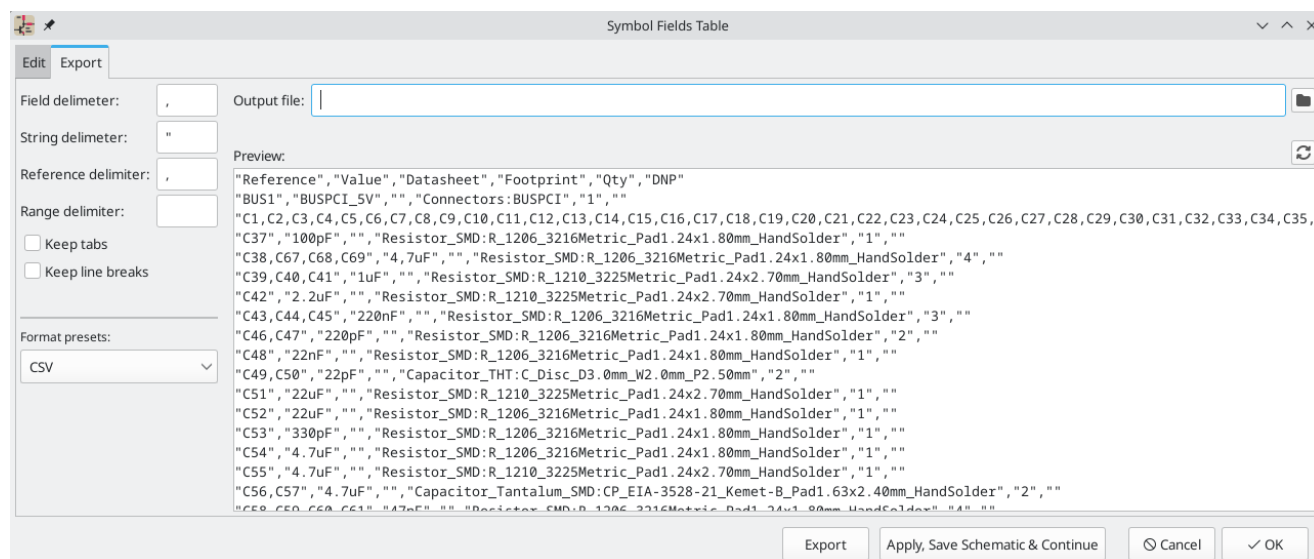


At the top you can specify the output file. Pressing the **Export** button will write the BOM to this file path. This path can contain text variables.

The settings on the left control how the BOM information is formatted in the file. You can change the delimiter between fields, the delimiter that surrounds each field, the delimiter that separates a sequence of references (e.g. the comma in R1, R3), and the delimiter for a range of references (e.g. the dash in R1-R3). If no range delimiter is given, ranges will not be used: R1-R3 will be written out as R1, R2, R3, for example, assuming , as a reference delimiter. Tabs and newlines in fields can be preserved or stripped, depending on the **Keep tabs** and **Keep line breaks** settings.

Several default format presets are available. You can select a comma-separated value (CSV) format, a tab-separated value (TSV) format, or a semicolon-separated format. You can also create and save your own presets. Custom presets can be deleted in this dialog or in the Schematic Setup dialog.

7.3.3. Legacy BOM generation

Previous versions of KiCad used external scripts to process the design information into the desired output format. This BOM generation tool is still available by selecting **Tools** → **Generate Legacy Bill of Materials....**

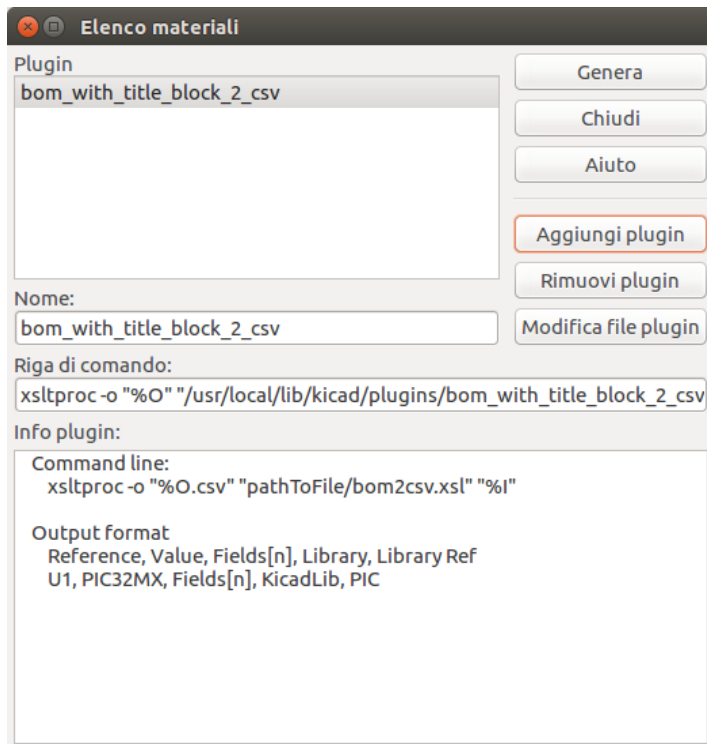

Several BOM generator scripts are included with KiCad, and users can also create their own. BOM generator scripts generally use Python or XSLT, but other tools can be used as long as you can specify a command line for KiCad to execute when running the generator.

You can select which BOM generator to use in the **BOM generator scripts** list. The rest of the dialog displays information about the selected generator. You can change the displayed name of the generator with the **Generator nickname** textbox.

The pane at right displays information about the selected script. When the generator is executed, the right pane instead displays output from the script.

The text box at the bottom contains the command that KiCad will use to execute the generator. It is automatically populated when a script is selected, but the command may need to be hand-edited for some generators. KiCad saves the command line for each generator when the BOM tool is closed, so command line customizations are preserved. For more details about the command line, see the advanced documentation.

On Windows, the BOM Generator dialog has an additional option **Show console window**. When this option is unchecked, BOM generators run in a hidden console window and any output is redirected and printed in the dialog. When this option is checked, BOM generators run in a visible console window, which may be necessary if the generator plugin provides a graphical user interface.

BOM generator scripts

By default, the legacy BOM tool presents three output script options.

- `bom_csv_grouped_extra` outputs a CSV with a single section containing every component in the design. Components are grouped by value, footprint, DNP (do not populate), and any additional fields that are specified on the command line. To specify extra fields, add the desired field names as quoted strings at the end of the command line. For example, to include the MPN field, the end of

the command line would be: `<path to script>/bom_csv_grouped_extra.py "%I" "%O.csv" "MPN"`. The columns in the BOM are:

- Line item number
 - Reference designator(s)
 - Quantity
 - Value
 - Footprint
 - DNP
 - Specified extra fields
- `bom_csv_grouped_by_value` outputs a CSV with two sections. The first section contains every component in the design, with a single component on each line. The second section also contains every component, but components are grouped by symbol name, value, footprint, and DNP (do not populate). The columns in the BOM are:
 - Line item number
 - Quantity
 - Reference designator(s)
 - Value
 - Symbol library and symbol name
 - Footprint
 - Datasheet
 - DNP
 - Any other symbol fields
 - `bom_csv_grouped_by_value_with_fp` outputs a CSV with a single section containing every component in the design. Components are grouped by value, footprint, and DNP (do not populate). The columns in the BOM are:
 - Reference designator(s)
 - Quantity
 - Value
 - Symbol name
 - Footprint
-

- Symbol description
- Vendor
- DNP

Additional generator scripts are installed with KiCad but are not populated in the generator script list by default. The location of these scripts depends on the operating system and may vary based on installation location.

Operating System	Location
Windows	C:\Program Files\KiCad\9.0\bin\scripting\plugins\
Linux	/usr/share/kicad/plugins/
macOS	/Applications/KiCad/KiCad.app/Contents/SharedSupport/plugins/

Additional scripts can be added to the list of BOM generator scripts by clicking the  button. Scripts can be removed by clicking the  button. The  button opens the selected script in a text editor.

For more information on creating and using custom BOM generators, see the advanced documentation.

7.3.4. BOM export from PCB editor

The PCB Editor can export a BOM through **File** → **Fabrication Outputs** → **BOM....** This method provides no control over the output format and does not include all symbol information, but is useful for PCB-only workflows that do not involve a schematic. In general, it is recommended to use the schematic editor's BOM export tool instead.

7.4. Generating a Netlist

A netlist is a file which describes electrical connections between symbol pins. These connections are referred to as nets. Netlist files contain:

- A list of symbols and their pins.
- A list of connections (nets) between symbol pins.

Many different netlist formats exist. Sometimes the symbols list and the list of nets are two separate files. This netlist is fundamental in the use of schematic capture software, because the netlist is the link with other electronic CAD software, such as PCB layout software, simulators, and programmable logic compilers.

KiCad supports several netlist formats:

- KiCad format, which can be imported by the KiCad PCB Editor. However, the "Update PCB from Schematic" tool should be used instead of importing a KiCad netlist into the PCB editor.
- OrCAD PCB2 format, for designing PCBs with OrCAD.
- Allegro format, for designing PCBs with Allegro.
- PADS format, for designing PCBs with PADS.
- CADSTAR format, for designing PCBs with CADSTAR.
- Spice format, for use with various external circuit simulators.

Nota


In KiCad version 5.0 and later, it is not necessary to create a netlist for transferring a design from the schematic editor to the PCB editor. Instead, use the "Update PCB from Schematic" tool.

Nota

Other software tools that use netlists may have restrictions on spaces and special characters in component names, pins, nets, and other fields. For compatibility, be aware of such restrictions in other tools you plan to use, and name components, nets, etc. accordingly.

7.4.1. Formati di netlist

Netlists are exported with the Export Netlist dialog (**File**→**Export**→**Netlist...**).

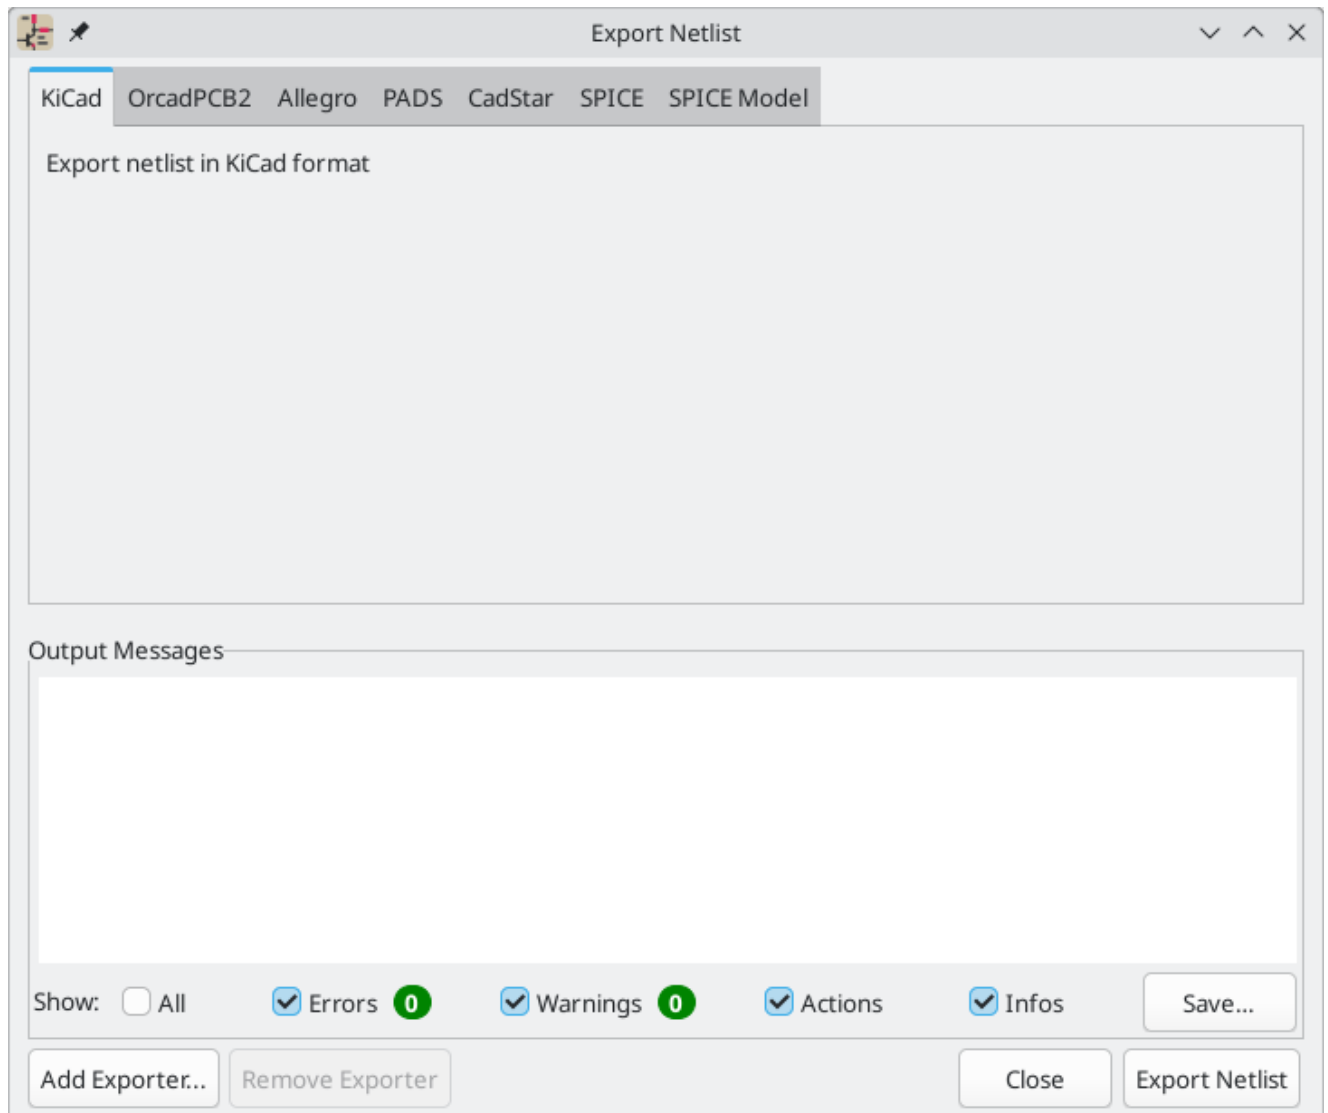

KiCad supports exporting netlists in several formats: KiCad, OrcadPCB2, Allegro, PADS, CADSTAR, Spice, and Spice Model. Each format can be selected by selecting the corresponding tab at the top of the window. Some netlist formats have additional options.


Clicking the **Export Netlist** button prompts for a netlist filename and saves the netlist.

Nota

Netlist generation can take up to several minutes for large schematics.

Custom generators for other netlist formats can be added by clicking the **Add Generator...** button. Custom generators are external tools that are called by KiCad, for example Python scripts or XSLT stylesheets. For more information on custom netlist generators, see the section on adding custom netlist generators.

Spice Netlist Format

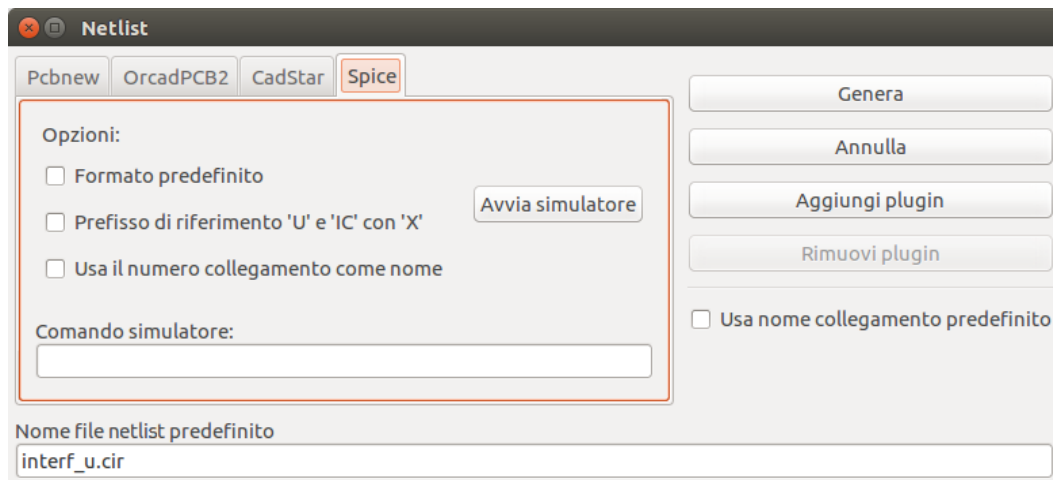

The Spice netlist format offers several options.

- When the **use current sheet as root** is selected, only the current sheet is exported to a subcircuit model. Otherwise, the entire schematic sheet is exported.
- The **Save all voltages** option adds a `.save all` command to the netlist, which causes the simulator to save all node voltages.
- The **Save all currents** option adds a `.probe all` command to the netlist, which causes the simulator save all node currents.
- The **Save all power dissipations** adds `.probe` commands to save the power dissipation in each component.
- The **Save all digital event data** removes the `esave none` command from the netlist, which causes digital event data to be saved. Digital event data may consume a lot of memory.

Nota

Exact behavior may vary between simulation tools.

Passive symbol values are automatically adjusted to be compatible with various Spice simulators. Specifically:

- `μ`; and `M` as unit prefixes are replaced with `u` and `Meg`, respectively
- Units are removed (e.g. `4.7kΩ`; is changed to `4.7k`)
- Values in RKM format are rewritten to be Spice-compatible (e.g. `4u7` is changed to `4.7u`)

The Spice netlist exporter also provides an easy way to simulate the generated netlist with an external simulator. This can be useful for running a simulation without using KiCad's internal ngspice simulator, or for running an ngspice simulation with options that are not supported by KiCad's simulator tool.

Enter the path to the external simulator in the text box, with `%I` representing the generated netlist. Check the **run external simulator command** box to generate the netlist and automatically run the simulator.


Nota

The default simulator command (spice "%I") must be adjusted to point to a simulator installed on your system.

Spice simulators expect simulation commands (.PROBE, .AC, .TRAN, etc.) to be included in the netlist. Any text line included in the schematic diagram starting with a period (.) will be included in the netlist. If a text object contains multiple lines, only the lines beginning with a period will be included.

.include directives for including model library files are automatically added to the netlist based on the Spice model settings for the symbols in the schematic.

Spice Model Netlist Format

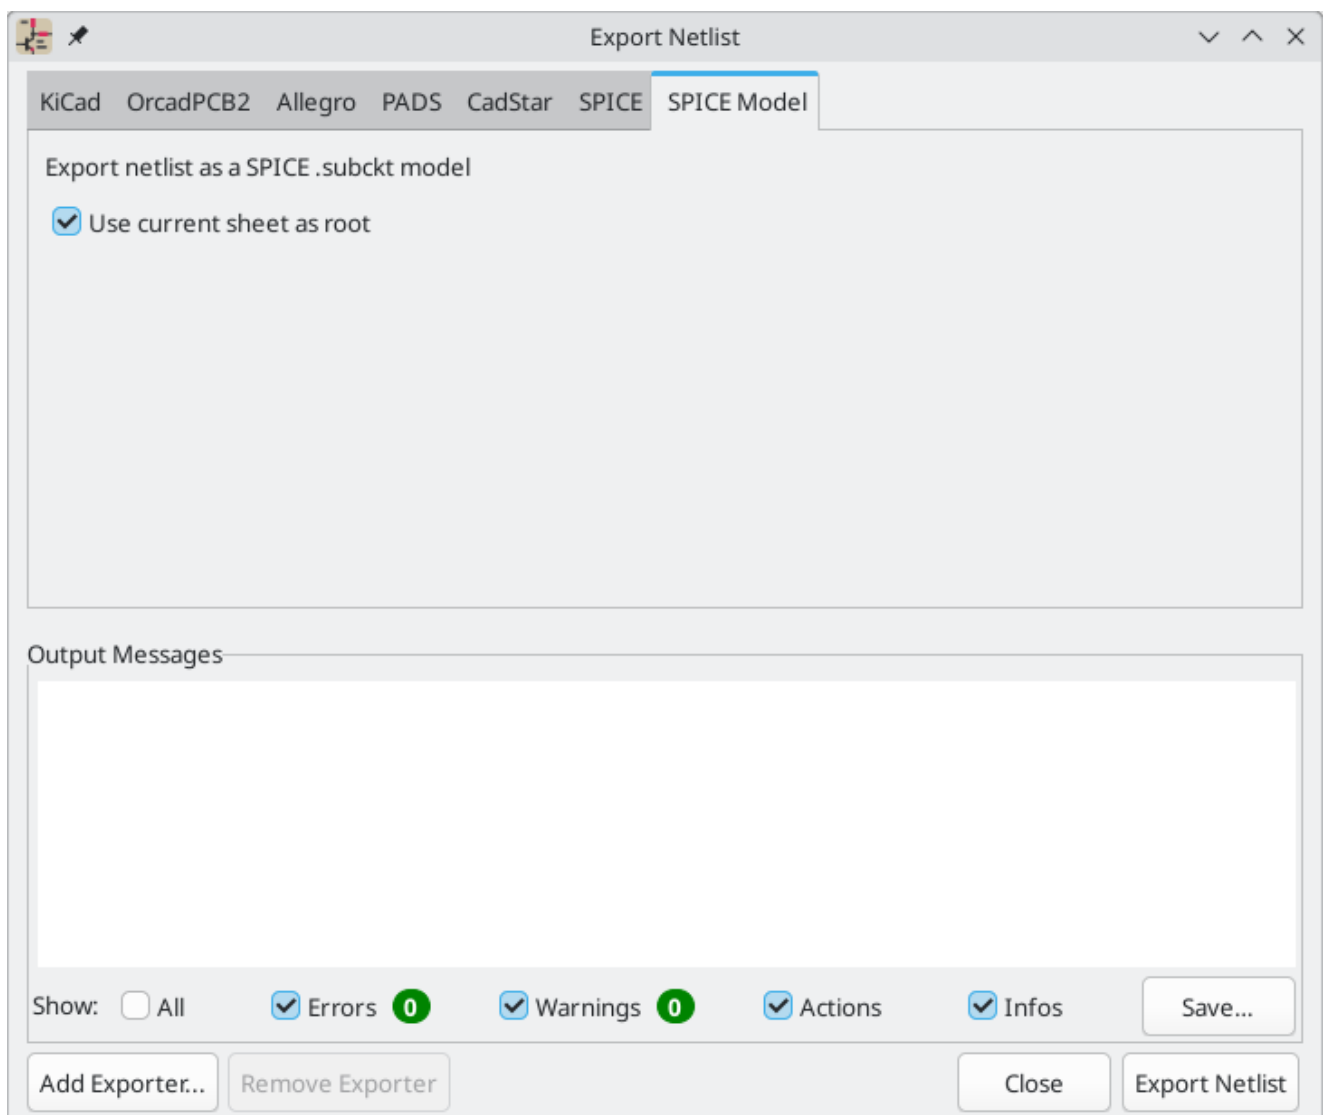

KiCad can also export a netlist of the schematic as a Spice subcircuit model, which can be included in a separate Spice simulation. Any hierarchical labels in the schematic are used as pins for the subcircuit model. Each pin in the model is annotated with a comment describing the pin's electrical direction:


- Input hierarchical labels are mapped to an input annotation
- Output hierarchical labels are mapped to an output annotation

- Bidirectional hierarchical labels are mapped to an inout annotation
- Tri-state hierarchical labels are mapped to a tristate annotation
- Passive hierarchical labels are mapped to a passive annotation

When the **use current sheet as root** is selected, only the current sheet is exported to a subcircuit model. Otherwise, the entire schematic sheet is exported.

7.4.2. Esempi netlist

Below is the schematic from the `sallen_key` project included in KiCad's simulation demos.

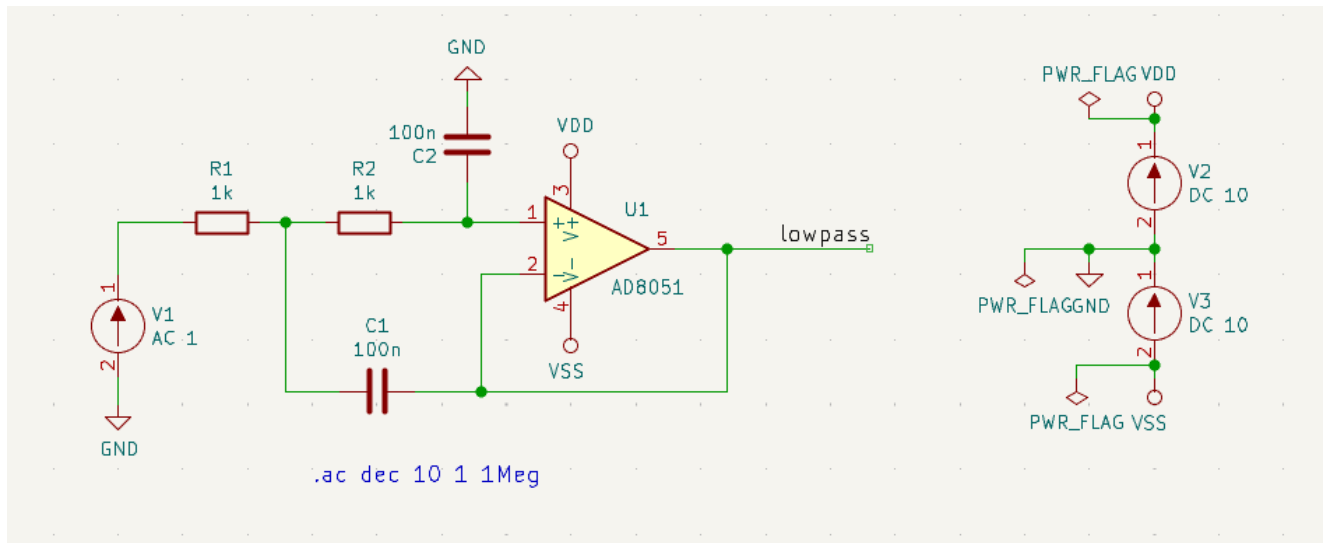

The KiCad format netlist for this schematic is as follows:

```
(export (version "E")
  (design
    (source "/usr/share/kicad/demos/simulation/sallen_key/sallen_key.kicad_sch")
    (date "Sun 01 May 2022 03:14:05 PM EDT")
    (tool "Eeschema (6.0.4)")
    (sheet (number "1") (name "/") (tstamps "/"))
    (title_block
      (title)
      (company)
      (rev)
      (date)
      (source "sallen_key.kicad_sch")
      (comment (number "1") (value ""))
      (comment (number "2") (value ""))
      (comment (number "3") (value ""))
      (comment (number "4") (value ""))
      (comment (number "5") (value ""))
      (comment (number "6") (value ""))
      (comment (number "7") (value ""))
      (comment (number "8") (value ""))
      (comment (number "9") (value "")))
    (components
      (comp (ref "C1")
        (value "100n")
        (libsource (lib "sallen_key_schlib") (part "C") (description ""))
        (property (name "Sheetname") (value "")))
```

```

(property (name "Sheetfile") (value "sallen_key.kicad_sch"))
(sheetpath (names "/" ) (tstamps "/" ))
(tstamps "00000000-0000-0000-0000-00005789077d"))
(comp (ref "C2")
  (value "100n")
  (fields
    (field (name "Fieldname") "Value")
    (field (name "SpiceMapping") "1 2")
    (field (name "Spice_Primitive") "C"))
  (libsource (lib "sallen_key_schlib") (part "C") (description ""))
  (property (name "Fieldname") (value "Value"))
  (property (name "Spice_Primitive") (value "C"))
  (property (name "SpiceMapping") (value "1 2"))
  (property (name "Sheetname") (value ""))
  (property (name "Sheetfile") (value "sallen_key.kicad_sch"))
  (sheetpath (names "/" ) (tstamps "/" ))
  (tstamps "00000000-0000-0000-0000-00005789085b"))
(comp (ref "R1")
  (value "1k")
  (fields
    (field (name "Fieldname") "Value")
    (field (name "SpiceMapping") "1 2")
    (field (name "Spice_Primitive") "R"))
  (libsource (lib "sallen_key_schlib") (part "R") (description ""))
  (property (name "Fieldname") (value "Value"))
  (property (name "SpiceMapping") (value "1 2"))
  (property (name "Spice_Primitive") (value "R"))
  (property (name "Sheetname") (value ""))
  (property (name "Sheetfile") (value "sallen_key.kicad_sch"))
  (sheetpath (names "/" ) (tstamps "/" ))
  (tstamps "00000000-0000-0000-0000-0000578906ff"))
(comp (ref "R2")
  (value "1k")
  (fields
    (field (name "Fieldname") "Value")
    (field (name "SpiceMapping") "1 2")
    (field (name "Spice_Primitive") "R"))
  (libsource (lib "sallen_key_schlib") (part "R") (description ""))
  (property (name "Fieldname") (value "Value"))
  (property (name "SpiceMapping") (value "1 2"))
  (property (name "Spice_Primitive") (value "R"))
  (property (name "Sheetname") (value ""))
  (property (name "Sheetfile") (value "sallen_key.kicad_sch"))
  (sheetpath (names "/" ) (tstamps "/" ))
  (tstamps "00000000-0000-0000-0000-000057890691"))
(comp (ref "U1")
  (value "AD8051")
  (fields
    (field (name "Spice_Lib_File") "ad8051.lib")
    (field (name "Spice_Model") "AD8051")
    (field (name "Spice_Netlist_Enabled") "Y")
    (field (name "Spice_Primitive") "X"))
  (libsource (lib "sallen_key_schlib") (part "Generic_Opamp") (description ""))
  (property (name "Spice_Primitive") (value "X"))
  (property (name "Spice_Model") (value "AD8051"))
  (property (name "Spice_Lib_File") (value "ad8051.lib"))
  (property (name "Spice_Netlist_Enabled") (value "Y"))
  (property (name "Sheetname") (value ""))
  (property (name "Sheetfile") (value "sallen_key.kicad_sch"))

```

```

(sheetpath (names "/" ) (tstamps "/" ))
(tstamps "00000000-0000-0000-0000-00005788ff9f"))
(comp (ref "V1")
  (value "AC 1")
  (libsource (lib "sallen_key_schlib") (part "VSOURCE") (description ""))
  (property (name "Sheetname") (value ""))
  (property (name "Sheetfile") (value "sallen_key.kicad_sch"))
  (sheetpath (names "/" ) (tstamps "/" ))
  (tstamps "00000000-0000-0000-0000-000057336052"))
(comp (ref "V2")
  (value "DC 10")
  (fields
    (field (name "Fieldname") "Value")
    (field (name "Spice_Node_Sequence") "1 2")
    (field (name "Spice_Primitive") "V"))
  (libsource (lib "sallen_key_schlib") (part "VSOURCE") (description ""))
  (property (name "Fieldname") (value "Value"))
  (property (name "Spice_Primitive") (value "V"))
  (property (name "Spice_Node_Sequence") (value "1 2"))
  (property (name "Sheetname") (value ""))
  (property (name "Sheetfile") (value "sallen_key.kicad_sch"))
  (sheetpath (names "/" ) (tstamps "/" ))
  (tstamps "00000000-0000-0000-0000-0000578900ba"))
(comp (ref "V3")
  (value "DC 10")
  (fields
    (field (name "Fieldname") "Value")
    (field (name "Spice_Node_Sequence") "1 2")
    (field (name "Spice_Primitive") "V"))
  (libsource (lib "sallen_key_schlib") (part "VSOURCE") (description ""))
  (property (name "Fieldname") (value "Value"))
  (property (name "Spice_Primitive") (value "V"))
  (property (name "Spice_Node_Sequence") (value "1 2"))
  (property (name "Sheetname") (value ""))
  (property (name "Sheetfile") (value "sallen_key.kicad_sch"))
  (sheetpath (names "/" ) (tstamps "/" ))
  (tstamps "00000000-0000-0000-0000-000057890232"))
(libparts
  (libpart (lib "sallen_key_schlib") (part "C")
    (footprints
      (fp "C?")
      (fp "C_????_")
      (fp "C_????")
      (fp "SMD*_c")
      (fp "Capacitor*"))
    (fields
      (field (name "Reference") "C")
      (field (name "Value") "C"))
    (pins
      (pin (num "1") (name "") (type "passive"))
      (pin (num "2") (name "") (type "passive")))))
  (libpart (lib "sallen_key_schlib") (part "Generic_Opamp")
    (fields
      (field (name "Reference") "U")
      (field (name "Value") "Generic_Opamp"))
    (pins
      (pin (num "1") (name "+") (type "input"))
      (pin (num "2") (name "-") (type "input"))
      (pin (num "3") (name "V+") (type "power_in"))

```

```

        (pin (num "4") (name "V-") (type "power_in"))
        (pin (num "5") (name "") (type "output"))))
(libpart (lib "sallen_key_schlib") (part "R")
  (footprints
    (fp "R_*")
    (fp "Resistor_*"))
  (fields
    (field (name "Reference") "R")
    (field (name "Value") "R"))
  (pins
    (pin (num "1") (name "") (type "passive"))
    (pin (num "2") (name "") (type "passive"))))
(libpart (lib "sallen_key_schlib") (part "VSOURCE")
  (fields
    (field (name "Reference") "V")
    (field (name "Value") "VSOURCE")
    (field (name "Fieldname") "Value")
    (field (name "Spice_Primitive") "V")
    (field (name "Spice_Node_Sequence") "1 2"))
  (pins
    (pin (num "1") (name "") (type "input"))
    (pin (num "2") (name "") (type "input"))))
(libraries
  (library (logical "sallen_key_schlib")
    (uri "/usr/share/kicad/demos/simulation/sallen_key/sallen_key_schlib.kicad_sym")))
(nets
  (net (code "1") (name "/lowpass")
    (node (ref "C1") (pin "1") (pintype "passive"))
    (node (ref "U1") (pin "2") (pinfunction "-") (pintype "input"))
    (node (ref "U1") (pin "5") (pintype "output")))
  (net (code "2") (name "GND")
    (node (ref "C2") (pin "2") (pintype "passive"))
    (node (ref "V1") (pin "2") (pintype "input"))
    (node (ref "V2") (pin "2") (pintype "input"))
    (node (ref "V3") (pin "1") (pintype "input")))
  (net (code "3") (name "Net-(C1-Pad2)")
    (node (ref "C1") (pin "2") (pintype "passive"))
    (node (ref "R1") (pin "1") (pintype "passive"))
    (node (ref "R2") (pin "2") (pintype "passive")))
  (net (code "4") (name "Net-(C2-Pad1)")
    (node (ref "C2") (pin "1") (pintype "passive"))
    (node (ref "R2") (pin "1") (pintype "passive"))
    (node (ref "U1") (pin "1") (pinfunction "+") (pintype "input")))
  (net (code "5") (name "Net-(R1-Pad2)")
    (node (ref "R1") (pin "2") (pintype "passive"))
    (node (ref "V1") (pin "1") (pintype "input")))
  (net (code "6") (name "VDD")
    (node (ref "U1") (pin "3") (pinfunction "V+") (pintype "power_in"))
    (node (ref "V2") (pin "1") (pintype "input")))
  (net (code "7") (name "VSS")
    (node (ref "U1") (pin "4") (pinfunction "V-") (pintype "power_in"))
    (node (ref "V3") (pin "2") (pintype "input"))))

```

In Spice format, the netlist is as follows:

```

.title KiCad schematic
.include "ad8051.lib"
XU1 Net-_C2-Pad1_ /lowpass VDD VSS /lowpass AD8051
C2 Net-_C2-Pad1_ GND 100n

```


```
C1 /lowpass Net-_C1-Pad2_ 100n
R2 Net-_C2-Pad1_ Net-_C1-Pad2_ 1k
R1 Net-_C1-Pad2_ Net-_R1-Pad2_ 1k
V1 Net-_R1-Pad2_ GND AC 1
V2 VDD GND DC 10
V3 GND VSS DC 10
.ac dec 10 1 1Meg
.end
```

Capitolo 8. Symbols and Symbol Libraries

KiCad organizes symbols into symbol libraries, which hold collections of symbols. Each symbol in a schematic is uniquely identified by a full name that is composed of a library nickname and a symbol name. For example, the identifier `Audio:AD1853` refers to the AD1853 symbol in the Audio library.

8.1. Managing symbol libraries

KiCad uses a table of symbol libraries to map a symbol library nickname to an underlying symbol library on disk. Kicad uses a global symbol library table as well as a table specific to each project. To edit either symbol library table, use **Preferences** → **Manage Symbol Libraries....**

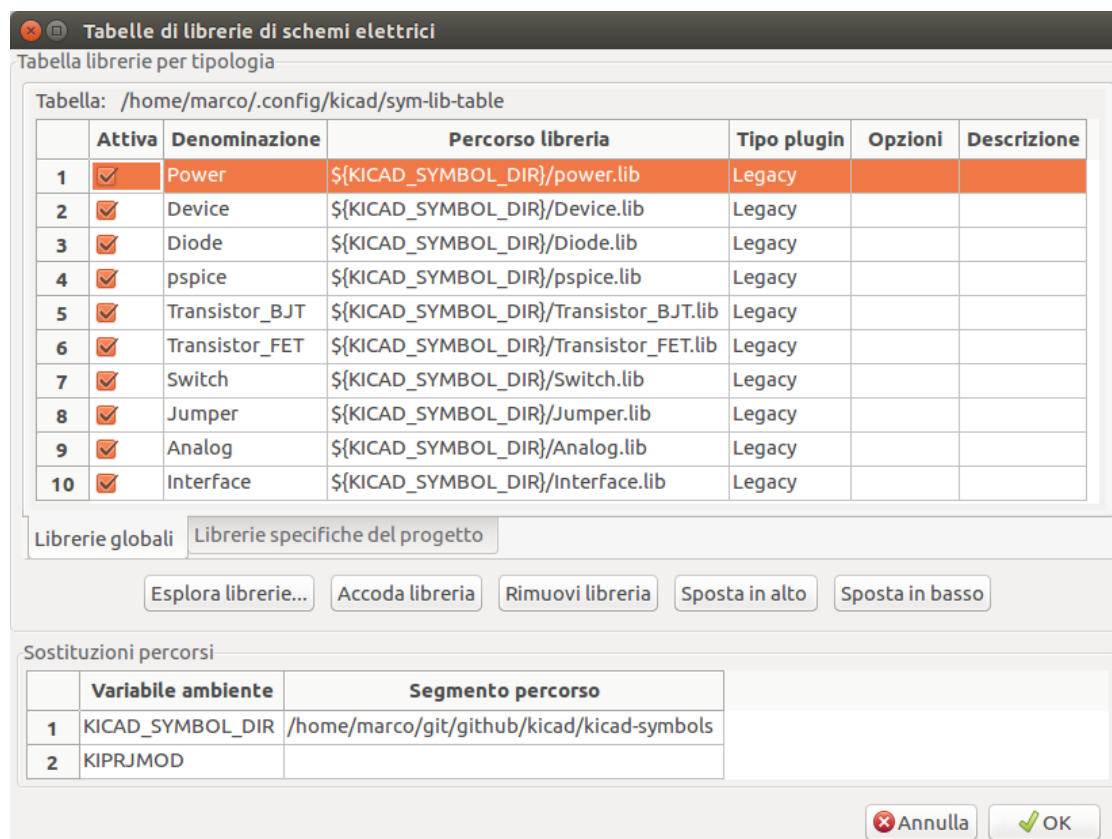

The global symbol library table contains the list of libraries that are always available regardless of the currently loaded project. The table is saved in the file `sym-lib-table` in the KiCad configuration folder. The location of this folder depends on the operating system being used.

The project specific symbol library table contains the list of libraries that are available specifically for the currently loaded project. If there are any project-specific symbol libraries, the table is saved in the file `sym-lib-table` in the project folder.

KiCad's symbol library management system allows directly using many types of symbol libraries, including formats that are native to other non-KiCad EDA tools:

- KiCad symbol libraries (`.kicad_sym` files)
- KiCad Legacy symbol libraries (`.lib` files)

- Altium Designer libraries (.SchLib or .IntLib files)
- CADSTAR Schematic Archive libraries (.lib files)
- KiCad database library configuration files (.kicad_dbl files)
- Eagle libraries (.xml files)
- EasyEDA (JLCEDA) Standard Edition libraries (.json files)
- EasyEDA (JLCEDA) Professional Edition libraries (.elbz, .epro, or .zip files)
- KiCad HTTP library configuration files (.kicad_httplib files)

Non-KiCad symbol libraries, including KiCad Legacy symbol libraries, can be migrated to KiCad .kicad_sym format using the **Migrate Libraries** button (see the migrating libraries section).

Nota

KiCad only supports writing to KiCad's native .kicad_sym format symbol libraries. All other symbol library formats are read-only. To modify a non-KiCad format symbol library, you must first convert it to KiCad format.

8.1.1. Configurazione iniziale

The first time the KiCad Schematic Editor is run and the global symbol table file sym-lib-table is not found in the KiCad configuration folder, KiCad will guide the user through setting up a new symbol library table. This process is described above. You can re-run this process at any time by clicking the **Reset Libraries**.

Avvertimento

Resetting your symbol library table will permanently change your symbol library table on disk.

8.1.2. Managing Table Entries

Symbol libraries can only be used if they have been added to either the global or project-specific symbol library table.

Add a library either by clicking the



button and selecting a library or clicking the



button and typing the path to a library file. The selected library will be added to the currently opened library table (Global or Project Specific). Libraries can be removed by selecting desired library entries and clicking the



button.

The



and



buttons move the selected library up and down in the library table. This does not affect the display order of libraries in the Symbol Editor or Symbol Chooser.

Libraries can be made inactive by unchecking the **Active** checkbox in the first column. Inactive libraries are still in the library table but do not appear in any library browsers and are not loaded from disk, which can reduce loading times.

A range of libraries can be selected by clicking the first library in the range and then `kbd:[Shift]-` clicking the last library in the range.

Each library must have a unique nickname: duplicate library nicknames are not allowed in the same table. However, nicknames can be duplicated between the global and project library tables. Libraries in the project table take precedence over libraries with the same name in the global table.

Library nicknames do not have to be related to the library filename or path. The colon character (:) cannot be used in library nicknames or symbol names because it is used as a separator between nicknames and symbols.

Each library entry must have a valid path. Paths can be defined as absolute, relative, or by path variable substitution.

The appropriate library format must be selected in order for the library to be properly read. The supported formats are listed above. Only KiCad format libraries (.kicad_sym) can be saved. Other symbol library formats are read-only and must be converted to KiCad format before you can modify them.

There is an optional description field to add a description of the library entry. The option field is not used at this time so adding options will have no effect when loading libraries.

8.1.3. Path Variable Substitution

The symbol library tables support path variable substitution, which allows you to define path variables containing custom paths to where your libraries are stored. Path variable substitution is supported by using the syntax `${PATH_VAR_NAME}` in the symbol library path.

By default, KiCad defines several path variables which are described in the project manager documentation. Path variables can be configured in the **Preferences** → **Configure Paths...** dialog.

Using path variables in the symbol library tables allows libraries to be relocated without breaking the symbol library tables, so long as the path variables are updated when the library location changes.

Nota

KiCad will automatically resolve versioned path variables from older versions of KiCad to the value of the corresponding variable from the current KiCad version, as long as the old variable is not explicitly defined itself. For example, `${KICAD8_SYMBOL_DIR\}` will automatically resolve to the value of `${KICAD9_SYMBOL_DIR\}` if there is no `KICAD8_SYMBOL_DIR` variable defined.

`${KIPRJMOD}` is a special path variable that always expands to the absolute path of the current project directory. `${KIPRJMOD}` allows libraries to be stored in the project folder without having to use an

absolute path in the project library table. This makes it possible to relocate projects without breaking their project library tables.

8.1.4. Modelli di utilizzo

Symbol libraries can be defined either globally or specifically to the currently loaded project. Symbol libraries defined in the user's global table are always available and are stored in the `sym-lib-table` file in the user's KiCad configuration folder. The project-specific symbol library table is active only for the currently open project file.

Ci sono vantaggi e svantaggi per ogni metodo. Definire tutte le librerie nella tabella globale significa che queste saranno sempre disponibili alla bisogna. Lo svantaggio di ciò è aumenterà che il tempo di caricamento.

Definire tutte le librerie di simboli su base specifica del progetto significa che si avranno solamente le librerie necessarie per quel progetto e ciò diminuirà il tempo di caricamento dei simboli. Lo svantaggio è che sarà sempre necessario ricordarsi di aggiungere ogni libreria di simboli necessaria per ogni progetto.

Uno schema di utilizzo potrebbe essere quello di definire le librerie di uso comune a livello globale e le librerie richieste solo per il progetto nella tabella della libreria specifica del progetto.

8.1.5. Migrating symbol libraries to KiCad format

Non-KiCad format libraries, including legacy libraries (`.lib` files), are read-only. They need to be converted to KiCad format (`.kicad_sym` files) before you can save changes to them.

Nota

As with most KiCad files, newer versions of KiCad can open older-format library files, but older versions of KiCad cannot read files once they have been saved by a newer version of KiCad.

Libraries in other formats can be converted to KiCad libraries by selecting them in the symbol library table and clicking the **Migrate Libraries** button. Multiple libraries can be selected and migrated at once by `kbd:[Ctrl]-clicking` or `kbd:[shift]-clicking`.

Libraries can also be converted one at a time by opening them in the Symbol Editor and saving them as a new library.

8.1.6. Rimappatura dei vecchi progetti

When loading a schematic created prior to the symbol library table implementation, KiCad will attempt to remap the symbol library links in the schematic to the appropriate library table symbols. The success of this process is dependent on several factors:

- le librerie originali usate nello schema sono ancora disponibili e invariate da quando il simbolo è stato aggiunto allo schema.
- tutte le operazioni di salvataggio sono state eseguite quando sono state rilevate per creare una libreria di salvataggio o mantenere aggiornata la libreria di salvataggio esistente.

- l'integrità della libreria cache dei simboli del progetto non è stata danneggiata.

Avvertimento

La rimappatura eseguirà un salvataggio di tutti i file che vengono modificati durante l'operazione, nella cartella di salvataggio all'interno della cartella del progetto. Effettuare sempre un salvataggio del progetto prima di rimappare, (N.d.T. per evitare brutte sorprese) nel caso in cui qualcosa vada storto.

Avvertimento

L'operazione di recupero viene eseguita anche se è stata disabilitata per garantire che i simboli corretti siano disponibili per la rimappatura. Non annullare questa operazione o la rimappatura non riuscirà a rimappare correttamente i simboli degli schemi. Eventuali collegamenti a simboli spezzati dovranno essere corretti manualmente.

Nota

If the original libraries have been removed and the rescue was not performed, the cache library can be used as a recovery library as a last resort. Copy the cache library to a new file name and add the new library file to the top of the library list using a version of KiCad prior to the symbol library table implementation.

8.2. Creating and editing symbols

A symbol is a schematic representation of a component. A symbol is composed of:

- Elementi grafici (linee, cerchi, archi, testo, ecc.) che determinano l'aspetto del simbolo nello schema elettrico.
- Pins, which have both graphic properties (line, clock, inverted, low level active, etc.) and electrical properties (input, output, bidirectional, etc.) used by the Electrical Rules Check (ERC) tool.
- Fields, such as references, values, corresponding footprint names for PCB design, etc.

A symbol library is composed of one or more symbols. Generally the symbols are logically grouped by function, type, and/or manufacturer. Each symbol library is a single file with the `.kicad_sym` extension.

Symbols can be derived from another symbol in the same library. Derived symbols share the base symbol's graphical shape and pin definitions, but can override the base symbol's property fields (value, footprint, footprint filters, datasheet, description, etc.). Derived symbols can be used to define symbols that are similar to a base part. For example, 74LS00, 74HC00, and 7437 symbols could all be derived from a 7400 symbol. In previous versions of KiCad, derived symbols were referred to as aliases.

8.2.1. Symbol Editor overview

KiCad provides a symbol editing tool that allows you to create libraries; add, edit, delete, or transfer symbols between libraries; export symbols to files; and import symbols from files. The Symbol Editor

can be launched from the KiCad Project Manager or from the Schematic Editor (**Tools** → **Symbol Editor**). You can also open the Symbol Editor from the a symbol in the schematic; in this way you can edit either the library copy or the schematic copy of that symbol in the editor.

Nota


Editing the library version of a symbol will not affect any copies of that symbol that have been added to a schematic until the schematic copy is updated from the library. Conversely, editing the schematic version of a symbol will not affect the library version of a symbol or any other copies of that symbol in a schematic.

In general, the flow for designing a symbol involves:

- Specificare se il simbolo è formato da più di un'unità.
- Specificare se il simbolo possiede uno stile corpo alternativo (altrimenti detto rappresentazione De Morgan).
- La progettazione della sua rappresentazione simbolica usando linee, rettangoli, cerchi, poligoni e testo.
- Adding pins by carefully defining each pin's graphical elements, name, number, and electrical property (input, output, tri-state, power output, etc.).
- Determining if the symbol should be derived from another symbol with the same graphical design and pin definition.
- L'aggiunta di campi opzionali come il nome dell'impronta usata dal software di progettazione di circuiti stampati e/o la definizione della loro visibilità.
- La documentazione del simbolo aggiungendo una stringa di descrizione, collegamenti ai datasheet, ecc.
- Il salvataggio nella libreria scelta.

The Symbol Editor main window is shown below. It has three toolbars for quick access to common features and a symbol viewing/editing canvas. Not all commands are available on the toolbars, but all commands are available in the menus.

In addition to the toolbars, there are collapsible panels for the symbol tree, Properties Manager, and selection filter on the left. The bottom of the window contains a message panel that shows details about the selected object.

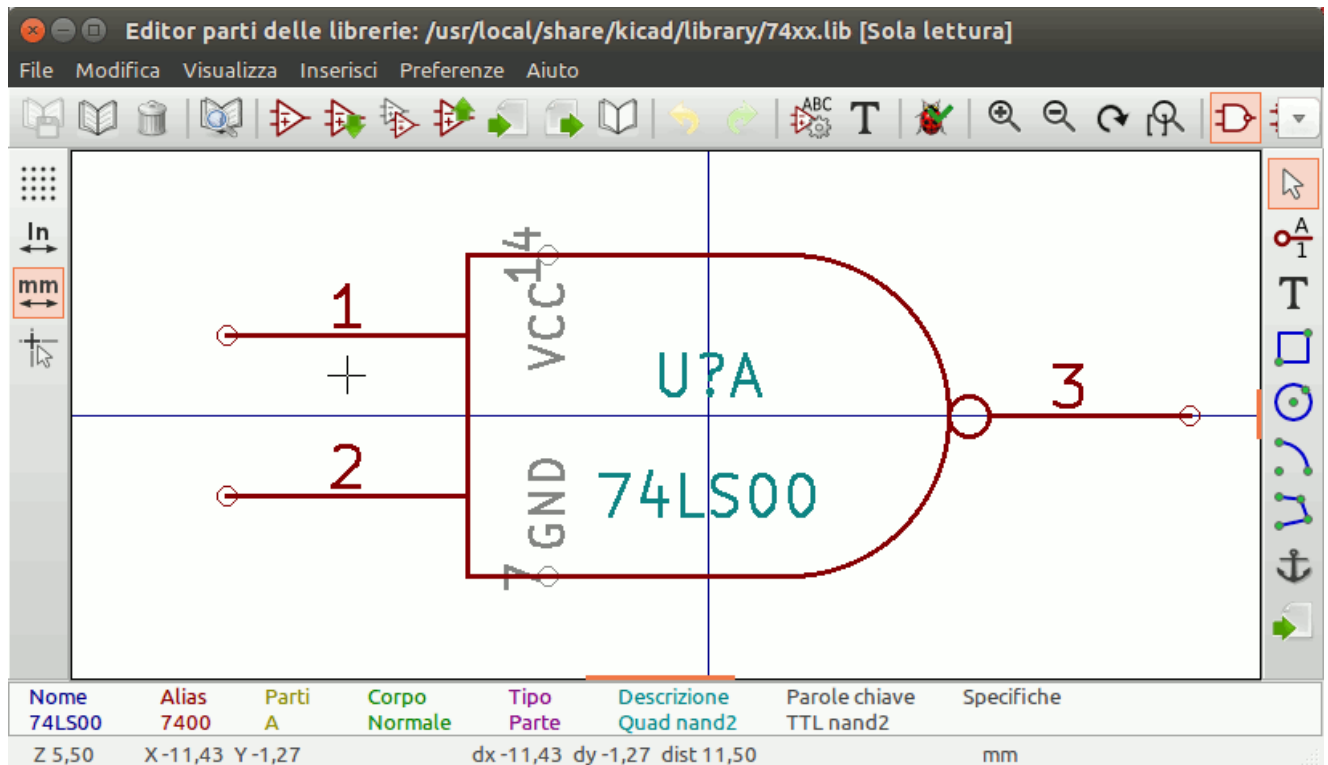

Top toolbar

The main toolbar is at the top of the main window. It has buttons for the undo/redo commands, zoom commands, symbol properties dialogs, and unit/representation management controls.

	Create a new symbol in the selected library.
	Save the currently selected library. All modified symbols in the library will be saved.
	Undo last edit.
	Redo last undo.
	Refresh display.
	Zoom in.
	Zoom out.
	Zoom to fit symbol in display.
	Zoom to fit selection.
	Rotate counter-clockwise.
	Rotate clockwise.
	Mirror horizontally.
	Mirror vertically.
	Edit the current symbol's properties.
	Edit the symbol's pins in a tabular interface.

	Open the symbol's datasheet, if it is defined.
	Run the symbol checker to test the current symbol for design errors.
	Select the normal body style. The button is disabled if the current symbol does not have an alternate body style.
	Select the alternate body style. The button is disabled if the current symbol does not have an alternate body style.
	Select the unit of a multi-unit symbol to display. The drop down control will be disabled if the current symbol does not have multiple units.
	Enable synchronized pin edit mode. When this mode is enabled, any pin modifications are propagated to all other symbol units. Pin number changes are not propagated. This mode is automatically enabled for symbols with multiple interchangeable units and cannot be enabled for symbols with only one unit.
	Insert current symbol into the schematic.

Left toolbar display controls

The left toolbar provides options to change the display of items in the Symbol Editor.

	Toggle grid visibility on and off.
	Toggle item-specific grid overrides on and off.
	Set units to inches, mils (0.001 inch), or millimeters.
	Toggle full screen cursor on and off.
	Toggle display of pin electrical types.
	Toggle display of hidden (invisible) pins.
	Toggle display of hidden (invisible) fields.
	Toggle display of library and symbol tree.
	Toggle display of Properties Manager panel.

Right toolbar tools

Placement and drawing tools are located in the right toolbar.

	Select tool. Right-clicking with the select tool opens the context menu for the object under the cursor. Left-clicking with the select tool displays the attributes of the object under the cursor in the message panel at the bottom of the main window. Double-left-clicking with the select tool will open the properties dialog for the object under the cursor.
	Pin tool. Left-click to add a new pin.
	Graphical text tool. Left-click to add a new graphical text item.
	Graphical textbox tool. Left-click to add a new graphical textbox item.

	Rectangle tool. Left-click to begin drawing the first corner of a graphical rectangle. Left-click again to place the opposite corner of the rectangle.
	Circle tool. Left-click to begin drawing a new graphical circle from the center. Left-click again to define the radius of the circle.
	Arc tool. Left-click to begin drawing a new graphical arc item from the first arc end point. Left-click again to define the second arc end point. Adjust the radius by dragging the arc center point.
	Bezier curve tool. Left-click to begin drawing a new graphical bezier curve item. First click for the start point, then for the control points and the end point. Adjust the curve by dragging the points.
	Connected line tool. Left-click to begin drawing a new graphical line item in the current symbol. Left-click for each additional connected line. Double-left-click to complete the line.
	Connected line tool. Left-click to begin drawing a new graphical line item in the current symbol. Left-click for each additional connected line. Double-left-click to complete the line.
	Anchor tool. Left-click to set the anchor position of the symbol.
	Delete tool. Left-click to delete an object from the current symbol.

8.2.2. Browsing, modifying, and saving symbols

The



button displays or hides the list of available libraries, which allows you to select an active library. When a new symbol is created, it will be placed in the active library.

Clicking on a symbol name opens that symbol in the editor, and hovering the cursor over the name of a symbol displays a preview of the symbol.

Nota

Alcuni simboli sono derivati da altri simboli. I nomi dei simboli derivati vengono visualizzati in *corsivo* nella vista ad albero. Se un simbolo derivato viene aperto, la sua grafica non sarà modificabile. I suoi campi simbolo invece saranno modificabili normalmente. Per modificare la grafica di un simbolo base e di tutti i suoi simboli derivati, bisogna aprire il simbolo base.

After modification, a symbol can be saved in the current library or a different library. To save the modified symbol in the current library, click the



icon.

Nota

Saving a modified symbol also saves all other modified symbols in the same library.

To save the symbol changes to a new symbol, click **File** → **Save As....** The symbol can be saved in the current library or a different library (including a new library), and a new name can be set for the

symbol. Alternatively, you can use **File** → **Save Copy As...**, which behaves the same as **Save As** except that the original symbol remains open rather than switching to the new symbol.


To create a new file containing only the current symbol, click **File** → **Export** → **Symbol....** This file will be a standard symbol library file which will contain only one symbol. The library will not be added to your library table.

The editor can also open symbols from the schematic. To edit a symbol from the schematic, right click a symbol in the Schematic Editor and select **Open in Schematic Editor** (kbd:[Ctrl+E]).

Editing and saving the schematic copy of a symbol will only update that symbol in the schematic; it will not update other copies of that symbol in the schematic, and it will not change the original library copy of the symbol. When you open the schematic copy of a symbol, the Schematic Editor displays an info bar that warns you the library copy will not be modified. You can click the link in this info bar to open the library version of the symbol instead, or press kbd:[Ctrl+Shift+E].

8.2.3. Creating a new symbol library

You can create a new symbol library by clicking **File** → **New Library....** At this point you must choose whether the new library should be added to the global symbol library table or the project symbol library table. Libraries in the global library table will be available to all projects, while libraries in the project library table will only be available in the current project.

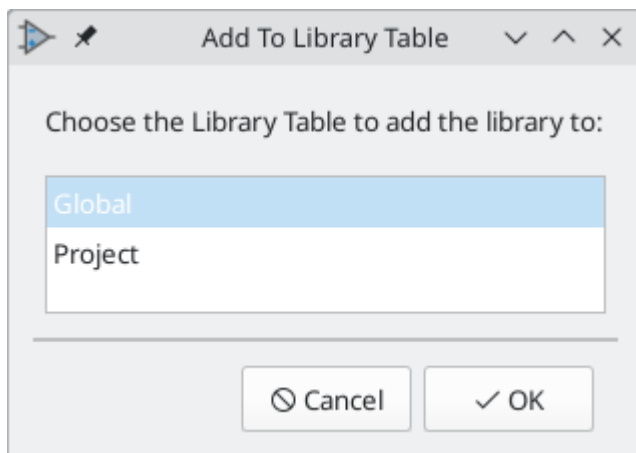

Following selection of the library table, you must choose a name and location for the new library. A new, empty library will be created at the specified location.

8.2.4. Creating a new symbol

To create a new symbol in the current symbol library, click the  button. You will be asked for a number of symbol properties.

- A symbol name
- An optional base symbol to derive the new symbol from. The new symbol will use the base symbol's graphical shape and pin configuration, but other symbol information can be modified in the derived symbol. The base symbol must be in the same library as the new derived symbol.

- Il prefisso del riferimento (U, C, R...).
- The number of units per package, and whether those units are interchangeable (for example a 7400 quad NAND symbol could have 4 units, one for each gate).
- If an alternate body style (sometimes referred to as a "De Morgan equivalent") is desired.
- Whether the symbol is a power symbol. Power symbols appear in the **Add Power Symbol** dialog in the Schematic editor, make global net connections based on their value, cannot be assigned a footprint, and are excluded from the PCB and bill of materials.
- Whether the symbol should be excluded from the bill of materials.
- Whether the symbol should be excluded from the PCB.

There are also several graphical options.

- The offset between the end of each pin and its pin name.
- Whether the pin number and pin name should be displayed.
- Whether the pin names should be displayed alongside the pins or at the ends of the pins inside the symbol body.

These properties can also be changed later in the Symbol Properties window.

Symbol name:

Derive from existing symbol:

Default reference designator:

Number of units per package:

☐ All units are interchangeable

☐ Create symbol with alternate body style (De Morgan)

☐ Create symbol as power symbol

☐ Exclude from schematic bill of materials

☐ Exclude from board


Pin name position offset:

☒ Show pin number text

☒ Show pin name text

☒ Pin name inside

Un nuovo simbolo verrà creato usando le proprietà sopraesposte e apparirà nell'editor come mostrato sotto.

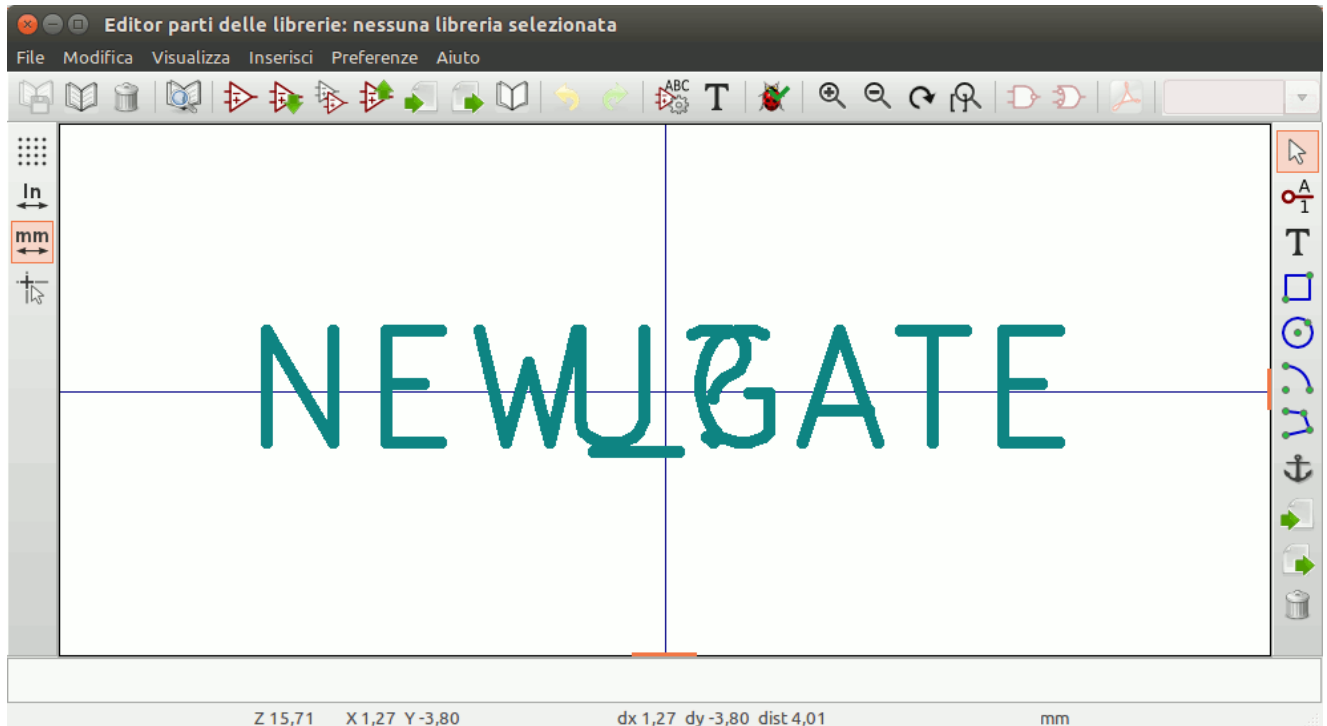

The blue cross in the center is the symbol anchor, which specifies the symbol origin i.e. the coordinates (0, 0). The anchor can be repositioned by selecting the




button and clicking on the new desired anchor position.

8.2.5. Editing Symbol Properties

Symbol properties are set when the symbol is created but they can be modified at any point. To change the symbol properties, click on the



button to show the Symbol Properties dialog. You can also double click an empty spot in the editing canvas.

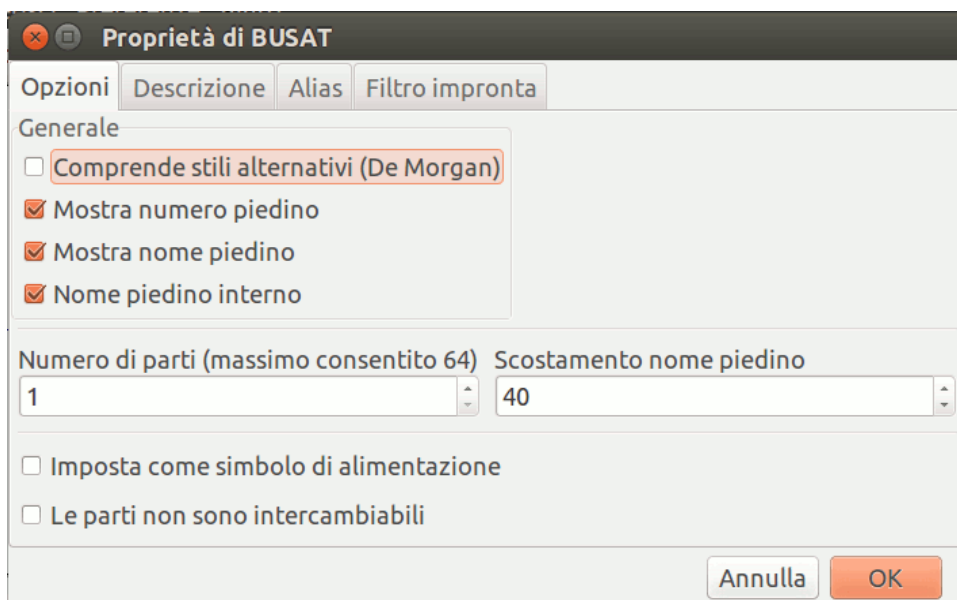


It is important to set the **number of units** and check **all units are interchangeable** and **has alternate body style**, as applicable, because these settings affect how pins and graphics are added to each symbol unit.

If you change the number of units per package after adding the pins to the symbol, you will need to do extra work to add pins and graphics for the additional units. The pins and graphics would have been automatically added to each unit had these properties been correctly set initially. Nevertheless, it is possible to modify these properties at any time.

The graphic options **Show pin number** and **Show pin name** define the visibility of the pin number and pin name text. The option **Place pin names inside** defines the pin name position relative to the pin body. The pin names will be displayed inside the symbol outline if the option is checked. In this case the **Pin Name Position Offset** property defines the shift of the text away from the body end of the pin. A value from 0.02 to 0.05 inches is usually reasonable.

The example below shows a symbol with the **Place pin name inside** option unchecked. Notice the position of the names and pin numbers.

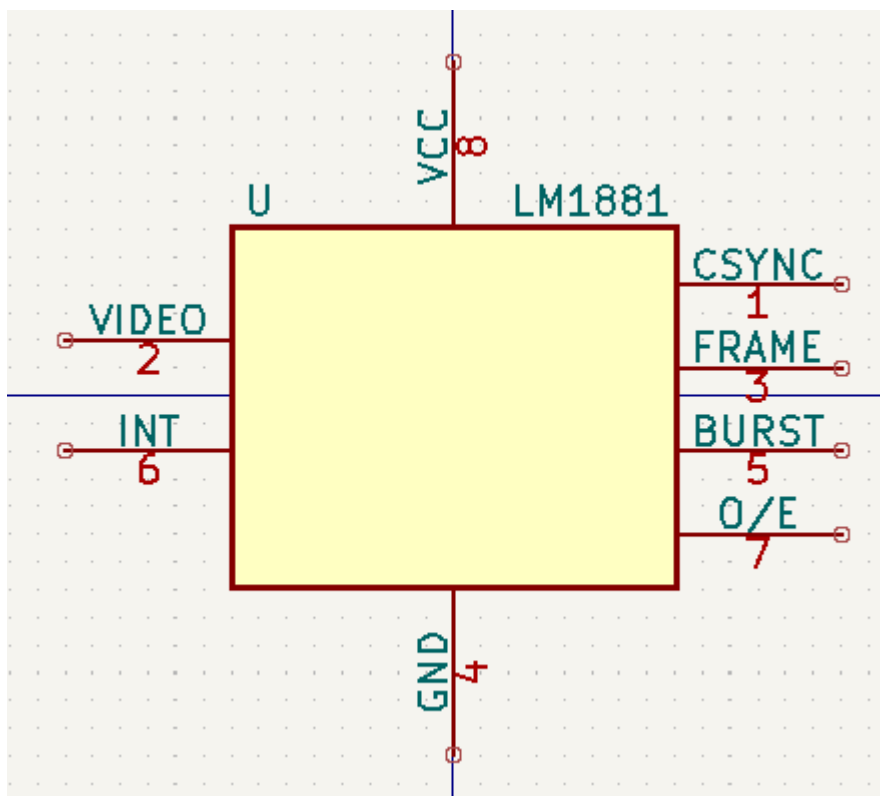

Symbol Name and Keywords

Symbol name is the symbol's name in the library. Symbols are identified by a combination of the library and symbol name.

In previous versions of KiCad, the symbol name was linked to the Value field. This link is removed in KiCad 7.0 and later.

The **keywords** should contain additional terms related to the component. Keywords are primarily used, in combination with the symbol name and the Description field, for searching for the symbol in the Symbol Chooser and the Symbol Editor. Those three items are also displayed when you select a symbol in the Symbol Chooser.

8.2.6. Campi del simbolo

Symbols contain multiple fields, which are named values containing information related to the symbol. Fields can be displayed on the schematic or hidden and only shown in the symbol's properties. Some fields have special meaning to KiCad: `Reference` and `Footprint` are both critical for creating a PCB, for example. Other fields may contain information that is important for a design but is not interpreted by KiCad, like pricing or stock information for a part.

Any fields defined in a library symbol will be included in the symbol when it is added to a schematic. You can also add new fields to symbols in the schematic. Whether they are in the library symbol or not, these fields can then be edited on a per-symbol basis in the schematic. They are also transferred to the symbol's corresponding footprint in the PCB.

Nota

Symbol fields are different than graphic text. In addition to being named, fields can be moved and edited in the schematic, while symbol text can only be edited in the symbol editor.

All library symbols are defined with five default fields: `Reference`, `Value`, `Footprint`, `Datasheet`, and `Description`, which are added whenever a symbol is created. These default fields cannot be deleted. Only the `Reference` field is required to have a value: the contents of a library symbol's `Reference` field is used as the reference designator prefix when the symbol is added to a schematic. In the schematic, the symbol's `Reference` field contains the entire reference designator.

The `Footprint` field, if used, contains a reference to a footprint for the symbol. The format is `LIBNAME:FOOTPRINTNAME`, where `LIBNAME` is the name of the footprint library in the footprint library table (see the `Footprint Library Table` section in the PCB Editor manual) and `FOOTPRINTNAME` is the name of the footprint in the library `LIBNAME`.

The `Description` field can contain text describing the symbol such as the component function, distinguishing features, and package options. Together with the symbol's name and keywords, text in this field is used when searching for symbols in the Symbol Chooser or Symbol Editor. Before KiCad version 8.0, this was a dedicated property (like the symbol name and keywords) rather than a symbol field.

Symbols defined in libraries are typically defined with only these five default fields. Additional fields such as vendor, part number, unit cost, etc. can be added to library symbols but generally this is done in the schematic editor so the additional fields can be added to every symbol in the schematic, not just all symbols of one type.

Nota

A convenient way to create additional empty symbol fields is to use define field name templates. Field name templates define empty fields that are added to each symbol when it is inserted into the schematic. Field name templates can be defined globally (for all schematics) in the Schematic Editor Preferences, or they can be defined locally (specific to each project) in the Schematic Setup dialog.

Nota

If you want to manage a large amount of component data in symbol fields, consider using database libraries.

To edit an existing symbol field, double-click the field, select it or hover and press `kbd:[E]`, or right-click on the field text and select **Properties....**

To add new fields, delete optional fields, or edit existing fields, use the



icon on the main tool bar to open the Symbol Properties dialog. Fields can be arbitrarily named, but names starting with `ki_`, e.g. `ki_description`, are reserved by KiCad and should not be used for user fields.


Fields have a number of properties, each of which is shown as a column in the properties grid. Not all columns are shown by default; columns can be shown or hidden by right clicking on the grid header and selecting or deselecting columns from the menu.

8.2.7. Footprint Filters

The footprint filters tab is used to define which footprints are appropriate to use with the symbol. The filters can be applied in the Footprint Assignment tool so that only appropriate footprints are displayed for each symbol.

Multiple footprint filters can be defined. Footprints that match any of the filters will be displayed; if no filters are defined, then all footprints will be displayed.


Filters can use wildcards: `\*` matches any number of characters, including zero, and `?` matches zero or one characters. For example, `SOIC-*` would match the `SOIC-8_3.9x4.9mm_P1.27mm` footprint as well as any other footprint beginning with `SOIC-`. The filter `SOT?23` matches `SOT23` as well as `SOT-23`.

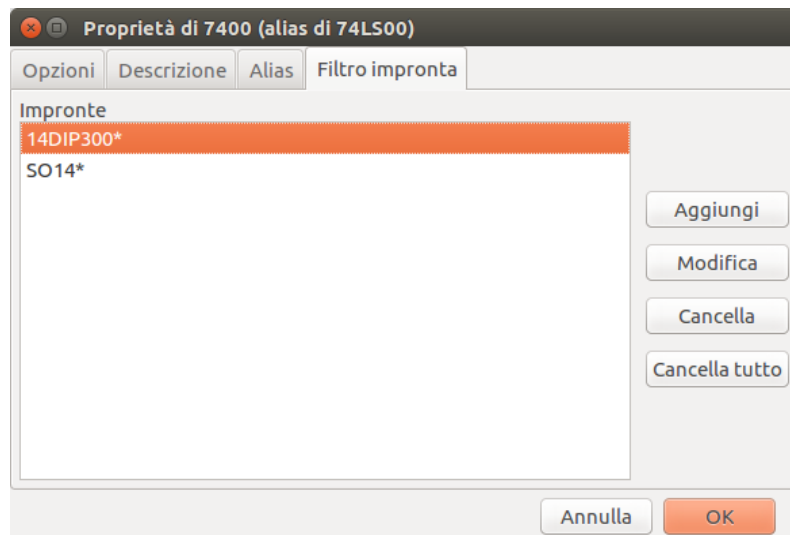

8.2.8. Embedding files

External files can be embedded within a symbol. Embedding a file stores a copy of the file inside the symbol. The symbol can then refer to the embedded copy of the file instead of the external file, which makes the symbol more portable as it doesn't rely on an external file, although the symbol library's filesize is increased as a result. In symbols this is especially useful for embedding datasheets and SPICE models. Files embedded in a symbol are deduplicated when the symbol is added to a schematic: if a file is embedded in a symbol, and multiple instances of that symbol are added to the schematic, only one copy of the file will be embedded, and all of the schematic instances will refer to

the same embedded file. Files embedded in a schematic cannot be referred to in the parent schematic. File embedding is explained in more detail in the Schematic Setup documentation.

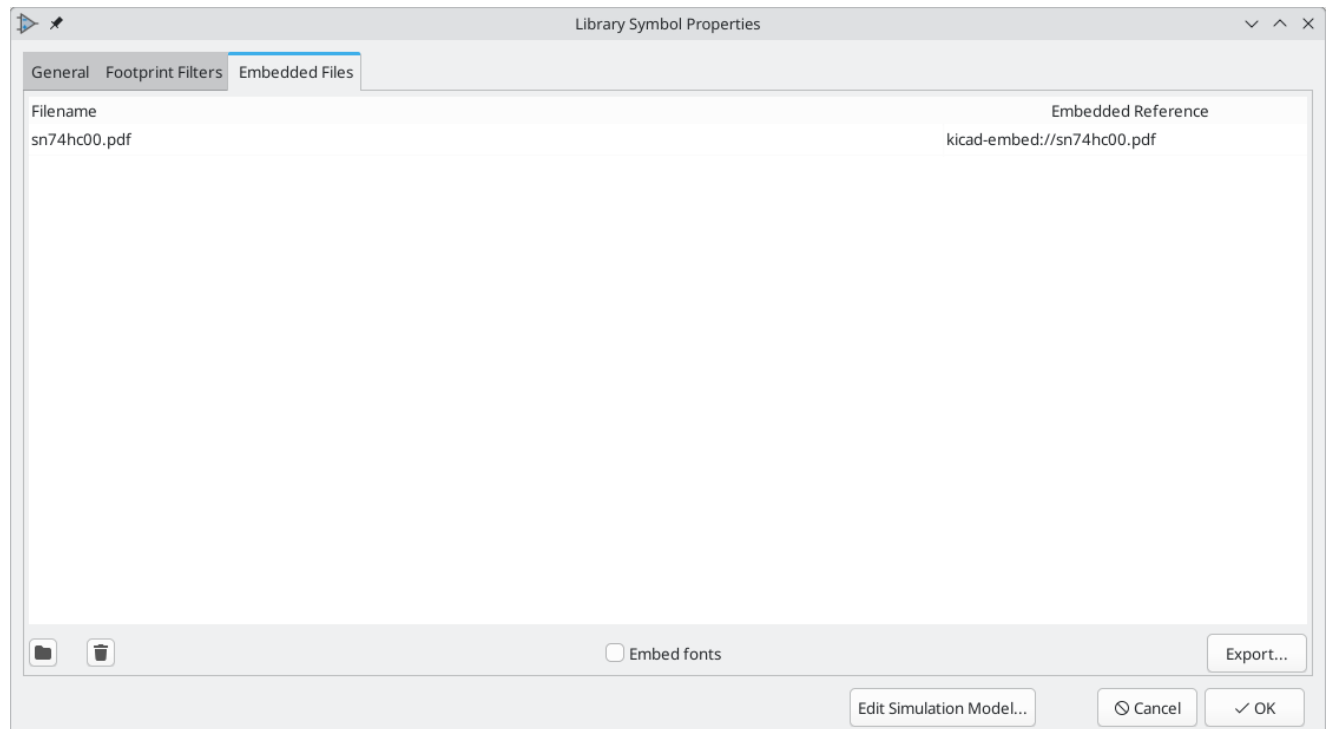

Nota

You can add a datasheet, or a SPICE model, to a symbol and embed it in one step. To do so, browse for a datasheet (in the Symbol Properties dialog) or a SPICE model (in the SPICE Model Editor) and enable the **Embed File** checkbox in the file browser while choosing a file. This embeds the file and automatically uses the embedded reference as the file path instead of the path to the external file.

8.2.9. Symbol Units and Alternate Body Styles

Symbols can have more than one unit per package, each with different graphics and pin configurations. This is often used for logic gates, opamps, or other components that have multiple subunits within one physical package. Symbols can also have up to two body styles, a standard symbol and an alternate symbol often referred to as a "De Morgan equivalent".

For example, consider a relay with two switches, which can be designed as a symbol with one body style and three different units: a coil, switch 1, and switch 2. Designing a symbol with multiple units per package and/or alternate body styles is very flexible. A pin or a body symbol item can be common to all units or specific to a given unit or they can be common to both symbolic representation so are specific to a given symbol representation.

By default, pins are specific to a unit and body style. When a pin is common to all units or all body styles, it only needs to be created once, no matter how many units or body styles are used. This is also the case for the body style graphic shapes and text, which may be common to each unit, but typically are specific to each body style.

To add additional units to a symbol, set the **Number of Units** property to the appropriate number in the Symbol Properties dialog. By default, symbol units are named Unit A, Unit B, etc., but you can set an arbitrary name for the current unit using **Edit → Set Unit Display Name...**

Use the



unit selection dropdown to select the unit you wish to edit.

To add an alternate body style, set the **Has alternate body style (De Morgan)** property in the Symbol Properties dialog.

If the symbol has an alternate body style defined, one body style must be selected for editing at a time. To edit the normal representation, click the



icon. To edit the alternate representation, click on the



icon.

Nota

Synchronized Pins Edit Mode can be enabled by clicking the




icon. In this mode, pin modifications are propagated between symbol units; changes made in one unit will be reflected in the other units as well. When this mode is disabled, pin changes made in one unit do not affect other units. This mode is enabled automatically when **All units are interchangeable** is checked, but it can be disabled. The mode cannot be enabled when **All units are interchangeable** is unchecked or when the symbol only has one unit.


Esempio di simbolo multiunità non interscambiabili

For an example of a symbol with multiple units that are not interchangeable, consider a relay with 3 units per package: a coil, switch 1, and switch 2.


The three units are not all the same, so **All units are interchangeable** should be deselected in the Symbol Properties dialog. Alternatively, this option could have been specified when the symbol was initially created.

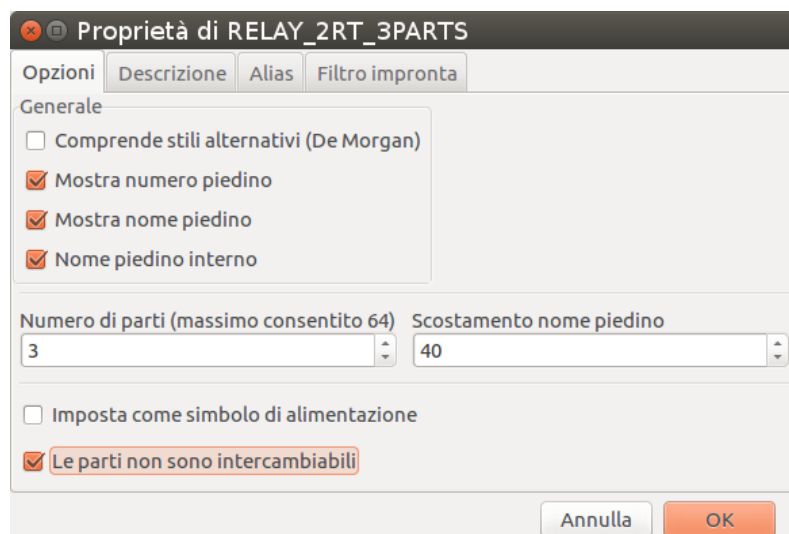


==== Unit A

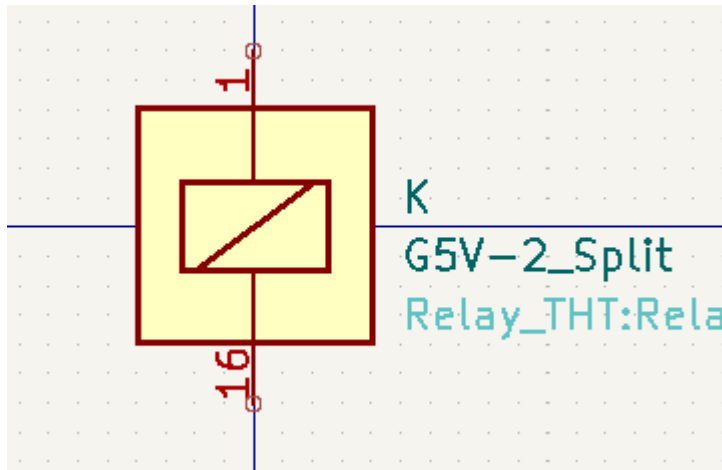

===== Unit B

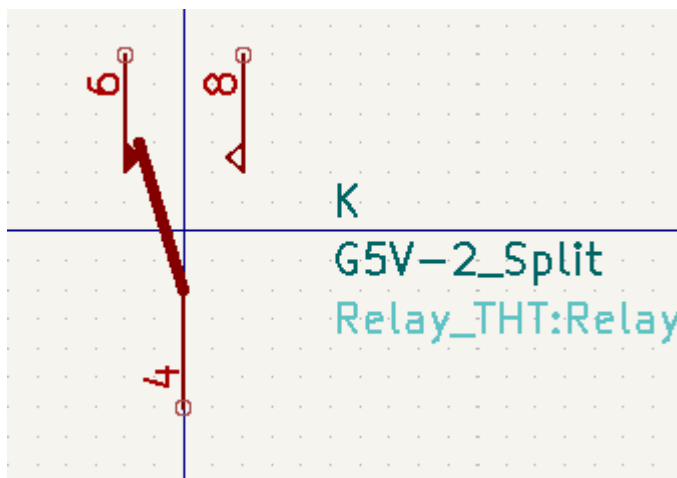

===== Unit C

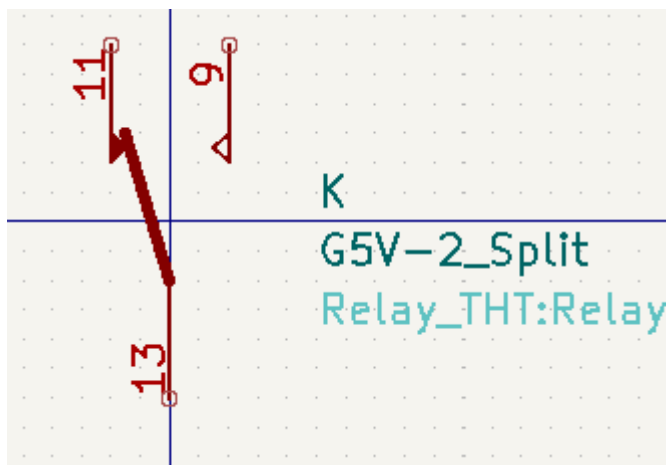

L'unità A non ha lo stesso simbolo e disposizione di pin delle unità B e C, perciò le unità non sono intercambiabili.

8.2.10. Symbol Graphics

Graphical elements create the visual representation of a symbol and contain no electrical connection information. You can draw new graphic shapes using the buttons on the right toolbar. The following types of objects are available:

-) and

) defi

- 

) defi

- 

) defi

-

) defi


- T

), wh

Each graphic item (line, arc, circle, etc.) can be defined as common to all units and/or body styles or specific to a given unit and/or body style.

Element options can be quickly accessed by right-clicking on the element to display the context menu for the selected element. You can also double-left-click on an element to modify its properties, or edit its properties using the Properties Manager panel.

Below is the properties dialog for a polygon element.

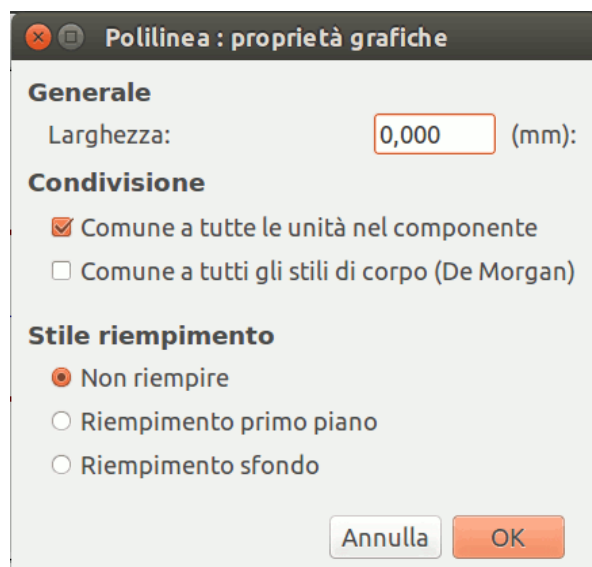

Le proprietà di un elemento grafico sono:

- **Border** determines whether the the shape's outline should be drawn.
- **Width** and **color** define the line width and color of the border. A border width of 0 uses the schematic's default symbol line width. **Style** determines the line style of the border (solid, dashed, dotted, etc.).
- **Fill Style** determines if the shape defined by the graphical element is to be drawn unfilled or filled. The fill color can be the color theme's body outline color, body background color, or a custom color.
- **Common to all units in symbol** determines if the graphical element is drawn for each unit in symbol with more than one unit per package or if the graphical element is only drawn for the current unit.
- **Common to all body styles (De Morgan)** determines if the graphical element is drawn for each symbolic representation in symbols with an alternate body style or if the graphical element is only drawn for the current body style.
- **Private to Symbol Editor** causes the shape to be visible only when the symbol is edited in the Symbol Editor. The shape will be hidden when the symbol is added to a schematic.

8.2.11. Symbol Pins

You can create and insert a pin by clicking on the



button. Pin properties can be edited by double clicking on the pin. You can also delete or move pins that you have already added. Pins must be created carefully, because any error will have consequences on the PCB design.

A pin is defined by its graphical representation, its name, and its number. The pin's name and number can contain letters, numbers, and symbols, but not spaces. For the Electrical Rules Check (ERC) tool to be useful, the pin's electrical type (input, output, tri-state...) must also be defined correctly. If this type is not defined properly, the schematic ERC check results may be invalid.

Note importanti:

- Symbol pins are matched to footprint pads by number. The pin number in the symbol must match the corresponding pad number in the footprint.
- Do not use spaces in pin names and numbers. Spaces will be automatically replaced with underscores (_).
- To define a pin name with an inverted signal (overbar) use the ~ (tilde) character followed by the text to invert in braces. For example ~{F0}0 would display FO O.
- Se il nome pin è vuoto, il pin viene considerato senza nome.
- I nomi di pin possono essere ripetuti in un simbolo.
- I numeri di pin devono essere univoci in un simbolo.

Proprietà piedino

Proprietà piedino

Nome pin: Dimensioni testo nome: pollici

Numero pin: Dimensioni testo numero: pollici

Orientamento: Lunghezza: pollici

Funzionalità elettrica:

Aspetto grafico:

Condivisione

☐ Comune a tutte le unità nel componente

☐ Comune a tutti gli stili di corpo (De Morgan)

Proprietà schema

☒ Visibile


Annulla OK

La finestra di dialogo delle proprietà del pin permette di modificare tutte le caratteristiche di un pin. Questa finestra di dialogo salta fuori automaticamente quando si crea un pin o facendo doppio clic su un pin già esistente. Questa finestra di dialogo permette di modificare:

- Nome e dimensione testo del pin.
- Numero e dimensione testo del pin.
- Lunghezza pin.
- Tipo elettrico e stile grafico del piedino.
- Unità e appartenenza a rappresentazioni alternative.
- Visibilità pin.
- Definizioni alternative del pin.


Stili grafici pin

The different pin graphic styles are shown in the figure below. These styles are purely graphical and do not affect the pin's electrical type.

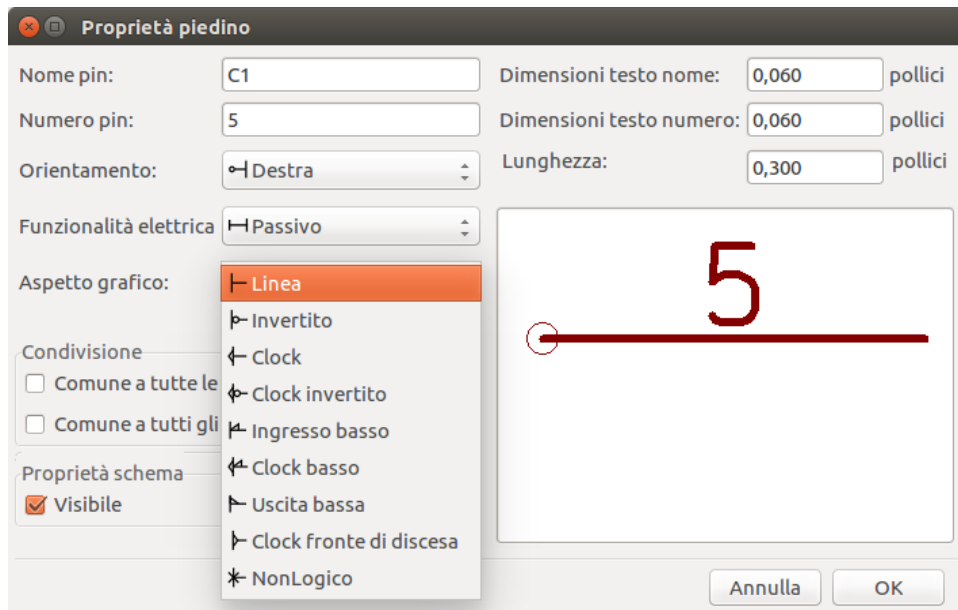

Tipi elettrici del pin

Each pin in a symbol has an electrical type, such as input, output, or tri-state.

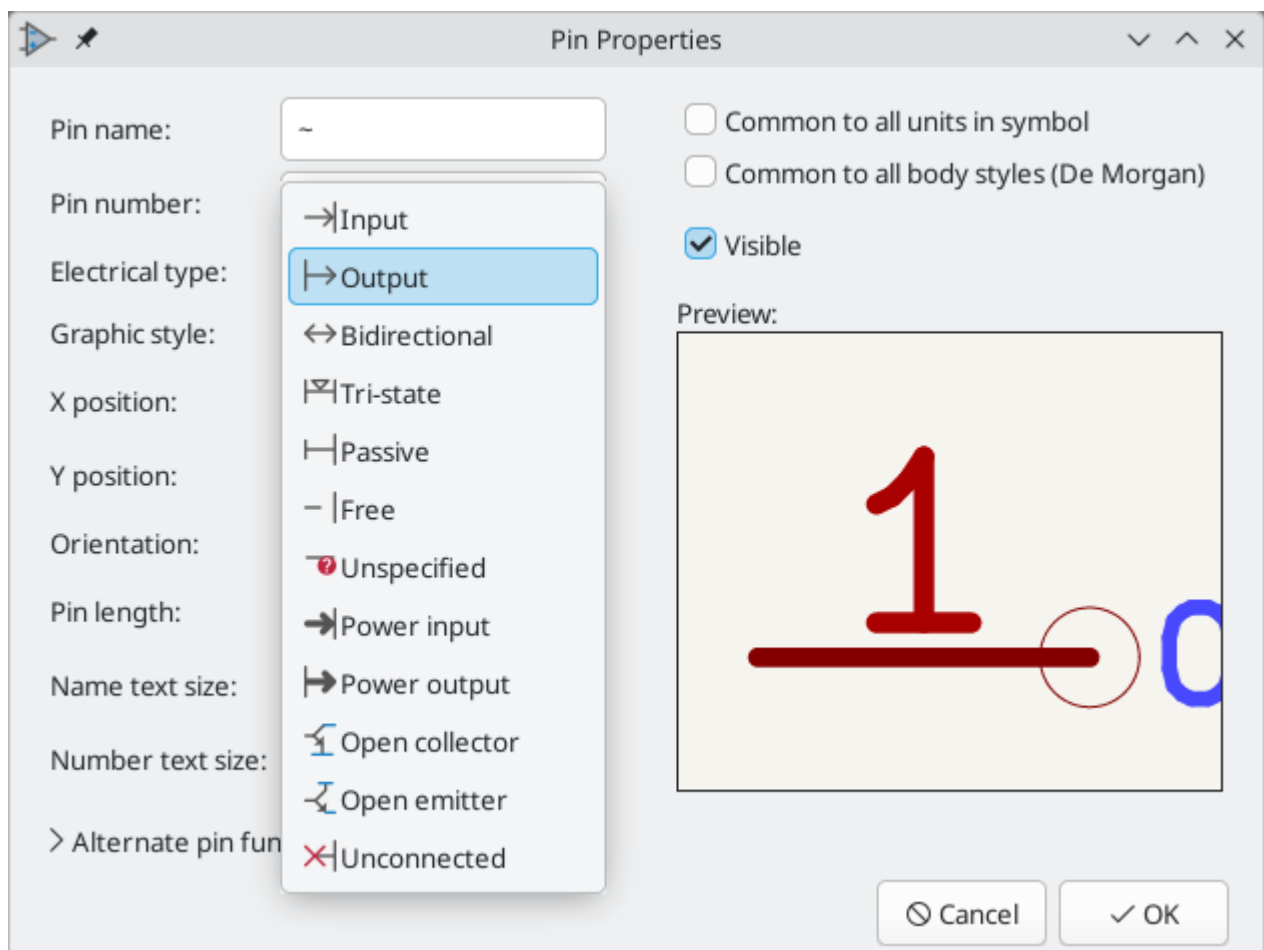

Choosing the correct electrical type is important for the schematic ERC tool. ERC will check that pins are connected appropriately, for example ensuring that input pins are driven and power inputs receive power from an appropriate source.

You can use the **Pin Conflicts Map** in the schematic editor to configure which pin types are allowed to connect and which will conflict. The default Pin Conflicts settings are briefly explained below. For more information, see the ERC documentation.

Additionally, some pin types have special behavior outside of ERC. In the router, pads corresponding to a **free** pin can be connected to copper of any other net without causing a DRC error, and multiple pads corresponding to a single **unconnected** pin do not need to be connected to each other in the board.

Nota

The pin type that produces the optimal ERC pin conflict checking behavior is not always the same as the pin's conceptual pin type. When selecting a pin type, you should consider how that type will interact with the pin type of other connected pins and whether that will result in the desired ERC behavior. An example is an analog control pin that generates a current and senses the voltage generated by that current flowing through an external resistor. This pin could be considered an input pin because it senses a voltage provided externally. However, in a schematic this pin will be connected to a resistor pin (passive) and not to an output pin. There shouldn't be an ERC violation if the pin isn't connected to an output pin; in fact, there should be an ERC violation if the pin *does* connect to another output pin, as the pin would be sourcing a current on a net that is already driven. Therefore such a pin should have the Output pin type even though it is sensing a voltage and could be considered an input.

Pin Type	Description
Input	A pin which is exclusively an input. The default Pin Conflicts settings allow input pins to connect to most other types of pin. Also, an ERC violation will be produced if an input pin is not driven, i.e. it is not connected to a pin with type output, bidirectional, tristate, power output, or passive.
Output	A pin which is exclusively an output. The default Pin Conflicts settings allow output pins to connect to most types of pin that aren't also outputs.
Bidirectional	A pin that can be either an input or an output, such as a microcontroller data bus pin. The default Pin Conflicts settings allow bidirectional pins to connect to most other types of pins, though there are a few more restrictions than with input pins.
Tri-state	A three state output pin (high, low, or high impedance). The default Pin Conflicts settings allow tri-state pins to connect to most other types of pins, but warnings are generated when they are connected to most types of output or power pins.
Passive	A pin that is not connected to active electronics, for example pins on a resistor or connector. The default Pin Conflicts settings allow passive pins to connect to most other types of pin.
Free	A pin that does not electrically affect the operation of the device. These pins typically represent package leads that are not internally connected to the chip. The default Pin Conflicts settings allow free pins to connect to most other types of pin.

	In the PCB editor, pads corresponding to free pins can be connected to copper of any other net without causing a DRC error.
Unspecified	A pin which has an unspecified type. With the default Pin Conflicts settings, ERC generates warnings when unspecified pins are connected to most other types of pins.
Power input	A pin that powers the device. The default Pin Conflicts settings allow power input pins to connect to most other pin types. However, power input pins that are not connected to a power output pin generate an ERC violation. Additionally, power input pins that are marked invisible are automatically connected to the net with the same name as the pin. This behavior is supported primarily for legacy projects and is not recommended for new designs. See the Hidden Power Pin section for more information.
Power output	A pin that provides power to other pins, such as a regulator output. The default Pin Conflicts settings allow power output pins to connect to most types of input pins, but not output pins.
Open collector	An open collector logic output. The default Pin Conflicts settings allow open collector pins to connect to most input pins and other open collector pins, but not to most other types of outputs.
Open emitter	An open emitter logic output. The default Pin Conflicts settings allow open collector pins to connect to most input pins and other open emitter pins, but not to most other types of outputs.
Unconnected	A pin that should not be connected to anything. ERC does not allow pins of type unconnected to connect to any other type of pin, and ERC will not generate an "unconnected pin" violation when pins of this type are left unconnected. Unconnected pins are not configurable in the ERC Pin Conflicts map. If a footprint has multiple pads corresponding to a single unconnected pin, the pads do not need to be connected to each other in the board. When multiple pins of type unconnected are stacked in a symbol, they are connected to separate nets, whereas stacked pins of other types are connected to the same net. Note that this pin type is different than placing a no connect flag on a pin in the schematic. The unconnected pin type indicates that the pin should never be connected in any schematic, while a no connect flag indicates that the pin is intentionally unconnected in the current schematic.

Pushing Pin Properties to Other Pins

You can apply the length, name size, or number size of a pin to the other pins in the symbol by right clicking the pin and selecting **Push Pin Length**, **Push Pin Name Size**, or **Push Pin Number Size**, respectively. All other pins in the symbol will be updated.

Definizione piedini per componenti multipli e rappresentazioni simboliche alternative

Symbols with multiple units and/or graphical representations are particularly problematic when creating and editing pins. Most commonly, pins are specific to each symbol unit (because each unit has a different set of pins) and to each body style (because the form and position is different between the normal body style and the alternate form).

The symbol library editor allows the simultaneous creation of pins. By default, changes made to a pin are made for all units of a multiple unit symbol and to both representations for symbols with an alternate symbolic representation. The only exception to this is the pin's graphical type and name, which remain unlinked between symbol units and body styles. This dependency was established to allow for easier pin creation and editing in most cases. This dependency can be disabled by toggling the



icon on the main tool bar. This will allow you to create pins for each unit and representation completely independently.

Pins can be common or specific to different units. Pins can also be common to both symbolic representations or specific to each symbolic representation. When a pin is common to all units, it only has to be drawn once. Pins are set as common or specific in the pin properties dialog.

An example is the output pin in the 7400 quad dual input NAND gate. Since there are four units and two symbolic representations, there are eight separate output pins defined in the symbol definition. When creating a new 7400 symbol, unit A of the normal symbolic representation will be shown in the library editor. To edit the pin style in the alternate symbolic representation, it must first be enabled by clicking the



button on the tool bar. To edit the pin number for each unit, select the appropriate unit using the



drop down control.

Pin Table

Another way to edit pins is to use the Pin Table, which is accessible via the



icon. The Pin Table displays all of the pins in the symbol and their properties in a table view, so it is useful for making bulk pin changes.

Any pin property can be edited by clicking on the appropriate cell. Pins can be added and removed with the



and



icons, respectively.

You can edit the same property for multiple pins simultaneously by grouping pins. Pins can be automatically grouped by name, or you manually group several pins by selecting them and clicking **Group Selected**. Click the



button to clear the manual grouping. You can also filter the table to only display pins in certain units.

Nota

Columns of the pin table can be shown or hidden by right-clicking on the header row and checking or unchecking additional columns. Some columns are hidden by default.

The screenshot below shows the pin table for a dual opamp.

Pin Table									
Pin numbers: 1-8			Pin count: 8					Duplicate pins: none	
Count	Number	Name	Electrical Type	Graphic Style	Orientation	X Position	Y Position	Visible	Unit
1	1	~	→ Output	└ Line	⌋ Left	300 mils	0 mils	☒	A
1	2	-	→ Input	└ Line	⌋ Right	-300 mils	100 mils	☒	A
1	3	+	→ Input	└ Line	⌋ Right	-300 mils	-100 mils	☒	A
1	4	V-	→ Power input	└ Line	⌋ Up	-100 mils	300 mils	☒	C
1	5	+	→ Input	└ Line	⌋ Right	-300 mils	-100 mils	☒	B
1	6	-	→ Input	└ Line	⌋ Right	-300 mils	100 mils	☒	B
1	7	~	→ Output	└ Line	⌋ Left	300 mils	0 mils	☒	B
1	8	V+	→ Power input	└ Line	⌋ Down	-100 mils	-300 mils	☒	C

Alternate Pin Function Definitions

Symbol pins can have alternate pin functions defined for them. Alternate pin functions allow you to select a different name, electrical type, and graphical style for a pin when a symbol has been placed in the schematic. This can be used for pins that have multiple functions, such as microcontroller pins.

Alternate pin functions are added in the Pin Properties dialog as shown below. Each alternate definition contains a pin name, electrical type, and graphic style. This microcontroller pin has all of its peripheral functions defined in the symbol as alternate pin names.

Pin Properties

Pin name:

Pin number:

Electrical type:

Graphic style:

X position: mils

Y position: mils

Orientation:

Pin length: mils

Name text size: mils

Number text size: mils

☐ Common to all units in symbol

☐ Common to all body styles (De Morgan)

☒ Visible

Preview:

18 PB0

Alternate pin function definitions

Alternate Pin Name	Electrical Type	Graphic Style
ADC_IN8	↔ Bidirectional	└ Line
TIM1_CH2N	↔ Bidirectional	└ Line
TIM3_CH3	↔ Bidirectional	└ Line

+

Cancel OK

Alternate pin functions are selected in the Schematic Editor once the symbol has been placed in the schematic. For information on using alternate pin functions in the schematic, see the schematic editor symbol documentation.

8.2.12. Creating Power Symbols

Power symbols are symbols that are used to label a wire as part of a global power net, like VCC or GND. The power symbol's value field determines the net label. The behavior of power symbols is described in the electrical connections section. Power symbols are handled and created the same way as normal symbols, but there are several additional considerations described below.


It may be useful to place power symbols in a dedicated library. KiCad's symbol library places power symbols in the power library, and users may create libraries to store their own power symbols. If the **Define as power symbol** box is checked in a symbol's properties, that symbol will appear in the Schematic Editor's **Add Power Symbol** dialog for convenient access.

Power symbols consist of a single pin of type Power Input. They must also have the **Define as power symbol** property checked.

Nota

In previous versions of KiCad, a power symbol's pin needed to be both a power input pin and invisible, and the pin's name determined the name of the net that the power symbol connected with. Beginning in KiCad version 8, the pin in a power symbol does not need to be invisible, and the net is determined by the power symbol's `Value` field.

Below is an example of a GND power symbol.

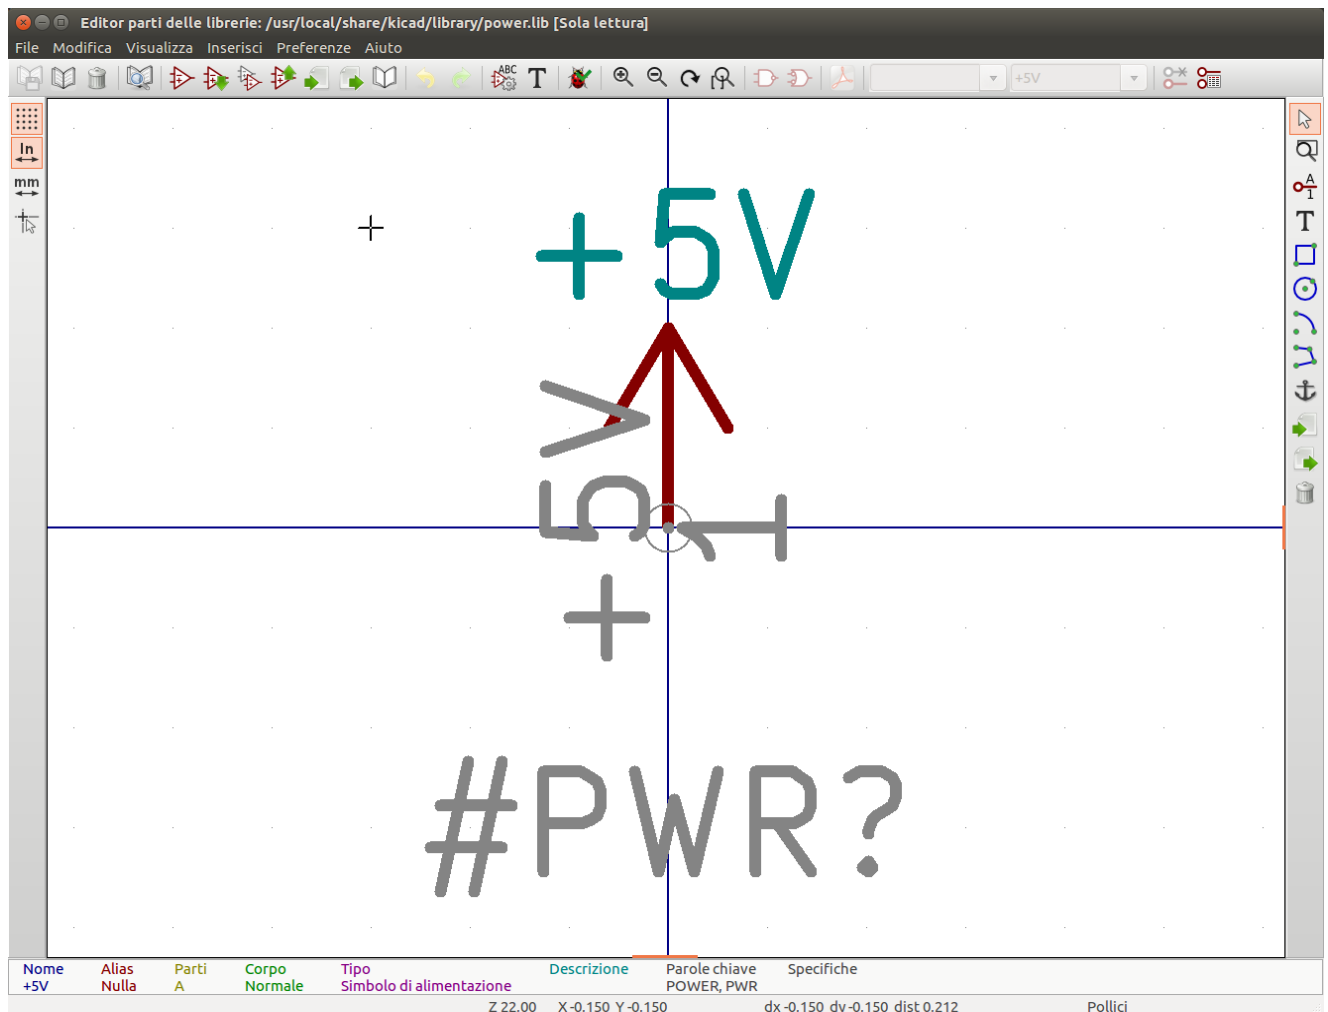

Pin Properties

Pin name:

Pin number:

Electrical type:

Graphic style:

X position: mils

Y position: mils

Orientation:

Pin length: mils

Name text size: mils

Number text size: mils

☐ Common to all units in symbol

☐ Common to all body styles (De Morgan)

☒ Visible

Preview:

> Alternate pin function definitions

Per creare un simbolo di potenza, seguire questi passi:


- Add a pin of type **Power input**. Make the pin number 1, the length 0, set the graphic style to **Line**, and make the pin **visible**. The pin number, name, length, and line style do not matter electrically.
- Place the pin on the symbol anchor. This is not required but makes it easier to place the power symbol in the schematic.
- Use the shape tools to draw the symbol graphics.
- Set the symbol value to the desired net name. The symbol value is electrically important: it determines the symbol's connected net name. This field can be changed later, after the symbol has been placed in the schematic, which will change which net the symbol connects to.
- Check the **Define as power symbol** box in Symbol Properties window. This makes the symbol appear in the **Add Power Symbol** dialog, prevents the symbol from being assigned a footprint, and excludes the symbol from the board, BOM, and netlists.
- Also deselect the **Show pin number** and **Show pin name** options in the Symbol Properties window. This is not necessary but improves the symbol's appearance.
- Set the symbol reference and uncheck the **Show** box. The reference text is not important except for the first character, which should be \#. For the power symbol shown above, the reference could be #GND. Symbols with references that begin with # are not added to the PCB, are not included in Bill of Materials exports or netlists, and they cannot be assigned a footprint in the footprint

assignment tool. If a power symbol's reference does not begin with #, the character will be inserted automatically when the annotation or footprint assignment tools are run.

An easier method to create a new power symbol is to use another symbol as a starting point.

8.2.13. Checking Symbols

The Symbol Editor can check for common issues in your symbols. Run the symbol checker using the  button in the top toolbar.

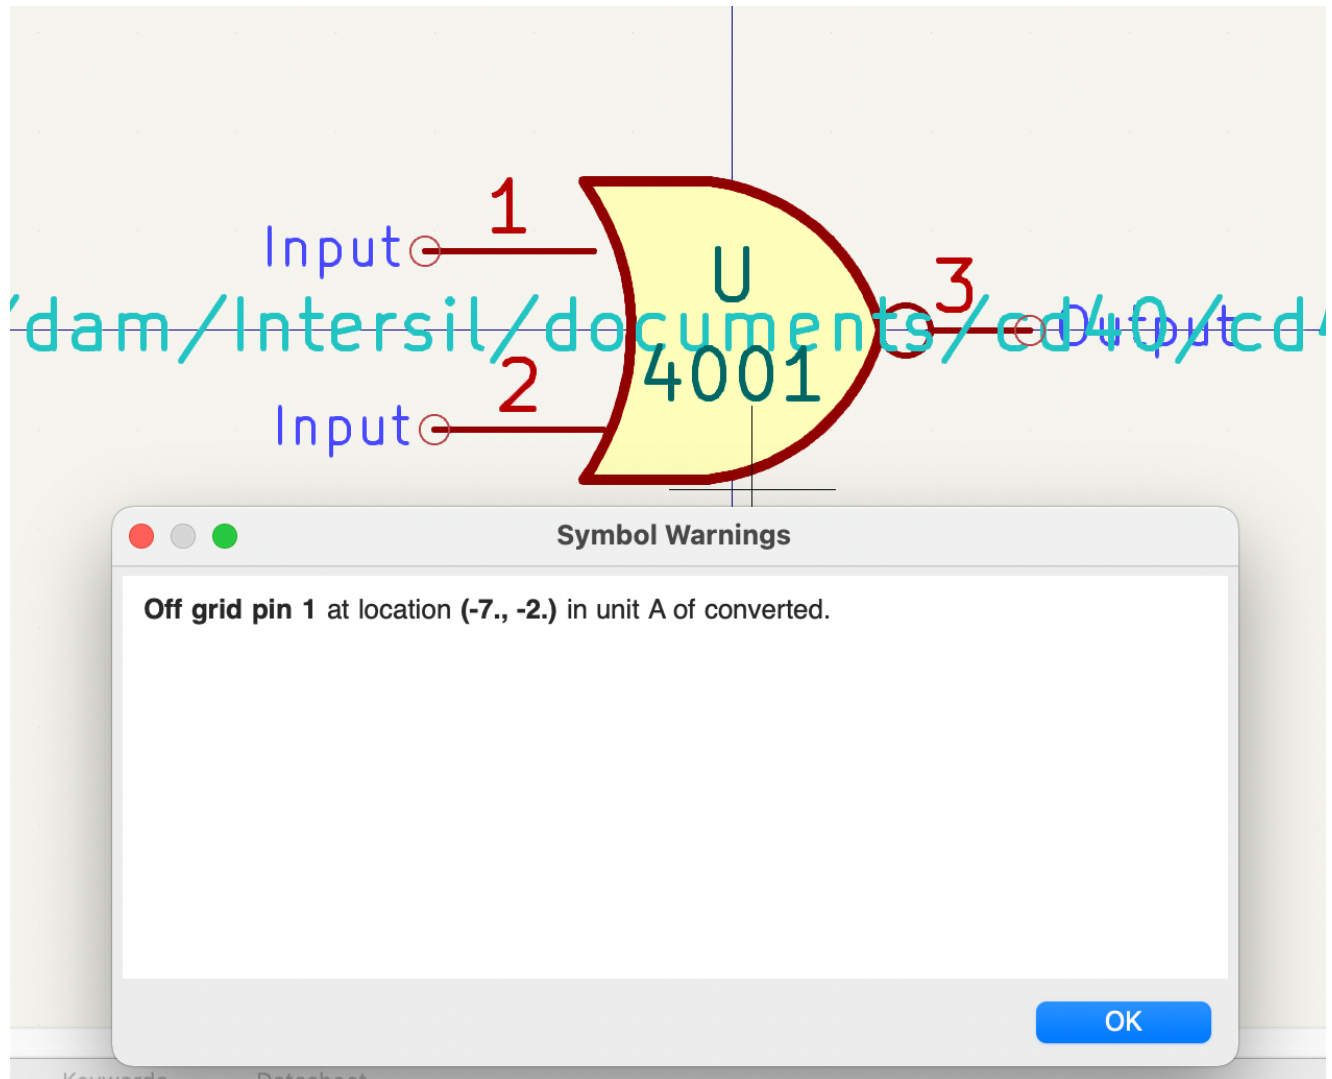

The symbol checker checks for:

- Pins that are off-grid (pins are considered off grid if their position is not a multiple of the current symbol editor grid. It is strongly recommended to use a 50 mil grid for symbol pins)
- Pins that are duplicated
- Issues with graphical shapes, such as zero-sized shapes
- Illegal reference designator prefixes: reference designator prefixes should not end with a number or ?

- Incorrectly designed power symbols. Power symbols should have:
 - A single unit
 - No alternate body styles
 - A single pin which is either of type Power Output (see PWR_FLAG) or visible and of type Power Input (see power symbols)
- Hidden Power Input pins in non-power symbols: these create implicit connections and are not recommended

Nota

In previous versions of KiCad, power symbols required an invisible power input pin so that they would make a global connection. In KiCad 8, the power input pin does not need to be invisible. Therefore the symbol checker will report if invisible power input pins are detected.


8.3. Browsing symbol libraries

The Symbol Library Browser allows you to quickly examine the contents of symbol libraries. The Symbol Library Viewer can be accessed by clicking



icon on the main Symbol Editor toolbar or with **View** → **Symbol Library Browser**.

To examine the contents of a library, select a library from the list in the left hand panel. All symbols in the selected library will appear in the second panel. Select a symbol name to view the symbol.

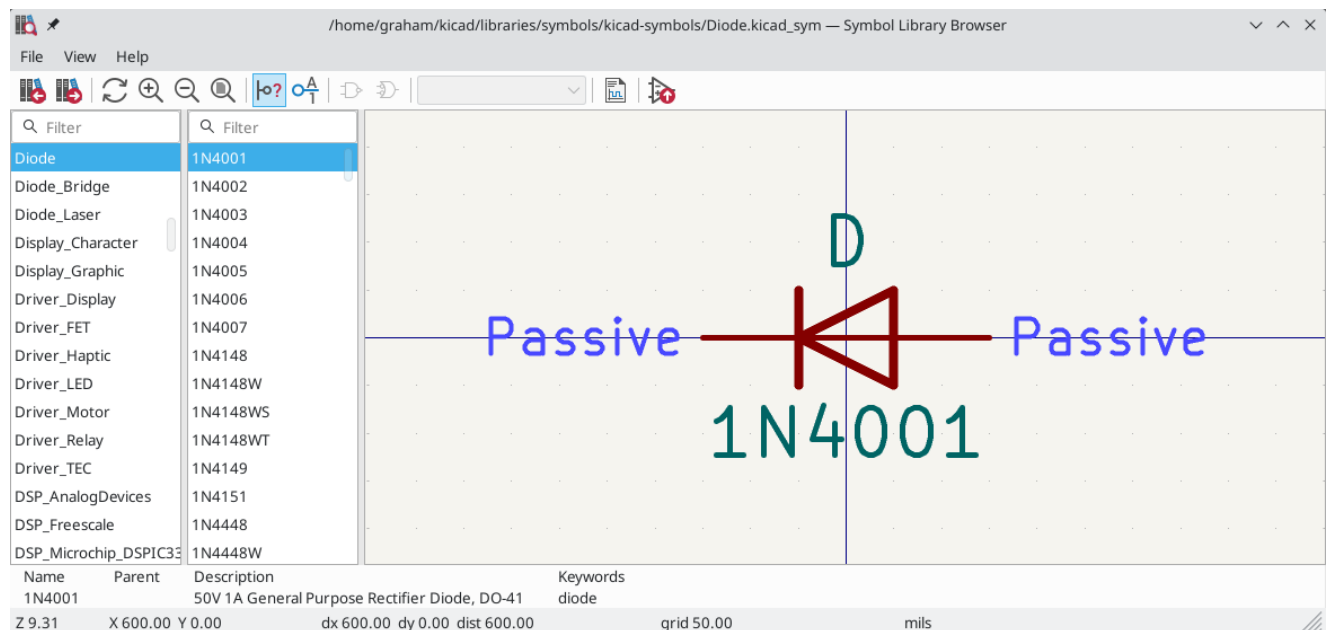

Double clicking the name of a symbol or using the



button adds the symbol to the schematic.

The top toolbar contains the following commands:

	Select previous symbol in library.
	Select next symbol in library.
	Zoom tools.
	Toggle display of pin electrical types.
	Toggle display of pin numbers.
	Select standard or alternate De Morgan representation of symbol, if applicable.
	Select the unit of a multi-unit symbol.
	Open the symbol's datasheet, if it is defined.
	Insert current symbol into the schematic.

Capitolo 9. Schematic design blocks

Schematic design blocks allow you to save a portion of a schematic and reuse it later. You can reuse design blocks within the same schematic or in different schematics. Design blocks are saved and organized in design block libraries, much like symbols and footprints. When you use a design block, the saved schematic fragment is inserted into the current schematic, either in the current sheet or in a new subsheet.

To use schematic design blocks, first show the Design Blocks panel by clicking **View** → **Panels** → **Design Blocks**. This opens a docked panel on the right side of the schematic editor. To close the panel, use the same menu entry or right click in the panel and choose **Hide Library Tree**.

Design Blocks

Filter

Item	Description
> -- Recently Used --	
Amplifiers	Opamp circuits
inverting_amplifier	Inverting amplifier circuit made from
noninverting_amplifier	Noninverting amplifier circuit made fr

inverting_amplifier
Inverting amplifier circuit made from a single opamp.
Keywords: inverting amplifier

☐ Place repeated copies
☒ Place as sheet
☐ Keep annotations

9.1. Using design blocks in a schematic

The Design Blocks panel contains a library tree that lists your design block libraries and the design blocks contained in each library. Each library can be expanded or collapsed to show or hide the design

blocks in that library. There is a **Recently Used** pseudo-library at the top of the tree that contains any design blocks that you have recently placed. You can pin any libraries to the top of the list by right clicking the library and selecting **Pin Library**.

You can filter design blocks by their name, description, and keywords using the filter textbox at the top of the Design Blocks panel. By default, matches are sorted by best match, but you can change to sorting alphabetically using the



button.

When you select a design block in the library tree, the design block's name and metadata are displayed below the library tree along with a graphical preview of the design block. The metadata includes the block's description and keywords.

To add a design block to the schematic, double click it in the library tree or right click a design block and select **Place Design Block**.

If the **Place as sheet** checkbox is enabled, you will need to click twice in the editing canvas to place two corners of a hierarchical sheet. The design block contents will be placed in the new sheet. If the **Place as sheet** checkbox is not enabled, clicking once in the canvas will place the contents of the design block directly into the current schematic.

If the **Place repeated copies** checkbox is enabled, KiCad will begin placing the design block again when you finish placing the previous block. To cancel placing the next block, press kbd:[Esc] or right click and select **Cancel**.

If the **Keep annotations** checkbox is enabled, KiCad will insert the design block without changing the symbol annotations as defined in the saved design block. If it is not enabled, KiCad will reset the symbol annotations while inserting the design block and reannotate all of the symbols in the block according to the current annotation settings.


Once placed in a schematic, the contents of a design block behave the same as any other schematic objects and can be edited, moved, deleted, etc. exactly as if they were added to the schematic normally.

9.2. Saving and managing design blocks

Design blocks are saved in design block libraries, so you need to add a library before you can save any design blocks. To create a new library, right click in the library tree and select **New Library....** At this point you must choose whether the new library should be added to the global design block library table or the project design block library table. Libraries in the global library table will be available to all projects, while libraries in the project library table will only be available in the current project.


Nota

The global and project design block library tables are managed using **Preferences → Manage Design Block Libraries....** This includes deleting and renaming design block libraries. The design block library tables behave in the same way as the symbol library tables. For more information about managing library tables, see the symbol library table documentation.

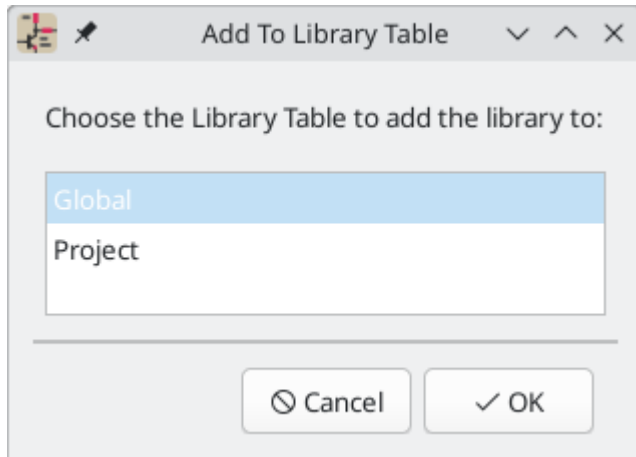

Following selection of the library table, you must choose a name and location for the new library. A new, empty library will be created at the specified location.

After creating the desired design block library, you can create new design blocks and save them in the library. Design blocks can be created either from the entire contents of a schematic sheet or from a selection of schematic objects. To create and save a new design block, select the desired source objects, either by opening the desired sheet or selecting the objects in the editing canvas. Then right click the design block library that will contain the block and select **Save Current Sheet as Design Block...** or **Save Selection as Design Block** as appropriate.

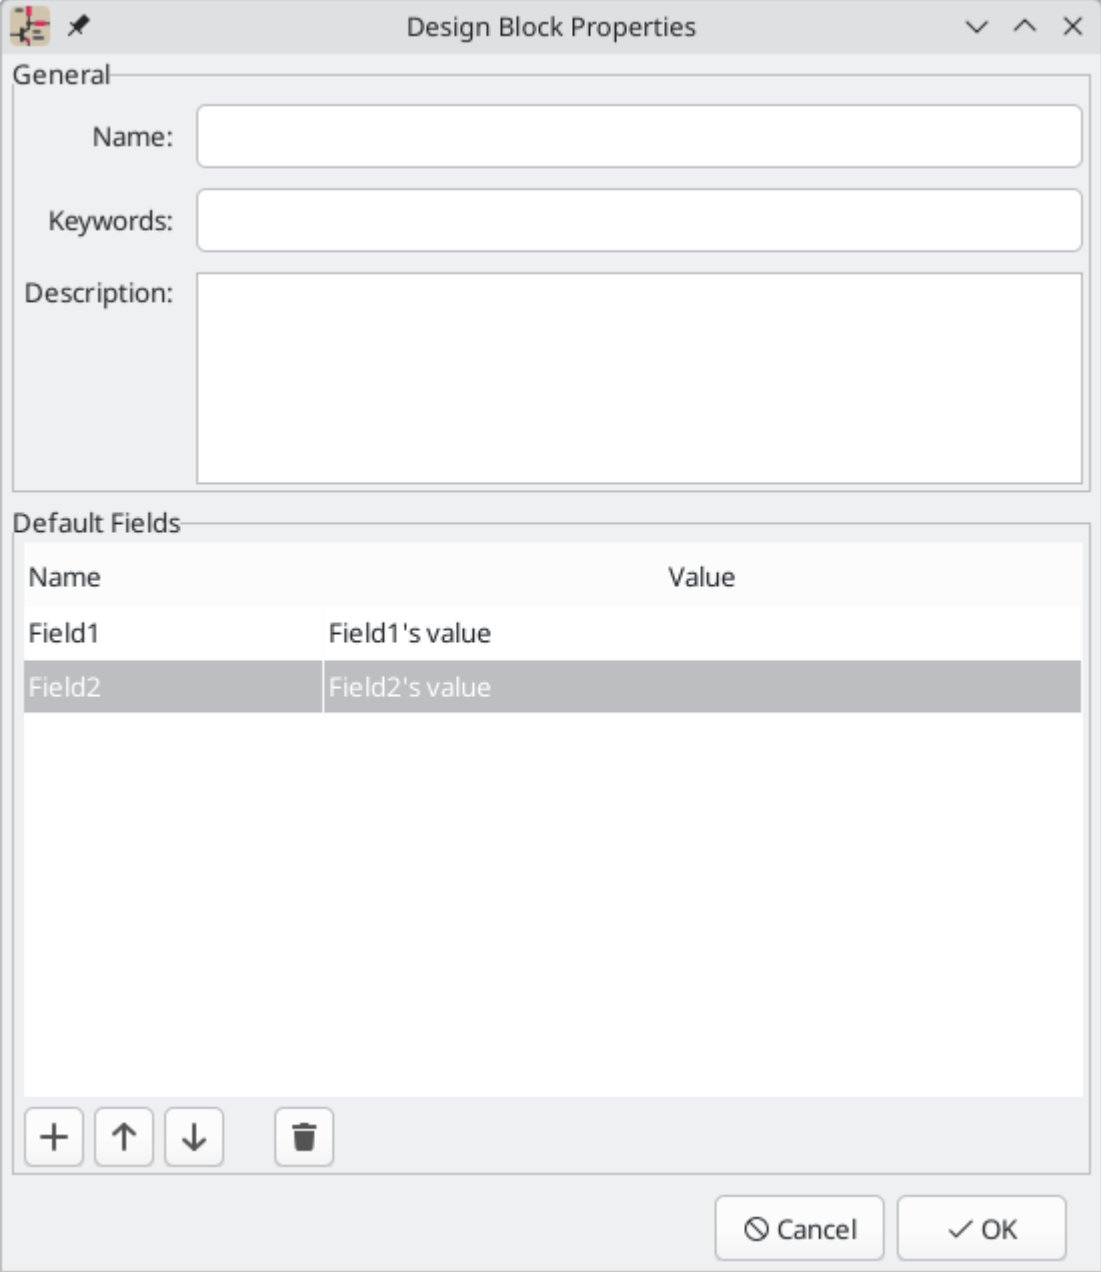

The image shows a 'Design Block Properties' dialog box. It has a title bar with a standard icon, a maximize button, and a close button. The dialog is divided into two main sections: 'General' and 'Default Fields'.

The 'General' section contains three text input fields: 'Name:', 'Keywords:', and 'Description:'. The 'Name' field is empty. The 'Keywords' field is empty. The 'Description' field is empty.

The 'Default Fields' section contains a table with two columns: 'Name' and 'Value'. The table has two rows: 'Field1' with 'Field1's value' and 'Field2' with 'Field2's value'. The 'Field2' row is highlighted. Below the table are four buttons: a plus sign (+), an up arrow (↑), a down arrow (↓), and a trash can icon. At the bottom right of the dialog are two buttons: 'Cancel' and 'OK'.

Name	Value
Field1	Field1's value
Field2	Field2's value

This brings up the Design Block Properties dialog, where you can edit the properties of the new design block.

- **Name:** this is the name of the new design block, which is shown in the library tree and the preview pane. It is also used when filtering design blocks with the filter textbox. When design blocks are added to a schematic as a sheet, this is the default name of the new sheet.
- **Keywords:** these are space-separated keywords describing the design block. They are displayed in the design block preview pane and used when filtering design blocks with the filter textbox.
- **Description:** this is a description of the design block, which is shown in the library tree and the preview pane. It is also used when filtering design blocks with the filter textbox.
- **Default Fields:** these are key/value pairs which are included as hierarchical sheet fields when the design block is placed as a sheet. Fields are ignored when the design block is not placed as a sheet.

You can edit a design block's properties after creating it by right clicking the design block in the design block library tree and selecting **Properties....**

Capitolo 10. Simulatore

KiCad provides an embedded electrical circuit simulator using ngspice [<http://ngspice.sourceforge.net>] as the simulation engine. ngspice is a SPICE simulator derived from the original widely used Berkeley SPICE program. KiCad's simulator can also run simulations using IBIS models of device pins.

The process of creating and running a simulation in KiCad has two main parts:

1. Drawing a simulation schematic in KiCad's Schematic Editor. Schematics for simulations are similar to normal schematics (and can even be identical), but they typically include simulation-specific devices, such as sources, and may exclude devices that are irrelevant for simulation, such as connectors. Creating a schematic simulation requires ensuring all symbols in the schematic have appropriate models assigned. Finding or creating simulation models, and then validating them, can be a significant portion of the process. KiCad includes some simple simulation models for basic devices such as sources, passive devices, and generic semiconductor devices, but beyond those you will need to find or create your own models.
2. Running the simulation using the simulator tool. This includes choosing the type of analysis (transient, AC, etc.) and configuring its options. Multiple different analyses can be performed. The simulator provides a plot window to view and analyze simulation results.

When drawing schematics for simulation, the `Simulation_SPICE` symbol library, installed with KiCad by default, may be useful. It contains common elements used for simulation such as voltage and current sources, generic semiconductor symbols, and other simulation-specific devices. The symbols in this library are described in detail below.

While these elements enable a great variety of simulation work, users familiar with SPICE in other environments will be used to incorporating models of commercially-available semiconductors, integrated circuits, and other devices as more complex SPICE models. Indeed, semiconductor manufacturers often freely supply these to help users simulate and develop circuits using their parts. Note that while KiCad does not include any commercial SPICE models in its distribution, you are free to use any models you may have, or have used with other circuit simulators, in KiCad's simulator.

In general, if a model works with other SPICE simulators, it should work with the KiCad simulator, although some SPICE simulators implement extensions that are unsupported by ngspice. ngspice offers several compatibility modes to improve compatibility with other simulators.

Finally, to quickly showcase the capabilities of the KiCad simulator, some demonstration projects are included in the KiCad distribution. They can be found in the `demos/simulation` directory.

10.1. Assegnazione modelli


You need to assign simulation models to symbols before you can simulate your circuit.

Each symbol can have only one model assigned, even if the symbol consists of multiple units. For symbols with multiple units, you should assign the model to the first unit.

SPICE model information is stored as text in symbol fields. Therefore you may define it in either the symbol editor or the schematic editor. To assign a simulation model to a symbol, open the Symbol

Properties dialog and click the **Simulation Model...** button, which opens the Simulation Model Editor dialog.

You can exclude a symbol from simulation entirely by checking the **exclude from simulation** checkbox in the Symbol Properties dialog. Symbols with this attribute set are drawn with a grey outline and a small simulation icon next to them, as shown below.

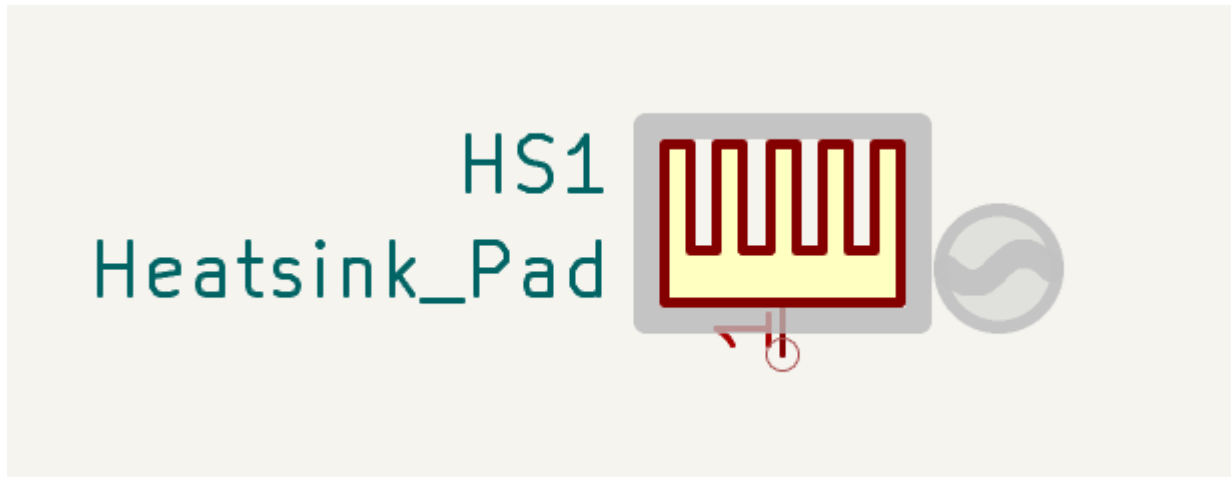

10.1.1. Inferred models

Resistor, inductor, and capacitor models can be inferred, which means that KiCad will detect that they are passives and automatically assign an appropriate simulation model. Therefore they do not require any special settings; users only need to set the `Value` field of the symbol.

KiCad infers simulation models for symbols based on the following criteria:

- The symbol has exactly two pins,
- The reference designator begins with R, L or C.

Inferred models are ideal models. If the simulation requires a non-ideal model, for example an inductor with parasitic capacitance included, you must explicitly assign a model that includes it.

10.1.2. Built-in models

KiCad offers several standard simulation models. They do not require an external model file, and their parameters can be edited in KiCad's Simulation Model Editor GUI. The following devices are available:

- Resistors (including potentiometers)
- Capacitors
- Inductors
- Transmission lines

- Switches
- Voltage and current sources
- Diodes
- Transistors (BJTs, MOSFETs, MESFETs, and JFETs)
- XSPICE code models
- Raw SPICE elements

To add a built-in model to a symbol, open the Simulation Model Editor dialog (**Symbol Properties** → **Simulation Model...**) and select **Built-in SPICE model**. You can then select the kind of device from the **device** dropdown and the device subtype from the **device type** dropdown.

Refer to the ngspice documentation [<https://ngspice.sourceforge.io/docs.html>] for more details about these models and their parameters.

Simulation Model Editor

Model Pin Assignments

☐ SPICE model from file (*.lib, *.sub or *.ibs)

File:

Model:

☒ Built-in SPICE model

Device:

Device type:

Parameters Code

Parameter	Value	Unit	Default	Type
Resistance (r)	400	Ω		Float

☐ Save parameter 'Resistance (r)' in Value field

Cancel OK

Device sets the type of device to simulate: a resistor, BJT, voltage source, etc. This value is stored in the symbol's `Sim.Device` field.

Device type selects the type of model to use for the device. Most devices have several types of models to choose from. Models may vary in their degree of accuracy, which characteristics they are optimized for, what parameters they have available, and how many pins they have. For example, the **ideal** resistor type models a simple resistor with two terminals and a single resistance parameter, while

the **potentiometer** resistor type models an adjustable resistor with three terminals and an additional parameter for wiper position. Some devices have an especially large number of types to choose from: N-channel MOSFETs, for example, have 17 available types, each of which uses a different mathematical model to simulate the transistor behavior. One model may be more or less appropriate than another for simulating a specific device or circuit or for performing a particular analysis. Refer to the ngspice documentation [<https://ngspice.sourceforge.io/docs.html>] for detailed information about models and their parameters. The **device type** value is stored in the symbol's `Sim.Type` field.

The **parameters** tab displays the parameters of the model and lets you edit them. For example, a resistor's resistance, a voltage source's waveform, a MOSFET's width and length, etc. Any parameters that differ from the model's defaults are stored in the symbol's `Sim.Params` field.

The **code** tab displays the generated SPICE model as it will be written to the SPICE netlist for simulation.

The **Save parameter <parameter name> in Value field** checkbox uses the symbol's `Value` field for storing parameters instead of the `Sim.Params` field. This may make it easier to edit simple models from the schematic, without opening the Simulation Model Editor. This option is only available for ideal passive models (R, L, C) and DC sources. If the field `Sim.Params` exists in the symbol, it will take priority over the `Value` field.


10.1.3. External models

KiCad can also load SPICE models from external files. This is typically how you will add a SPICE model of a specific commercially-available part (for example, a 555 timer or a TL071 operational amplifier) to your simulation. Models such as these are readily available from numerous sources, including manufacturers' web sites. These models must be in a standard SPICE format and must not be encrypted.

An external model can be one of the following types:

- A device model (`.model`). This is an intrinsic device (a passive, diode, transistor, etc.) with a set of parameter values defining its behavior. The parameters for a device model are editable in the Simulation Model Editor GUI.
- A subcircuit model (`.subckt`). This is a model that uses a collection of other ngspice circuit elements to define its behavior. If a subcircuit model contains parameters (in a `params:` sequence in its definition), the parameters are editable in the Simulation Model Editor GUI.

To load a model from an external file, open the Simulation Model Editor dialog (**Symbol Properties** → **Simulation Model...**) and select **SPICE model from file**.

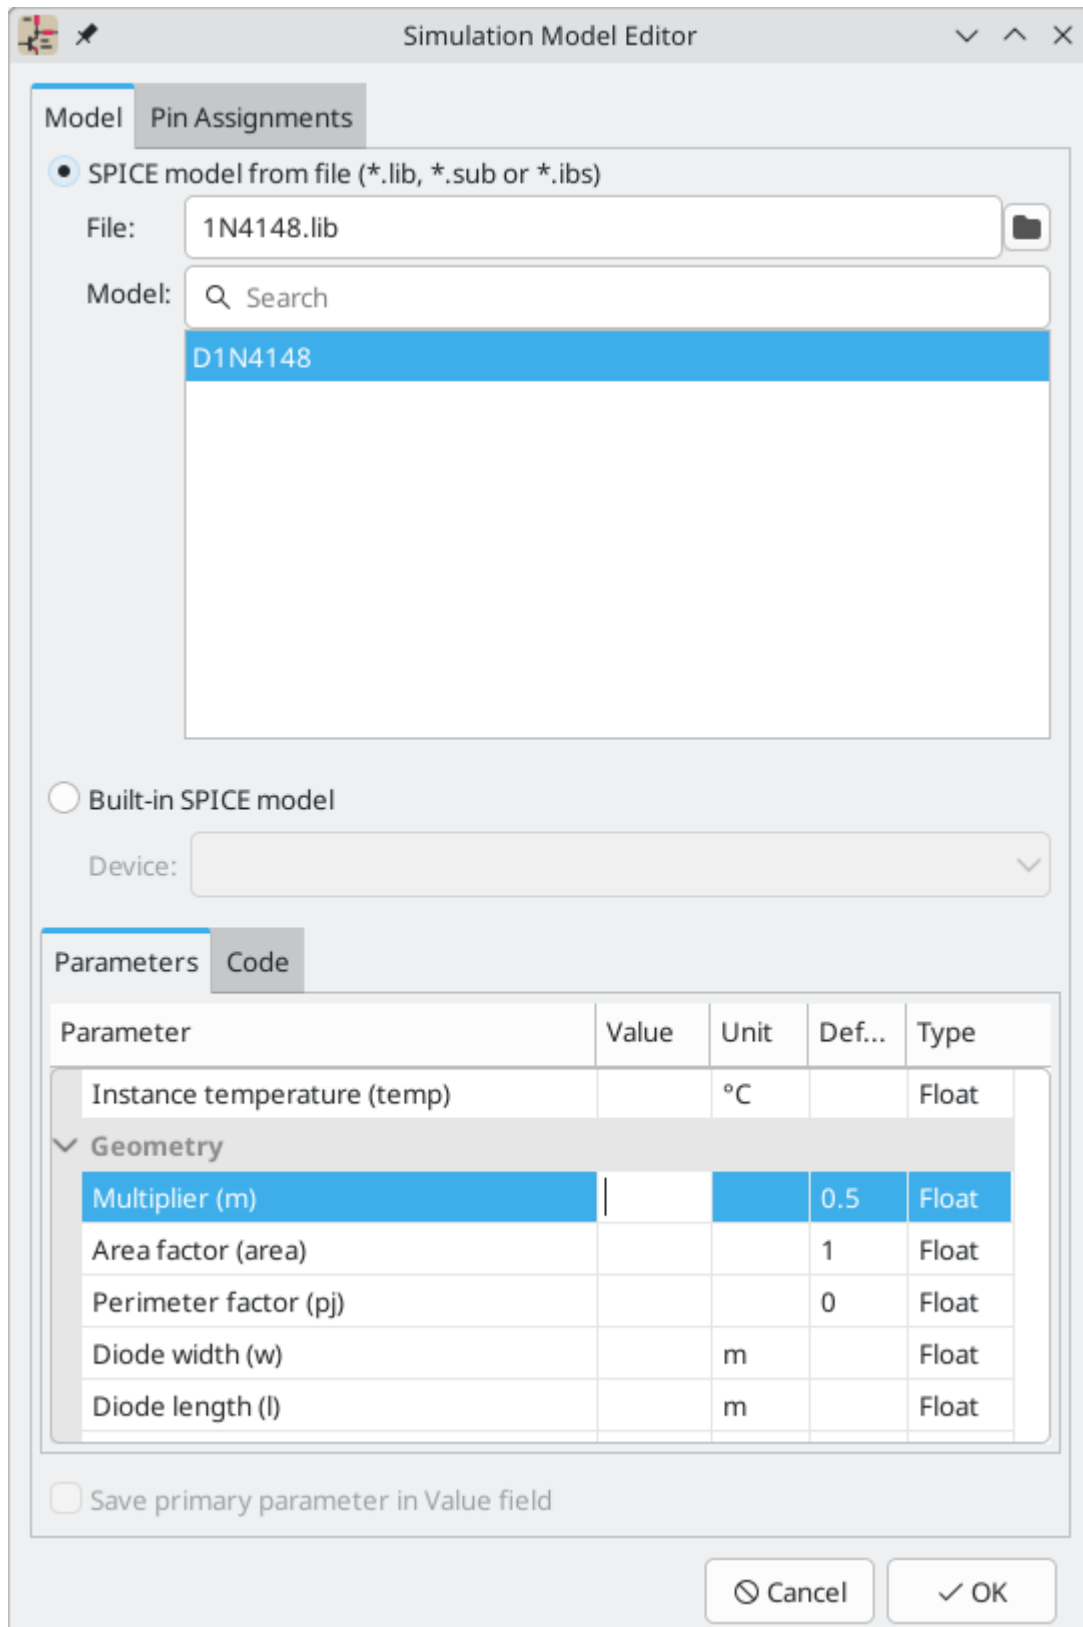

File is the path to the model file to use. Unencrypted model files are plain, human-readable text files and often have extensions such as .lib, .sub etc., although KiCad will accept a valid model with any extension.

The path to the file can be absolute, or relative to the project folder. The path can also be relative to the value of SPICE_LIB_DIR if you have defined that path variable. If you enable the **Embed File** checkbox in the file browser, the library file will be embedded in the schematic (or symbol library).

This makes the schematic (or schematic) more portable as it doesn't rely on an external library file. The library filename is saved in the symbol's `Sim.Library` field.

Model is the name of the desired model in the model file. A model file may contain multiple models, and if so they will all be shown in the list. You can filter the list of models using the search box. The selected model is listed in the symbol's `Sim.Name` field.

Parameters can be overridden (or additional parameters specified) using the **Parameters** tab. For device models, all parameters for that type of device are editable. For subcircuit models, any parameters included in the subcircuit definition are editable. Any parameters that are overridden in the **Parameters** tab are stored in the symbol's `Sim.Params` field.

The **Code** tab displays the generated SPICE model as it will be written to the SPICE netlist for simulation.

Nota

KiCad is not distributed with SPICE models for specific commercial devices. These models are usually available from device manufacturers or other internet sources.

10.1.4. IBIS models

IBIS (I/O Buffer Information Specification) files are an alternative to SPICE models for modeling the behavior of input/output buffers on digital parts. In order to load an IBIS file, users should follow the procedure for SPICE library models, but provide a `.ibs` file.

Simulation Model Editor

Pin Assignments

☒ SPICE model from file (*.lib, *.sub or *.ibs)

File:

Component:

Pin:

Model:

☐ Built-in SPICE model

Device:

Type:

Parameters

Parameter	Value	Unit	Def...	Type
Power supply (vcc)	typ		typ	String
Parasitic pin resistance (rpin)	typ		typ	String
Parasitic pin inductance (lpin)	typ		typ	String
Parasitic pin capacitance (cpin)	typ		typ	String
Waveform				
ON time (ton)	100n	s		Float
OFF time (toff)	100n	s		Float
Delay (td)	0	s	0	Float
Number of cycles (n)	50		1	Int

☐ Save primary parameter in Value field

File is the path to the model file to use. The path can be absolute or relative to the project folder. The path can also be relative to the value of `SPICE_LIB_DIR` if you have defined that path variable. The library filename is saved in the symbol's `Sim.Library` field. If an IBIS model file is loaded, the remaining fields in the dialog will relate to the IBIS model.

Component selects which component from the IBIS file to use, as IBIS files can contain multiple components. The component name is saved in the symbol's `Sim.Name` field.

Pin selects which pin in the IBIS model to simulate. The selected pin must be mapped to a symbol pin in the **Pin Assignments** tab. The chosen pin's number is saved in the symbol's `Sim.Ibis.Pin` field.

Model is the list of models available for the selected pin, for example an input or an output. The chosen model name is saved in the symbol's `Sim.Ibis.Model` field.

Type selects what the pin should do in the simulation. A pin can be a passive **device** that doesn't drive any value; it can be a **DC driver** that drives high, low, or high-impedance; or it can be a **rectangular wave** or **PRBS driver**. This value is stored in the symbol's `Sim.Type` field.

The **Parameters** tab lets you see and edit the parameters of the model. For each parameter, you can switch between a minimum, typical, or maximum value, as defined in the IBIS file. You can also choose the parameters of the driven waveform, depending on the pin's chosen **type**. Any parameters that differ from the defaults are stored in the symbol's `Sim.Params` field.

Nota

KiCad does not ship with IBIS models for symbols. IBIS models are usually available from device manufacturers.

Nota

KiCad's `Simulation_SPICE` symbol library provides several symbols that may be useful for IBIS simulations. `IBIS_DEVICE` can be used for device (input) pins, while `IBIS_DRIVER` can be used for simulating driver pins. There are also variants of each for differential pins.

10.1.5. Pin Assignment

Simulation models may have their pins numbered differently than the corresponding symbol. For example, SPICE models for diodes usually consider pin 1 to be the anode, while schematic symbols are usually drawn with pin 1 as the cathode. Operational amplifier models are also very likely to have model pin assignments that do not match package or schematic pin numbers.

You can use the Simulation Model Editor's **Pin Assignments** tab to map the symbol's pins to the simulation model pins.

Nota

Always make sure symbol pins are correctly mapped to simulation model pins. Mistakes here can lead to erroneous or confusing simulation results, or a failure to simulate at all.



The left column displays the name and number of each symbol pin, i.e. the pin numbers and names that appear on the schematic part in KiCad. The right column displays the corresponding pin as defined in the model file in use. For each symbol pin, you can select the corresponding pin from the simulation model in the dropdown in the right column. In the cases where a schematic part has pins that are not in the model, as in the case of an operational amplifier with *nulling* pins that are not modeled, the schematic part pin may be assigned to the *Not Connected* option in the Pin

Assignments dropdown. Unlike other pin assignments, *Not Connected* may be assigned to multiple pins if necessary.

When you use a subcircuit model, the dialog displays the model's code under the pin assignments for use as a reference while assigning pins. A well-written model will often include a helpful reference section (as a set of comments) to inform the user how the model pins are mapped.

10.2. Value notation

The simulator supports several notations for writing numerical values in simulation model parameters, simulation analysis setup options, and SPICE directives:

- Plain notation : 10100, 0.003,
- Scientific notation: 1.01e4, 3e-3,
- Prefix notation: 10.1k, 3m.
- RKM notation: 4k7, 10R.

You can mix prefix and scientific notations. As such, 3e-4k is a valid input and is equivalent to 0.3. The list of valid prefixes is shown below. They are case sensitive.

Prefix	Name	Multiplier
a	atto	10^{-18}
f	femto	10^{-15}
p	pico	10^{-12}
n	nano	10^{-9}
u	micro	10^{-6}
m	milli	10^{-3}
k	kilo	10^3
M	mega	10^6
G	giga	10^9
T	tera	10^{12}
P	peta	10^{15}
E	exa	10^{15}

Nota

Raw SPICE Element models and directives are passed to ngspice directly, without KiCad reformatting the values for ngspice to consume. ngspice uses a different, case-insensitive notation: 1 mega (10^6) is denoted there as 1Meg, while 1M is 1 milli (10^{-3}). Depending on the compatibility mode selected, ngspice may not support the same value notations as KiCad, so care should be taken when using raw SPICE elements and simulation directives.

10.3. SPICE directives

It is possible to add SPICE directives by placing them in text fields on a schematic sheet. This approach is convenient for defining the default simulation type. The list of supported directives in text fields is:

- Directives starting with a dot (e.g. `.tran 10n 1m`)
- Coupling coefficients for inductors (e.g. `K1 L1 L2 0.89`)

It is not possible to place additional components using text fields.

If a simulation command is included in schematic text, the simulator will use it as the simulation command when you open the simulator. However, you can override it in the Simulation Command dialog.

Refer to the ngspice documentation [<https://ngspice.sourceforge.io/docs.html>] for more details about SPICE directives.

10.4. Running simulations

Circuits for simulation are drawn in the Schematic Editor, but simulations are run in the Simulator window.


After creating a schematic for simulation, the following steps are needed to run a simulation:

1. Open the Simulator window by clicking **Inspect** → **Simulator** in the Schematic Editor or using the  button in the top toolbar.
2. Create at least one analysis by clicking **Simulation** → **New Analysis Tab...** (kbd:[Ctrl+N]) or using the  button. This lets you choose a type of simulation and configure its options. These options are explained below. Each analysis has its own tab, and multiple analyses can be created. The options for an analysis can be adjusted after it is created with **Simulation** → **Edit Analysis Tab...** or by clicking on the  button.
3. Run the simulation by clicking **Simulation** → **Run Simulation** (kbd:[R]) or by clicking the  button. This only runs the simulation in the active analysis tab. You can stop a running simulation at its current point by clicking the  button.
4. Examine the simulation results. Most analyses result in plots; for these you will need to select the signals to be plotted. Other analyses print their results in the output log window.

Nota

Once a simulation has been set up, the configuration can be saved in a workbook.

10.4.1. Simulator window

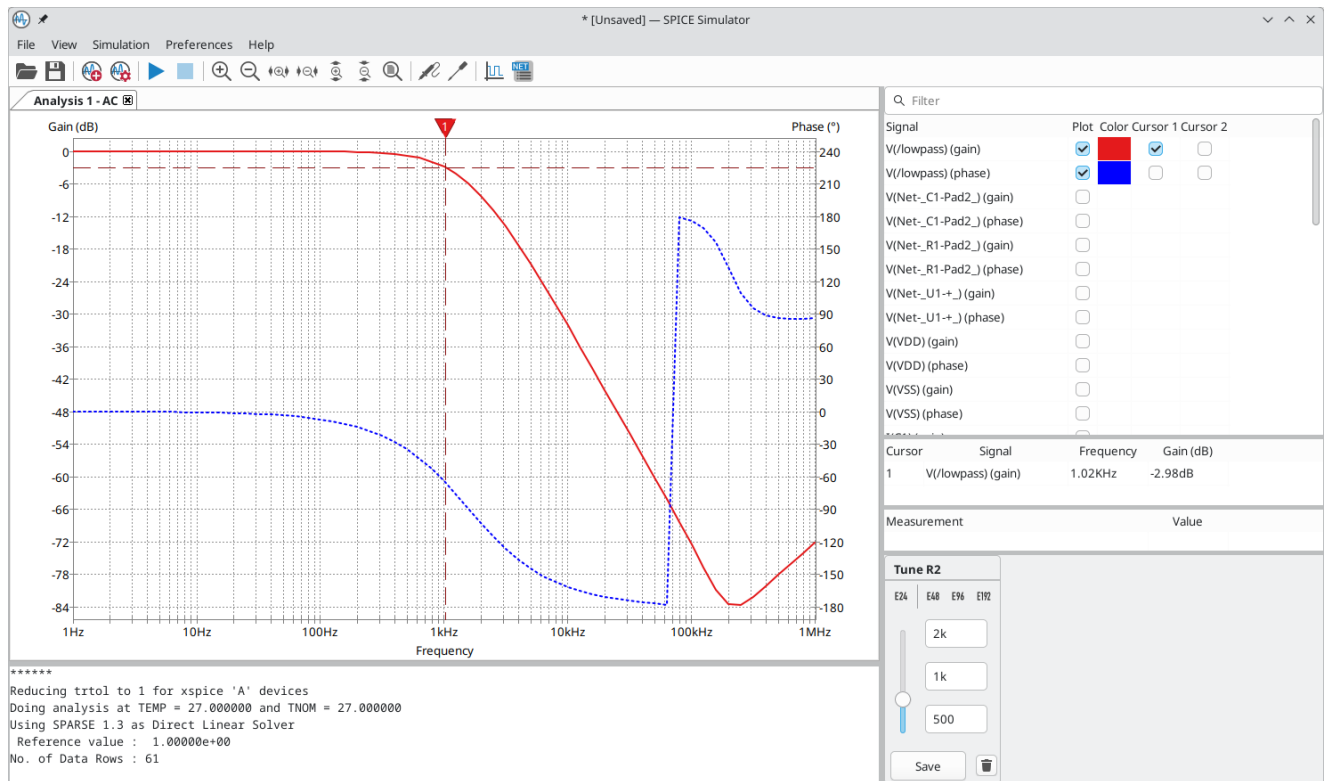

The simulator window is divided into several sections:

- The top of the window has a toolbar with buttons for commonly used actions.
- The main part of the window graphically shows the simulation results. The simulation needs to run and signals need to be selected from the list of available signals or probed before they are displayed in the plot.
- Below the plot panel, the output log window shows logs from the ngspice simulation engine. Some types of analyses print their results here.
- The right side of the window displays a list of signals, a list of active cursors, measurements, and a tuning tool for adjusting component values based on simulation results.

10.4.2. Simulation types

Each simulation is a specific type of analysis. The following analysis types are available:

- **OP** — DC Operating Point
- **DC** — DC Sweep Analysis

- **AC** — AC Small-signal Analysis
- **TRAN** — Transient Analysis
- **PZ** — Pole-zero Analysis
- **NOISE** — Noise Analysis
- **SP** — S-parameter Analysis
- **FFT** — Frequency-content Analysis

Each analysis type and its options are explained below. You can configure an analysis when you create it (



button) or by editing an existing analysis (




button). These analysis types are explained in more detail in the ngspice documentation [<https://ngspice.sourceforge.io/docs.html>].

Nota

Another way to configure a simulation is to type SPICE directives into text fields on schematics. Any text field directives related to a simulation command are overridden by the settings selected in the dialog. This means that once a simulation has run, the dialog overrides the schematic directives until the simulator is reopened.

Operating point analysis (OP)

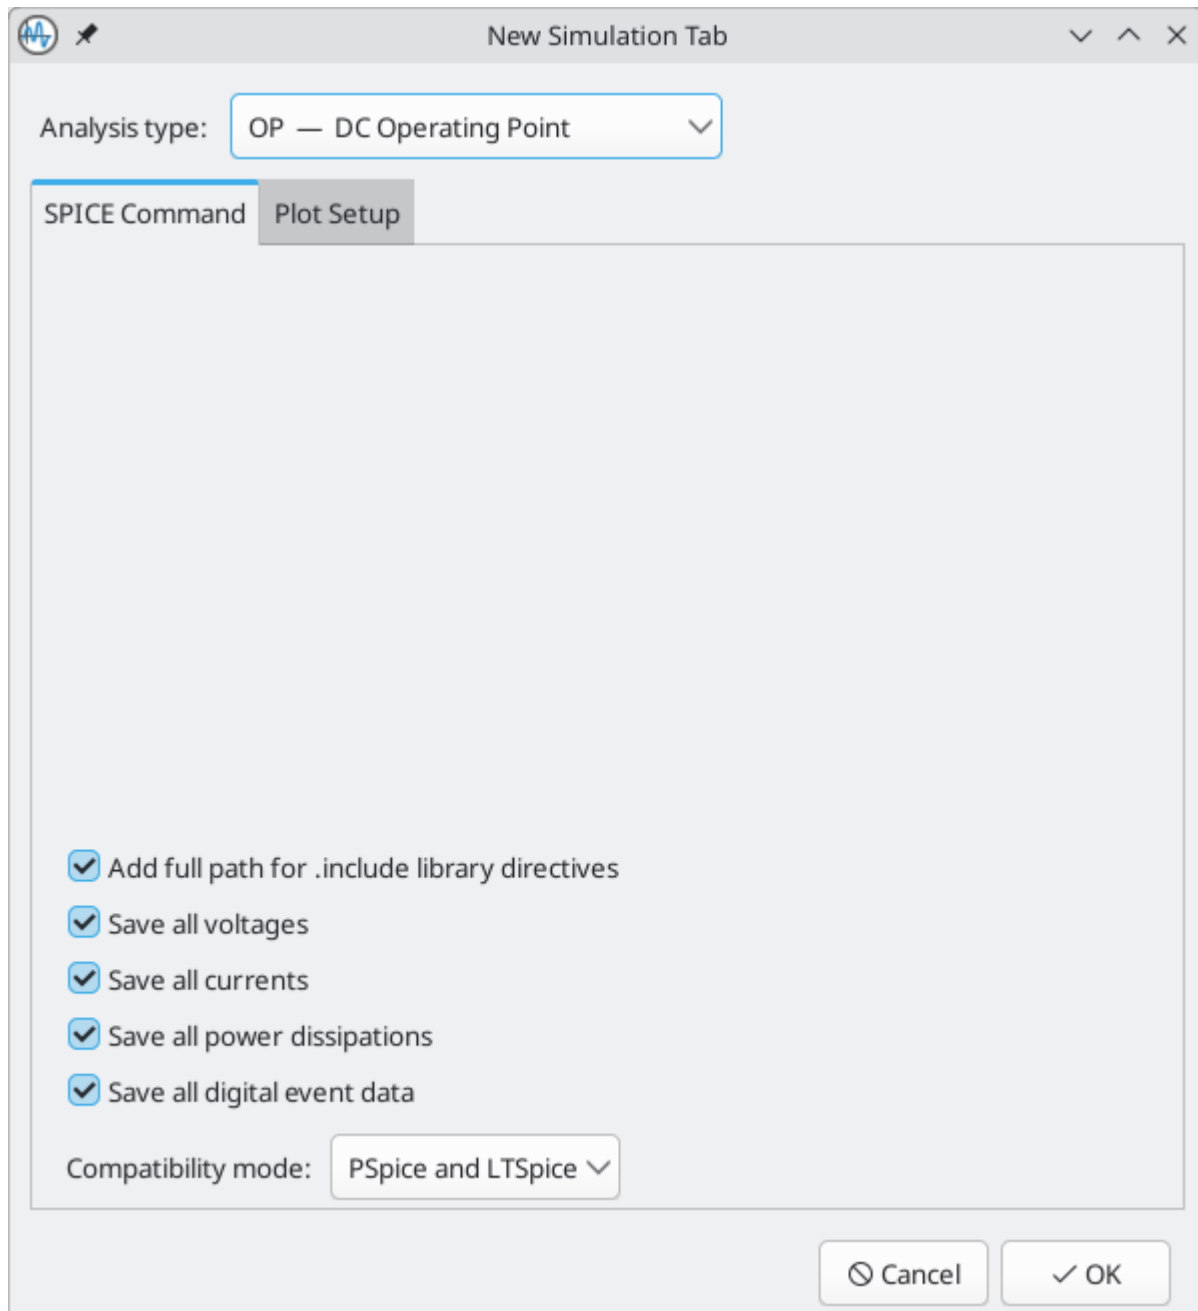

Calculates the DC operating point of the circuit. This analysis has no options.

Operating point analyses do not have any plotted results. Results are printed in the output log window. You can also display the node voltages and device currents calculated by this analysis as annotations in the schematic.

DC sweep analysis (DC)

New Simulation Tab

Analysis type: DC — DC Sweep Analysis

SPICE Command Plot Setup

Source 1 ☒ **Source 2** ☐

Sweep type: V V

Source: Source

Starting value: V V

Final value: V V

Increment step: V V

Swap sources

☒ Add full path for .include library directives

☒ Save all voltages

☒ Save all currents

☒ Save all power dissipations

☒ Save all digital event data

Compatibility mode: PSpice and LTSpice

Cancel OK

Calculates the DC behavior of the circuit while sweeping one or two parameters. The following parameters can be swept:

- value of an independent voltage source
- value of an independent current source
- value of a resistor
- simulation temperature

DC analyses have the following options, which are listed here with the corresponding ngspice parameter name:

- **Sweep type:** the type of variable to sweep. This can be a voltage source, a current source, a resistor, or the simulation temperature.
- **Source:** the particular voltage source, current source, or resistor to sweep (srcnam). The list is populated with each item in the schematic of the relevant type. It is disabled for temperature sweeps.
- **Starting value:** the starting value for the sweep (vstart).
- **Final value:** the ending value for the sweep (vstop).
- **Increment step:** the amount to increase the value at each step of the sweep (vincr). Smaller increments result in more output points.

If **Source 2** is enabled, the same options are available to simultaneously sweep a second source. Clicking the **Swap sources** buttons swaps Source 1 with Source 2.

The output is displayed as a plot.

AC small-signal analysis (AC)

The screenshot shows a software window titled "New Simulation Tab" with standard window controls (minimize, maximize, close) in the top right. Inside the window, the "Analysis type:" dropdown menu is set to "AC — Small-Signal Analysis". Below this, there are two tabs: "SPICE Command" and "Plot Setup", with "Plot Setup" currently selected. The "Plot Setup" tab contains several input fields and checkboxes. The "Number of points per decade:" field is empty. The "Start frequency:" field is empty, followed by a "Hz" unit label. The "Stop frequency:" field is empty, followed by a "Hz" unit label. Below these fields are five checkboxes, all of which are checked: "Add full path for .include library directives", "Save all voltages", "Save all currents", "Save all power dissipations", and "Save all digital event data". At the bottom of the tab, the "Compatibility mode:" dropdown menu is set to "PSpice and LTSpice". At the bottom right of the window, there are two buttons: "Cancel" and "OK".

Calculates the small-signal AC behavior of the circuit in response to a stimulus. Performs a decade sweep of stimulus frequency.

To run an AC analysis you must choose a number of points to measure per decade and the start and end frequencies for the decade sweep.

AC analyses have the following options, which are listed here with the corresponding ngspice parameter name:

- **Number of points per decade:** the number of points to calculate per decade (nd).
- **Start frequency:** the lower bound of the frequency range to analyze (fstart).
- **Stop frequency:** the upper bound of the frequency range to analyze (fstop).

The output is displayed as a Bode plot (output magnitude and phase vs. frequency).

Transient analysis (TRAN)

New Simulation Tab

Analysis type: TRAN — Transient Analysis

SPICE Command **Plot Setup**

Time step: seconds

Final time: seconds

Initial time: seconds (optional; default 0)

Max time step: seconds (optional; default $\min\{\text{tstep}, (\text{tstop}-\text{tstart})/50\}$)

☐ Use initial conditions

☒ Add full path for .include library directives

☒ Save all voltages

☒ Save all currents

☒ Save all power dissipations

☒ Save all digital event data

Compatibility mode: PSpice and LTSpice

Cancel OK

Calculates the time-varying behavior of the circuit.

Transient analyses have the following options, which are listed here with the corresponding ngspice parameter name:

- **Time step:** a suggested time step (tstep).
- **Final time:** the time at which the simulation will end (tstop).
- **Initial time:** the time at which the simulation will start (tstart). If not specified, this defaults to 0.
- **Max time step:** the maximum time step (tmax). If not specified, this defaults to the suggested time step or the total simulation duration divided by 50, whichever is smaller.

- **Use initial conditions:** if enabled, the simulator will not calculate the quiescent operating point before starting the transient simulation. Instead, the simulation will use the initial conditions specified in a `.ic` directive and element IC parameters. This corresponds to ngspice's `uic` option.

The output is displayed as a plot.

Pole-zero analysis (PZ)

New Simulation Tab

Analysis type: PZ — Pole-Zero Analysis

SPICE Command Plot Setup

Transfer function: (output voltage) / (input voltage)

Input: Ref:

Output: Ref:

Find: Poles and Zeros

☒ Add full path for .include library directives

☒ Save all voltages

☒ Save all currents

☒ Save all power dissipations

☒ Save all digital event data

Compatibility mode: PSpice and LTSpice

Cancel OK

Calculates the poles and zeroes of the small-signal (AC) transfer function of the circuit.

Pole-zero analyses have the following options, which are listed here with the corresponding ngspice parameter name:

- **Transfer function:** selects between calculating the transfer function as output voltage divided by input voltage or output voltage divided by input current. These correspond to ngspice's `vol` and `cur` options, respectively.

- **Input:** the input node (node1) and the reference node for the input (node2).
- **Output:** the output node (node3) and the reference node for the output (node4).
- **Find:** selects between calculating poles and zeroes, only poles, or only zeroes. These correspond to ngspice's pz, pol, and zer options, respectively.

Operating point analyses do not have any plotted results. Results are printed in the output log window.

Noise analysis (NOISE)

New Simulation Tab

Analysis type: **NOISE — Noise Analysis**

SPICE Command **Plot Setup**

Measured node:

Reference node: (optional; default GND)

Noise source:

Number of points per decade:

Start frequency: Hz

Stop frequency: Hz

☒ Save contributions from all noise generators

☒ Add full path for .include library directives

☒ Save all voltages

☒ Save all currents

☒ Save all power dissipations

☒ Save all digital event data

Compatibility mode: **PSpice and LTSpice**

Calculates the noise generated by the devices in the circuit, both as output noise and input-referred noise. The noise spectrum (V/#Hz or A/#Hz) of the circuit can be plotted, and the total noise over the specified frequency range is reported. Optionally, the noise contributions of each device are reported individually.

Noise analyses have the following options, which are listed here with the corresponding ngspice parameter name:

- **Measured node:** the node at which output noise is measured (`output`).
- **Reference node:** the reference node for measuring the output noise (`ref`). The output noise is calculated as the noise at the measured node minus the noise at the reference node. If it is not specified, the default is the ground node.
- **Noise source:** a source that is considered the circuit's input for the purposes of calculating input-referred noise (`src`). The source must specify an AC magnitude, i.e. the source must have an `ac` parameter.
- **Number of points per decade:** the number of points to calculate per decade (`pts`).
- **Start frequency:** the lower bound of the frequency range to analyze (`fstart`).
- **Stop frequency:** the upper bound of the frequency range to analyze (`fstop`).
- **Save contributions from all noise generators:** if enabled, noise magnitudes of individual noise generators are saved and reported. If disabled, only the overall output and input-referred noise over the specified frequency range are reported.

The output and input-referred noise spectra can be plotted. Total noise values for the specified frequency range are printed in the output log window.

S-parameter analysis (SP)

The screenshot shows a software window titled 'New Simulation Tab'. At the top, there is a dropdown menu for 'Analysis type:' set to 'SP — S-Parameter Analysis'. Below this are two tabs: 'SPICE Command' and 'Plot Setup', with 'Plot Setup' being the active tab. The 'Plot Setup' tab contains several input fields: 'Number of points per decade:' with an empty text box, 'Start frequency:' with an empty text box followed by 'Hz', and 'Stop frequency:' with an empty text box followed by 'Hz'. There is an unchecked checkbox labeled 'Compute noise current correlation matrix'. Below these are five checked checkboxes: 'Add full path for .include library directives', 'Save all voltages', 'Save all currents', 'Save all power dissipations', and 'Save all digital event data'. At the bottom of the tab is a 'Compatibility mode:' dropdown set to 'PSpice and LTSpice'. At the very bottom of the window are 'Cancel' and 'OK' buttons.

Calculates the scattering parameters, admittance matrix, and impedance matrix for the circuit. Optionally calculates the noise current correlation matrix. Note that this analysis requires at least two voltage sources configured as RF ports as described in the ngspice manual.


S-parameter analyses have the following options, which are listed here with the corresponding ngspice parameter name:

- **Number of points per decade:** the number of points to calculate per decade (nd).
- **Start frequency:** the lower bound of the frequency range to analyze (fstart).
- **Stop frequency:** the upper bound of the frequency range to analyze (fstop).

- **Compute noise current correlation matrix:** if enabled, the noise current correlation matrix is also calculated. This corresponds to ngspice's donoise option.

The output is displayed as a plot.

Frequency content analysis (FFT)

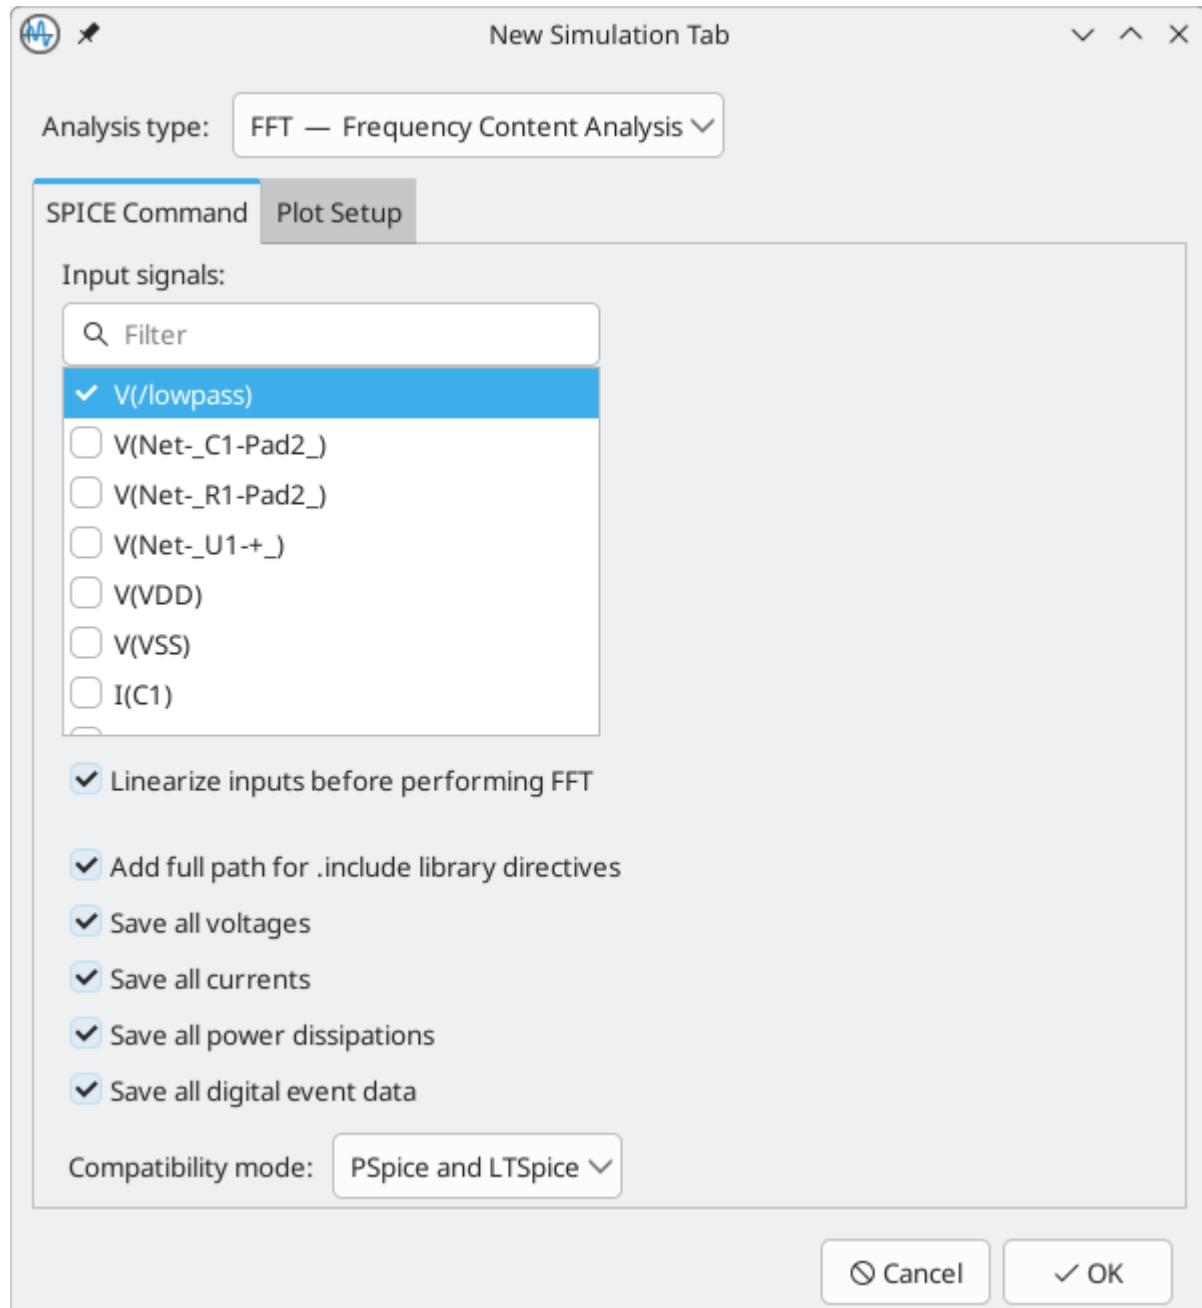

Calculates an FFT based on an existing analysis tab. Any of the signals from an existing analysis can be used as inputs to the FFT. The signals are windowed using a Hanning window.

FFT analyses have the following options, which are listed here with the corresponding ngspice parameter name:

- **Input signals:** the signal(s) to perform an FFT on. An FFT is independently applied to each selected signal.

- **Linearize inputs before performing FFT:** When enabled, the input vector is converted to have equidistant time points prior to performing the FFT. Corresponds to ngspice's `linearize` command.

The output is displayed as a plot.

Additional simulation settings

There are several simulation options that apply to all types of simulations. These are located at the bottom of the dialog.

- **Add full path for .include library directives:** if enabled, relative paths to SPICE models will be converted to absolute paths in the SPICE netlist.
- **Save all voltages:** if enabled, the simulator will save voltages for each node in the simulation results so that they can be plotted. This corresponds to ngspice's `.save all` command in the SPICE netlist. If disabled, voltages will not be saved in the results, and therefore cannot be plotted, unless a SPICE directive is used to manually probe a node voltage.
- **Save all currents:** if enabled, the simulator will save currents through each device pin in the simulation results so that they can be plotted. This corresponds to ngspice's `.probe all i` command in the SPICE netlist. If disabled, currents will not be saved in the results, and therefore cannot be plotted, unless a SPICE directive is used to manually probe a current.
- **Save all power dissipations:** if enabled, the simulator will save power dissipations for each device in the simulation results so that they can be plotted. This corresponds to ngspice's `.probe P(<device>)` command in the SPICE netlist for each device in the schematic. If disabled, power dissipations will not be saved in the results, and therefore cannot be plotted, unless a SPICE directive is used to manually probe a power dissipation.
- **Save all digital event data:** if enabled, the simulator will save digital event data for digital (event-driven) simulation models. This corresponds to ngspice's `.esave all` command. If disabled, digital event data will be discarded.
- The **Compatibility mode** dropdown selects the compatibility mode that the simulator uses to load models. The **User configuration** option refers to the user's `.spiceinit` ngspice configuration file. Compatibility modes are described in the ngspice documentation [<https://ngspice.sourceforge.io/docs.html>].

10.5. Viewing simulation results

Each analysis has its own tab, containing its own separate plot, signal list, and output log window. Only the active tab is updated when a simulation is run. In this way it is possible to compare simulation results between different runs.

Simulation results from most analysis types are visualized as plots. However, DC Operating Point (OP) and Pole-zero (PZ) analyses do not generate plots. Instead, they print their results in the output log at the bottom of the simulator window. OP analysis results can additionally be displayed as annotations on the schematic canvas.

10.5.1. Plotted results

Most types of analyses display their results in a plot. The type of plot depends on the analysis: transient simulations display signal values over time, for example, while AC simulations display results in a Bode plot.

You can zoom and move a plot using the following gestures:

- Scroll mouse wheel to zoom in/out. `kbd:[Shift]`, `kbd:[Ctrl]`, and `kbd:[Alt]` can modify the scroll action depending on the configuration in the Simulator panel in the Schematic Editor Preferences.
- Right click to open a context menu to adjust the view.
- Draw a selection rectangle to zoom in the selected area.
- Drag a cursor marker to move the cursor.

The list of signals that can be plotted in the active plot is shown in the Signals pane on the right side of the simulator window. The following types of signals can be plotted:

- Node voltages: the voltage of each net in the schematic, displayed as `V(<net>)`.
- Device node currents: the current for each device in the schematic, displayed as `I(<device>)` or `I(<device:terminal>)`. For two-terminal devices, the device's current is listed as a single signal corresponding to the current into the device's pin 1. For devices with more than two terminals, the current into each terminal is a separate signal.
- Device power dissipations: the power dissipated by each component, displayed as `P(<device>)`.
- User-defined signals: custom signals defined as an expression based on other signals. User-defined signals can be arbitrary mathematical expressions. One common use for user-defined signals is to plot a voltage differential, i.e. the voltage between two points.

To plot a signal, check the box in the plot column next to the signal of interest. To remove a signal from the plot, clear its checkbox.

You can also interactively select signals to plot by using the Probe Schematic tool. To activate the tool, use **Simulation** → **Probe Schematic...** (`kbd:[P]`) or click the (



) button. When activated, the tool lets you click elements in the schematic to plot the corresponding signal. Different types of signals are probed depending on what you click:

- Clicking on a wire plots the voltage of that net. When you hover over a wire, the net is highlighted to indicate that its voltage can be probed.
- Clicking on a symbol pin plots the current going into that pin. When you hover over a pin, the cursor changes to a current clamp to indicate that clicking will probe the current.


Nota

KiCad does not support ngspice's `.plot` directive. This directive has no effect when a simulation is run using KiCad.

Plot settings and appearance

Colors of individual signals may be set by clicking the color field associated with each signal in the Signals grid. You may choose from a predefined palette (**Defined Colors**), or select a custom color (**Color Picker**). You can toggle the color of the plot background from black to white with **View** → **Dark Mode Plots** (this affects all analysis tabs, not just the active tab).

Many plot settings can be configured in the **Plot Setup** tab of the Analysis Setup window ( button).

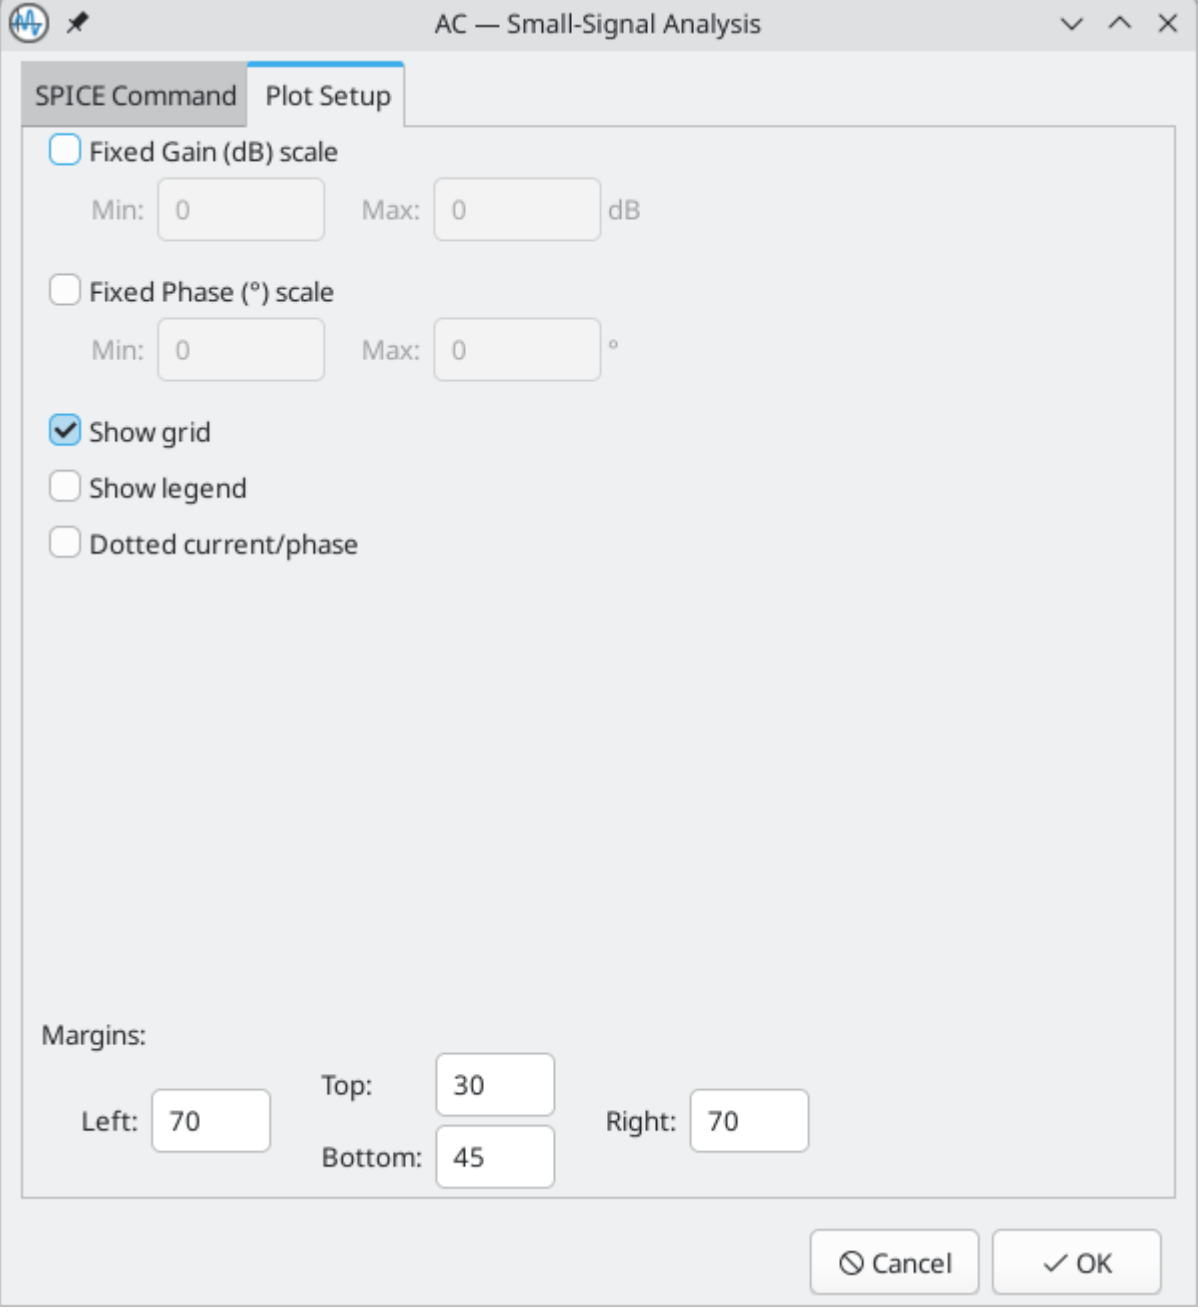

AC — Small-Signal Analysis

SPICE Command Plot Setup

☐ Fixed Gain (dB) scale
Min: 0 Max: 0 dB

☐ Fixed Phase (°) scale
Min: 0 Max: 0 °

☒ Show grid

☐ Show legend

☐ Dotted current/phase

Margins:
Left: 70 Top: 30 Right: 70
Bottom: 45

Cancel OK

- **Fixed scale:** when enabled, this fixes the vertical and/or horizontal plot scales to the specified ranges. Manually zooming will not affect an axis if its scale is fixed.
- **Show grid:** when enabled, a grid will be shown behind the plotted signals. You can also turn the grid on or off with **View** → **Show Grid**.

- **Show legend:** when enabled, a legend will be shown on the plot for the enabled signals. You can reposition the legend by dragging it.
- **Dotted current/phase:** when enabled, plotted signals representing current (transient simulations) or phase (AC simulations) are displayed using dotted lines instead of solid lines. You can also enable this setting with **View** → **Dotted Current/Phase**.
- **Margins:** this controls the padding on each side of the plot.

Cursors

For precise measurement, cursors are available in the plot window. You can add a cursor to a signal by checking the **Cursor 1** or **Cursor 2** checkbox for the signal in the signal grid on the right.

Once cursors have been added, the horizontal position of each cursor is shown by a number in a triangular marker at the top of the plot display. You can reposition each cursor by clicking and dragging its marker. The vertical position of each cursor tracks its assigned signal. The horizontal and vertical value for each cursor are shown in the cursor grid on the right of the simulator window. If cursors 1 and 2 are both enabled, the difference between them is also shown.

To precisely position a cursor, you can directly edit its horizontal position in the cursors grid. You can also modify the display format (unit range and number of significant digits) by right clicking a value in the cursors grid and clicking **Format** for the relevant quantity.

Measurements

You can add automatically calculated measurements for any plotted signal, such as a minimum, average, or peak-to-peak measurement.

Nota

Measurements are made over all the data resulting from the simulation, not just the data that is visible in the plot window at the current zoom setting.

Nota

It is not necessary to have selected a signal for plotting (by selecting its Plot checkbox) in order to make a measurement on it. Even unplotted signals can be measured.

To add a predefined measurement to a signal, right click on a signal in the signals grid and select a measurement. The following measurements are available:

- **Measure Min:** measures the minimum value of the entire signal
- **Measure Max:** measures the maximum value of the entire signal
- **Measure RMS:** measures the root-mean-square value of the entire signal
- **Measure Peak-to-peak:** measures the peak-to-peak value of the entire signal

- **Measure Time of Min:** measures the time at which the minimum value of the entire signal occurs
- **Measure Time of Max:** measures the time at which the maximum value of the entire signal occurs
- **Measure Integral:** computes the time integral value of the entire signal
- **Perform Fourier Analysis:** performs a Fourier analysis of the selected signal based on a specified fundamental frequency. Calculates the amplitude of the harmonics of the fundamental as well as the total harmonic distortion. This measurement is only available for transient analyses, and its results are printed in the simulation log window instead of in the measurement panel.

Measurement results are displayed in the Measurement pane at the lower right of the Simulator window. Multiple measurements will display as multiple rows in this area. You can delete a measurement by right clicking it and clicking **Delete Measurement**. To modify the display format of a measurement result (unit range and number of significant digits), right click the value and click **Format Value....**

The above context menu options are a shortcut for directly specifying measurements in the the Measurement pane. To manually create a new measurement, click in an empty row in the Measurement pane and type in an ngspice measurement function. You can also edit existing measurements by clicking on them. For more information about measurements and their syntax, refer to the ngspice manual.

10.5.2. Numerical results


While most analyses display their results as plots, DC Operating Point (OP) and Pole-zero (PZ) analyses do not result in plots. Instead, these analyses print their results as text in the simulation log window.

```
Simulation results:

Background thread stopped with timeout = 0
pole(1) = -1.47250e+03,0.000000e+00
pole(2) = -1.88233e-01,0.000000e+00
pole(3) = 0.000000e+00,0.000000e+00
zero(1) = -1.00000e+04,0.000000e+00
zero(2) = -1.88233e-01,0.000000e+00
zero(3) = 0.000000e+00,0.000000e+00
```

Operating point annotations

For the OP analysis, annotations can also be added to the schematic indicating the operating point voltage and current values at the nodes. Operating point voltage annotations can be shown or hidden for every node with **View** → **Show OP Voltages**. Operating point current annotations can be shown or hidden for every symbol pin with **View** → **Show OP Currents**. These annotations are globally shown or hidden for every node or every pin. You can control the formatting of these annotations in the Formatting panel of Schematic Setup.

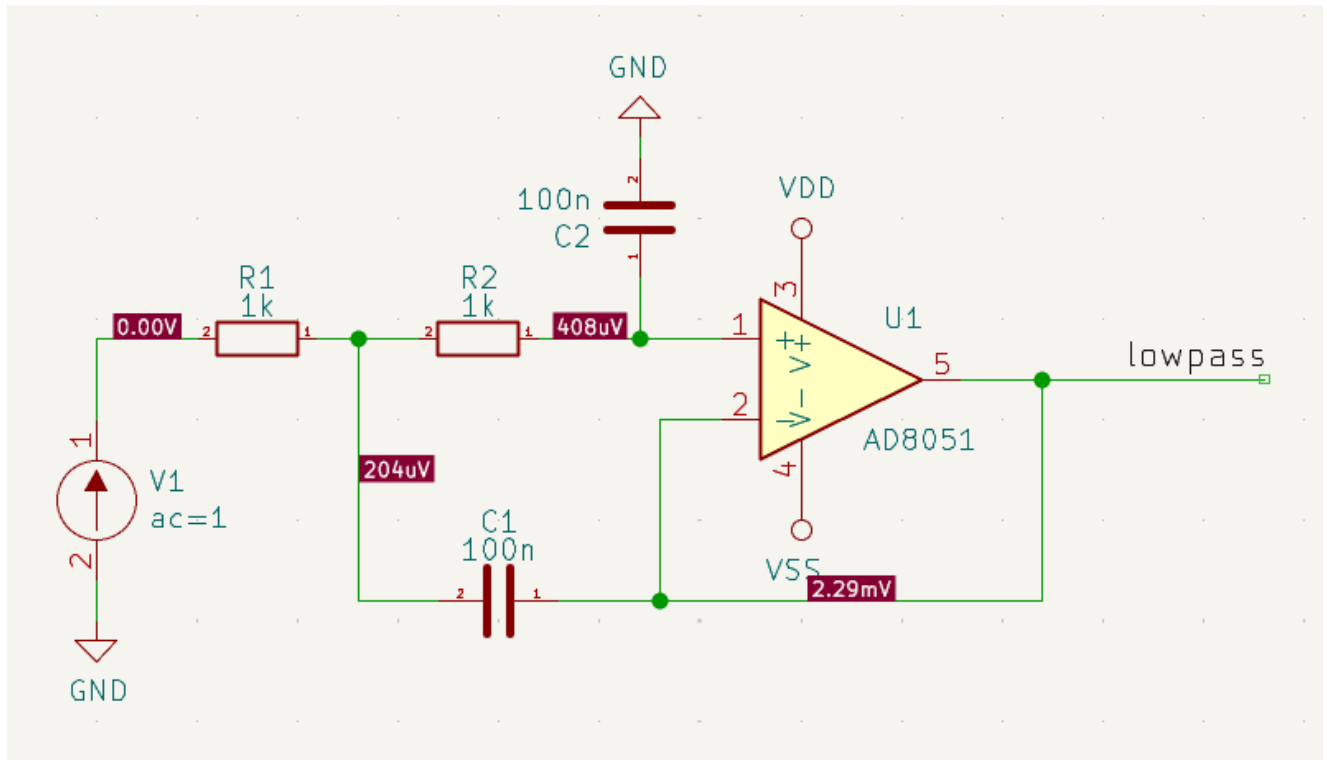

You can also display operating point results using text variables. Using text variables requires more work to set up but provides more control over how the data is displayed. For example, you can use text variables to display only certain voltages or currents, or to control the display formatting of particular values. You can also use text variables to display power dissipation measurements.

To use text variables to display an operating point voltage for a net, add a label to the net, then add a field to that label. The label can contain any text as long as it contains the `${OP}` text variable. The text variable can contain formatting specifiers in the form `${OP.<precision><unit>}`, but both the precision and unit are optional. Precision is the number of significant digits to display, which is 3 by default. Unit is the unit to use, including a prefix, such as mV for millivolts.

As an example, a label field containing the text `Vout: ${OP}`, attached to a net with an operating point voltage of 5.123V, displays as "Vout: 5.12V". The text `${OP}.4mV` displays as "5123mV", `${OP}.2` displays as "5.1V", and `${OP}.mV` displays as "512mV".

Using text variables to display an operating point current into a device pin is similar, but uses symbol fields instead of label fields. The field can contain any text as long as it contains the `${OP:<pin>}` text variable. The pin can be specified as a pin name or a pin number. For two-terminal devices, the pin can be omitted, and the current into the device's pin 1 will be reported. The same optional formatting specifiers are supported as for voltages, in the form `${OP:<pin>.<precision><unit>}`.

For example, in a symbol with an operating point current of 5.123mA through pin 1 (pin name C), a symbol field containing the text `Ic: ${OP:C}` displays as "Ic: 5.12mA". The text `${OP:C}.2mA` displays as "5.1mA", `${OP:1}.4` displays as "5.123mA", and `${OP:C.A}` displays as "0.00512A".


You can also use text variables to display a device's power dissipation. This works identically to current, but with power instead of a pin name or number. For example, in a symbol with an operating point power dissipation of 5.123mW, a symbol field containing `${OP:power}.2mW` displays as "5.1mW".

Nota

Don't forget to set the label field or symbol field to visible, or it will not be displayed.

10.5.3. User-defined signals

In addition to the list of signals that come from the nets in the schematic, you can define your own signals which behave like normal signals in most respects. User defined signals are defined as mathematical operations on one or more basic signals.

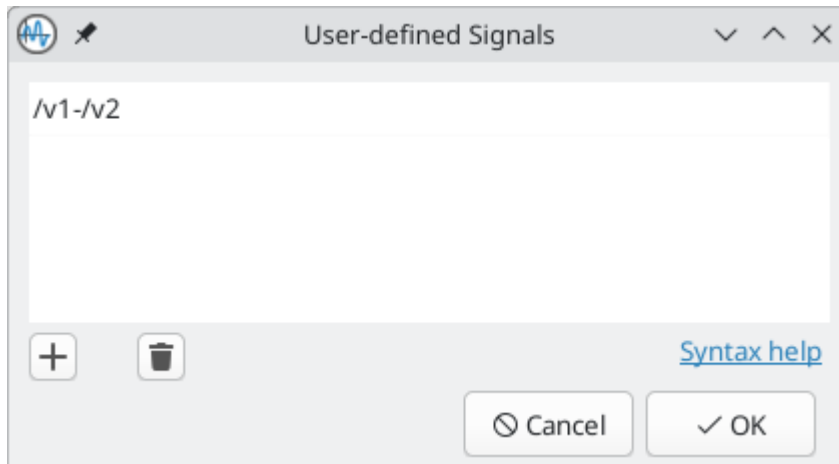

To add a user-defined signal, open the User-defined Signal dialog with **Simulation** → **User-defined Signals...** (



button) and add a signal. The new signal will appear in the Signal grid, where it can be plotted and used like any other signal. User-defined signals are also included in OP results.

Nota

Unlike normal signals, which are plotted incrementally as a simulation progresses, user-defined signals are not plotted until the simulation completes.

One use for user-defined signals is to plot a differential voltage, i.e. the voltage between two arbitrary nodes. For example, to plot the voltage difference between the nets /v1 and /v2, you can create a user-defined signal with the expression /v1-/v2 and then plot it. This expression could also be written in a number of different ways, for example V(/v1)-V(/v2) or V(/v1,/v2), which are both equivalent.

A number of mathematical functions are available for use in user-defined signals. To see a list, click the **Syntax help** link in the User-defined Signals dialog. Refer to the ngspice manual for details on each of these functions.

Nota

Net names may contain special characters that have particular meaning to the ngspice interpreter. In particular, ngspice interprets the dash character (-) as a subtraction operation. To ensure that net names are interpreted correctly, surround the net name with double quote (") characters when referring to it in a user-defined signal.


10.6. Tuning components

It is possible to adjust the value of basic components in the schematic from within the simulation interface, which lets you conveniently adjust component values based on simulation results. Each time the component value is tuned, the simulation is re-run with the new component value. You can tune the value of passive resistors, inductors, and capacitors, or the voltage or current of DC voltage and current sources.

Nota

You can only tune components when running analyses that result in a plot. In other words, you cannot tune components when running an operating point analysis.

To tune a component, use **Simulation** → **Add Tuned Value...**, the keyboard shortcut kbd:[T], or the  button in the toolbar, and then click on the component to tune in the schematic. This adds a tuning control for that component in the bottom right corner of the simulator window. Multiple components can be tuned at once, with a separate tuning control per component.

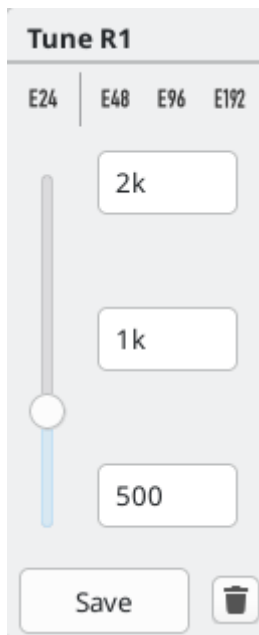

- The top text field sets the top end of the tuning range.
- The bottom text field sets the bottom end of the tuning range.
- The middle text field sets the actual component value that is used in the simulation. This value can also be adjusted using the slider.
- The **Save** button updates the schematic symbol with the tuned value. Until you press the **Save** button, the schematic symbol will keep its original value.
- The  button removes the component from the Tune panel and restores its original value.

In addition, it is possible to restrict the component values to those from a particular series of Preferred Values — either of the E24, E48, E96 or E192 series. This is particularly useful when it is necessary to restrict component values to commercially available parts.

10.7. Saving simulation setups

You can save a simulation setup in a workbook. Workbooks are files that store information about a simulation setup, including which analyses are configured and what their settings are, which signals are plotted for each analysis, user-defined signals, measurements, cursors, and display settings. A workbook can be saved and reloaded later to restore the previously configured settings in a new session. Workbooks can include more than one simulation: for example, it may contain separate tabs for transient, operating point, and AC analyses which you added as you worked.

You can save a workbook using **File** → **Save Workbook** and load one using **File** → **Open Workbook**. The most recently used workbook is automatically loaded when the simulator is opened.

Nota

Workbooks store simulation setup information, but they do not store simulation results. You can export simulation results to PNG (graphics) or CSV (simulation data values) with **File** → **Export Current Plot as PNG...** and **File** → **Export Current Plot as CSV....** To recreate the results of simulations stored in a workbook, select the appropriate analysis tab in the Simulator window and run the simulation again (kbd:[R] or **Simulation** → **Run Simulation**).

10.8. Exporting simulation results

KiCad's simulator offers two ways to export results:

- as a PNG (Portable Network Graphics format) image of a simulation data plot,
- as a plain text file of simulation data values, in CSV (Comma-Separated Value) format.

Only simulations that produce plots (see above) can be exported as an image or a CSV file. The results of OP and PZ analyses cannot be exported in this way.

10.8.1. Exporting results as graphics

The currently-visible Simulator plot may be exported as a PNG file using the command **File** → **Export Current Plot as PNG...**

The size and aspect-ratio of the saved image will match that of the displayed plot in the Simulator.

You can also copy an image of the active plot to the clipboard using **File** → **Export Current Plot to Clipboard**, or insert an image of the active plot into the schematic using **File** → **Export Current Plot to Schematic**. Exporting a plot to the schematic is equivalent to exporting the plot to the clipboard and then pasting it into the schematic.

10.8.2. Exporting results as numerical data

The currently-visible Simulator plot may be exported as a CSV file using the command **File** → **Export Current Plot as CSV...**

The data in the simulation plot is exported as multiple columns. The precise format is dependent upon the analysis type. In general, there will be multiple columns of data, one corresponding to each variable selected for plotting. The first row of the file is a header row, containing the name of the variable in the column (i.e. *time*, *V(Vout)1* or similar).

Nota

When exporting to CSV, only variables selected using their Plot checkbox will be included in the exported file.

Nota

The data in the exported file contains all the data that would be plotted if the entire plot were displayed. If the plot is zoomed in to show a particular region this will still be the case, resulting in the output file containing more data than the user might expect.

Nota

This function exports the data with data separated by semicolons (;) rather than commas. Programs reading this data may need to be configured to expect a semicolon as a delimiter.

10.9. Troubleshooting simulations

Sometimes a simulation will fail, either with or without errors being reported. Paying attention to the error messages reported, taking care in the development and entry into KiCad of the circuit to be simulated, and making use of the KiCad, ngspice and general SPICE documentation and information from fellow users in forums is very worthwhile and can often point the way to a solution.

It's worth noting, for users unfamiliar with SPICE, ngspice or circuit simulation in general that some *common* and interesting circuits can sometimes be tricky to simulate accurately or reliably. These include apparently simple circuits such as oscillators, which in some cases may fail to oscillate at all! It is nearly always possible to build a working simulation but sometimes this can more require SPICE experience than might be initially apparent, or the guidance of someone who already has it. The ngspice documentation, once again, is worth reading for insights into good and effective simulation practices if you are encountering difficulty.

10.9.1. Incorrect netlist

It is possible to inspect the SPICE netlist with **Simulation** → **Show SPICE netlist...** (



button). This method of troubleshooting requires some SPICE knowledge, but spotting errors in the netlist can help determine the cause of simulation problems, as well as providing confirmation of what input ngspice is actually acting on.

10.9.2. Simulation error messages

The output console displays messages from the simulator. It is advisable to check the console output to verify there are no errors or warnings. Messages appearing in the console may be conveniently selected, copied, and pasted if you wish to share them.

A common error message is "timestep too small". This message means that the simulation engine is unable to calculate the next point in the simulation, even when using the minimum possible time increment. This error can have many causes, including numerical convergence issues with a simulation model used in the circuit or with the circuit itself. It can also be caused by mistakes in drawing the circuit, such as incorrectly assigning pins to the simulation model or forgetting to provide a voltage supply.

10.9.3. Convergence problems

In case the simulation does not converge in a reasonable amount of time (or not at all), it is possible to add the following SPICE directives. More information is available in the ngspice manual.

Avvertimento

Changing convergence options can lead to erroneous results. These options should be used with caution.

```
.options gmin=1e-10
.options abstol=1e-10
.options reltol=0.003
.options cshunt=1e-15
```

- `gmin` is the minimum conductance allowed by the program. The default value is $1\text{e-}12$ (1 pS).
- `abstol` is the absolute current error tolerance of the program. The default value is $1\text{e-}12$ (1 pA).
- `reltol` is the relative error tolerance of the program. The default value is 0.001 (0.1%).
- `cshunt` adds a capacitor of the specified value from each voltage node in the circuit to ground.

10.9.4. Simulation pin assignments

If unexpected results are generated by a simulation despite it running without obvious errors, it is worth double-checking that the assignments between the pins of the part instance in the KiCad schematic and that of the associated model are correct. These have to be correct for each instance of the model in the schematic.

10.10. Helpful hints

Some helpful tips, hints and advice to help you get the most from using ngspice in KiCad for simulation.

10.10.1. The ngspice manual is your friend!

Fundamentally the KiCad Simulator is a user-friendly front-end to the powerful ngspice circuit simulator. Therefore problems with the details of simulation, the correct use of SPICE elements, models, etc. is beyond the scope of the KiCad documentation but is very likely to be fully and completely addressed in the ngspice documentation itself. It's therefore recommended not to overlook this valuable resource [<https://ngspice.sourceforge.io/docs.html>].

Nota

KiCad updates may result in changes to the ngspice version used by the simulator. The current version of ngspice used in a particular version of KiCad is shown on the **Help** → **About KiCad** dialog, under the **Version** tab. Referring to the online ngspice documentation will ensure you always have access to the latest information for reference.

10.10.2. Organizing third-party models

Although it is certainly possible to keep simulation models (i.e. .lib, .sub files) in the directories associated with individual KiCad projects, this will likely result in unnecessary copies of model files proliferating as you create simulations. Consider creating a dedicated storage location (directory, folder) for models, perhaps organized by manufacturer or device type, to hold these files. Then they may simply be referenced in simulations at a common location.

10.10.3. Simulation symbols and models in KiCad's libraries

The KiCad libraries provide a number of symbols for simulation in the `Simulation_SPICE` symbol library. Most of these symbols have SPICE models already assigned as appropriate, although you may need to adjust the model parameters in order to obtain the desired simulation behavior.

The `Simulation_SPICE` symbol library contains the following symbols:

Symbol Name	Description
0	A ground (node 0) symbol. Note that a standard GND symbol from another library can also be used.
BSOURCE	A symbol for a SPICE B-source (nonlinear dependent voltage or current source). Refer to the ngspice manual [https://ngspice.sourceforge.io/docs/ngspice-html-manual/manual.xhtml#sec_Non_linear_Dependent_Sources] for information on B-sources.
D	A diode symbol. Note that the pin assignment is appropriate for both simulation and PCB layout.
ESOURCE	A symbol for a SPICE E-source (linear voltage-controlled voltage source). By default it is set up with a gain of 1 V/V. Refer to the ngspice manual [https://ngspice.sourceforge.io/docs/ngspice-html-manual/manual.xhtml#subsec_Exxxx_Linear_Voltage_Controlled] for more information on E-sources.
GSOURCE	A symbol for a SPICE G-source (linear voltage-controlled current source). By default it is set up with a gain of 1 A/V. Refer to the ngspice manual [https://ngspice.sourceforge.io/docs/ngspice-html-manual/manual.xhtml#subsec_Gxxxx_Linear_Voltage_Controlled] for more information on G-sources.
IAM	A symbol for a SPICE amplitude-modulated independent current source. Refer to the ngspice manual [https://ngspice.sourceforge.io/docs/ngspice-html-manual/

	manual.xhtml#sec_Independent_Sources_for] for more information on independent current sources.
IBIS_DEVICE	An IBIS device symbol representing a digital input pin. This symbol is not preconfigured with a simulation model. It is intended to be used with an external IBIS model for a device.
IBIS_DEVICE_DIFF	An IBIS device symbol representing a digital differential input pin. This symbol is not preconfigured with a simulation model. It is intended to be used with an external IBIS model for a differential device.
IBIS_DRIVER	An IBIS driver symbol representing a digital output pin. This symbol is not preconfigured with a simulation model. It is intended to be used with an external IBIS model for a driver.
IBIS_DRIVER_DIFF	An IBIS driver symbol representing a pair of digital differential output pins. This symbol is not preconfigured with a simulation model. It is intended to be used with an external IBIS model for a differential driver.
IDC	A symbol for a SPICE DC independent current source. Refer to the ngspice manual [https://ngspice.sourceforge.io/docs/ngspice-html-manual/manual.xhtml#sec_Independent_Sources_for] for more information on independent current sources.
IEXP	A symbol for a SPICE exponential independent current source. Refer to the ngspice manual [https://ngspice.sourceforge.io/docs/ngspice-html-manual/manual.xhtml#sec_Independent_Sources_for] for more information on independent current sources.
IPULSE	A symbol for a SPICE pulsed independent current source. Refer to the ngspice manual [https://ngspice.sourceforge.io/docs/ngspice-html-manual/manual.xhtml#sec_Independent_Sources_for] for more information on independent current sources.
IPWL	A symbol for a SPICE piecewise linear independent current source. The waveform is specified as space-separated time-current pairs. Refer to the ngspice manual [https://ngspice.sourceforge.io/docs/ngspice-html-manual/manual.xhtml#sec_Independent_Sources_for] for more information on independent current sources.
ISFFM	A symbol for a SPICE single-frequency frequency-modulated independent current source. Refer to the ngspice manual [https://ngspice.sourceforge.io/docs/ngspice-html-manual/manual.xhtml#sec_Independent_Sources_for] for more information on independent current sources.
ISIN	A symbol for a SPICE sinusoidal independent current source. Refer to the ngspice manual [https://ngspice.sourceforge.io/docs/ngspice-html-manual/manual.xhtml#sec_Independent_Sources_for] for more information on independent current sources.
ITRNOISE	A symbol for a SPICE transient noise independent current source. Refer to the ngspice manual [https://ngspice.sourceforge.io/docs/

	ngspice-html-manual/manual.xhtml#sec_Independent_Sources_for] for more information on independent current sources.
ITRRANDOM	A symbol for a SPICE transient random independent current source. Refer to the ngspice manual [https://ngspice.sourceforge.io/docs/ngspice-html-manual/manual.xhtml#sec_Independent_Sources_for] for more information on independent current sources.
NJFET	A symbol for an N-channel JFET with drain, gate, and source terminals, suitable for use with 3-terminal N-JFET models.
NMOS	A symbol for an N-channel MOSFET with drain, gate, and source terminals, suitable for use with 3-terminal N-MOSFET models.
NMOS_Substrate	A symbol for an N-channel MOSFET with drain, gate, source, and substrate (bulk) terminals, suitable for use with 4-terminal N-MOSFET models.
NPN	A symbol for an NPN transistor with collector, base, and emitter terminals, suitable for use with 3-terminal NPN models.
NPN_Substrate	A symbol for an NPN transistor with collector, base, emitter, and substrate terminals, suitable for use with 4-terminal NPN models.
OPAMP	A generic single-pole operational amplifier symbol. There are parameters for pole frequency, open loop gain, offset voltage, and output resistance. These parameters can be edited in the Parameters grid of the SPICE Model Editor dialog.
PJFET	A symbol for a P-channel JFET with drain, gate, and source terminals, suitable for use with 3-terminal P-JFET models.
PMOS	A symbol for a P-channel MOSFET with drain, gate, and source terminals, suitable for use with 3-terminal P-MOSFET models.
PMOS_Substrate	A symbol for a P-channel MOSFET with drain, gate, source, and substrate (bulk) terminals, suitable for use with 4-terminal P-MOSFET models.
PNP	A symbol for a PNP transistor with collector, base, and emitter terminals, suitable for use with 3-terminal PNP models.
PNP_Substrate	A symbol for a PNP transistor with collector, base, emitter, and substrate terminals, suitable for use with 4-terminal PNP models.
SWITCH	A symbol for a voltage-controlled switch. Refer to the ngspice manual [https://ngspice.sourceforge.io/docs/ngspice-html-manual/manual.xhtml#subsec_Switches] for more information on switches.
TLINE	A symbol for a transmission line. By default it is set up as a lossless transmission line but it can also be used for a lossy transmission line. Refer to the ngspice manual [https://ngspice.sourceforge.io/docs/ngspice-html-manual/manual.xhtml#sec_Lossless_Transmission_Lines] for more information on transmission lines.
VAM	A symbol for a SPICE amplitude-modulated independent voltage source. Refer to the ngspice manual [https://ngspice.sourceforge.io/docs/ngspice-html-manual/

	manual.xhtml#sec_Independent_Sources_for] for more information on independent voltage sources.
VDC	A symbol for a SPICE DC independent voltage source. Refer to the ngspice manual [https://ngspice.sourceforge.io/docs/ngspice-html-manual/manual.xhtml#sec_Independent_Sources_for] for more information on independent voltage sources.
VEXP	A symbol for a SPICE exponential independent voltage source. Refer to the ngspice manual [https://ngspice.sourceforge.io/docs/ngspice-html-manual/manual.xhtml#sec_Independent_Sources_for] for more information on independent voltage sources.
VOLTMETER_DIFF	A differential voltmeter symbol that can be used to measure the voltage between two arbitrary nodes. The voltage difference between the + and - pins is output as a ground-referenced voltage on the out pin.
VPULSE	A symbol for a SPICE pulsed independent voltage source. Refer to the ngspice manual [https://ngspice.sourceforge.io/docs/ngspice-html-manual/manual.xhtml#sec_Independent_Sources_for] for more information on independent voltage sources.
VPWL	A symbol for a SPICE piecewise linear independent voltage source. The waveform is specified as space-separated time-voltage pairs. Refer to the ngspice manual [https://ngspice.sourceforge.io/docs/ngspice-html-manual/manual.xhtml#sec_Independent_Sources_for] for more information on independent voltage sources.
VSFFM	A symbol for a SPICE single-frequency frequency-modulated independent voltage source. Refer to the ngspice manual [https://ngspice.sourceforge.io/docs/ngspice-html-manual/manual.xhtml#sec_Independent_Sources_for] for more information on independent voltage sources.
VSIN	A symbol for a SPICE sinusoidal independent voltage source. Refer to the ngspice manual [https://ngspice.sourceforge.io/docs/ngspice-html-manual/manual.xhtml#sec_Independent_Sources_for] for more information on independent voltage sources.
VTRNOISE	A symbol for a SPICE transient noise independent voltage source. Refer to the ngspice manual [https://ngspice.sourceforge.io/docs/ngspice-html-manual/manual.xhtml#sec_Independent_Sources_for] for more information on independent voltage sources.
VTRRANDOM	A symbol for a SPICE transient random independent voltage source. Refer to the ngspice manual [https://ngspice.sourceforge.io/docs/ngspice-html-manual/manual.xhtml#sec_Independent_Sources_for] for more information on independent voltage sources.

Most of these symbols in the `Simulation_SPICE` library use built-in models, but several symbols use external models from the `Simulation_SPICE.sp` simulation model library. The simulation model library is a separate file in the same folder as the symbol library. This simulation model library also contains SPICE models that may be useful for use with other symbols.

The `Simulation_SPICE.sp` simulation model library contains the following models:

Model Name	Description
kicad_builtin_opamp	A generic single-pole operational amplifier model. This model is used by the OPAMP symbol in the Simulation_SPICE symbol library, and the pins are ordered appropriately for use with any standard single-unit opamp symbol. There are parameters for pole frequency, open loop gain, offset voltage, and output resistance. These parameters can be edited in the Parameters grid of the SPICE Model Editor dialog.
kicad_builtin_opamp_dual	A dual version of the kicad_builtin_opamp model, with the same parameters. This model is not assigned to any symbols in the Simulation_SPICE symbol library, but the pins are ordered appropriately for use with standard dual opamp symbols.
kicad_builtin_opamp_quad	A quad version of the kicad_builtin_opamp model, with the same parameters. This model is not assigned to any symbols in the Simulation_SPICE symbol library, but the pins are ordered appropriately for use with standard quad opamp symbols.
kicad_builtin_varistor	A generic varistor model. This model is not assigned to any symbols in the Simulation_SPICE symbol library. There are parameters for threshold voltage, dynamic resistance, and leakage resistance. These parameters can be edited in the Parameters grid of the SPICE Model Editor dialog.
kicad_builtin_vdiff	A differential voltmeter model. The voltage difference between the first two terminals is output as a ground-referenced voltage on the third terminal. This model is used by the VOLTMETER_DIFF symbol in the Simulation_SPICE symbol library.

Capitolo 11. Advanced Topics

11.1. Configuration and Customization

Nota

This section of the KiCad documentation has not yet been written. We appreciate your patience as our small team of volunteer documentation writers work to update and expand the documentation.

11.2. Variabili di testo

KiCad supports text variables, which allow you to substitute the variable name with a defined text string. This substitution happens anywhere the variable name is used inside the variable replacement syntax of `${VARIABLENAME}`.

You can define project text variables in the schematic or board setup dialogs. Project text variables are defined for the whole project, so a project text variable defined in the Schematic Editor can also be used in the Board Editor.

There are also a number of built-in system text variables. System text variables may be available in some contexts and not others. The following system text variables can be used in schematic text, label names, label fields, hierarchical sheet fields, symbol text, symbol fields, and drawing sheet fields. There are also a number of variables that can be used in the PCB Editor.

Variables used in hierarchical sheet fields refer to the properties of the hierarchical sheet, not the parent, unless otherwise noted. For example, `${#}` returns the subsheet's page number when used in a hierarchical sheet field, but the parent sheet's page number when used in graphic text in the parent sheet.

Variables can also be used for field names. A field with a variable as its name will automatically have its value set to the same variable. For example, in a project with a project variable `MY_VAR` set to `MY_VALUE`, a user-created symbol field named `${MY_VAR}` will automatically have its value set to `${MY_VAR}`, which will then resolve to `MY_VALUE`. If the field's **Show Name** property is set, the variable's name will be displayed as the field name, for example `MY_VAR: MY_VALUE`.

Variable name	Description
#	Sheet number.
##	Total number of schematic sheets.
COMMENT1 - COMMENT9	Contents of drawing sheet's Comment<n> field.
COMPANY	Contents of drawing sheet's Company field.
CURRENT_DATE	Today's date, in ISO format.
FILENAME	Filename of the root schematic sheet , with a file extension.
FILEPATH	Full file path of the root schematic sheet , with a file extension.
ISSUE_DATE	Contents of drawing sheet's Issue Date field.

Variable name	Description
KICAD_VERSION	Current version of KiCad. This variable is only available in drawing sheet fields.
PAPER	Current sheet's paper size. This variable is only available in drawing sheet fields.
PROJECTNAME	Project name, without a file extension.
REVISION	Contents of drawing sheet's Revision field.
SHEETFILE	Filename of the current sheet , with a file extension.
SHEETNAME	Sheet name of the current sheet.
SHEETPATH	Sheet path of the current sheet.
TITLE	Contents of drawing sheet's Title field.
<variablename>	Contents of project text variable <variablename>.
<fieldname>	Contents of symbol field, symbol attribute, hierarchical sheet field, or label field <fieldname>. Fields can only be accessed from within their parent object, so symbol fields can be accessed from other text or fields within the symbol, and hierarchical sheet fields can be accessed within the sheet or in other sheet fields of the sheet. Both built-in and user-defined fields are available. Built-in fields use all uppercase letters: for example, to access a symbol's value, use \${VALUE}. Built-in symbol fields are DATASHEET, DESCRIPTION, FOOTPRINT, FOOTPRINT_LIBRARY, FOOTPRINT_NAME, NET_CLASS(<pin_number>), NET_NAME(<pin_number>), OP, PIN_NAME(<pin_number>), REFERENCE, SHORT_NET_NAME(<pin_number>), SHORT_REFERENCE, SYMBOL_DESCRIPTION, SYMBOL_KEYWORDS, SYMBOL_LIBRARY, SYMBOL_NAME, UNIT, VALUE. Built-in symbol attributes are DNP, EXCLUDE_FROM_BOARD, EXCLUDE_FROM_BOM, and EXCLUDE_FROM_SIM. These attributes expand to the friendly name of the attribute if the attribute is set (e.g. Excluded from board for EXCLUDE_FROM_BOARD and DNP for DNP), or to an empty string if the attribute is not set. Built-in sheet fields are SHEETFILE, SHEETNAME, and SHEETPATH. These refer to the child sheet's filename, sheet name, and sheet path, respectively, rather than the parent sheet's. Built-in label fields are CONNECTION_TYPE, NET_CLASS, NET_NAME, OP, SHORT_NET_NAME, and INTERSHEETREFS (global labels only).
<refdes>:<fieldname>	Contents of field or attribute <fieldname> in symbol <refdes>. Both built-in and user-defined fields are available. Built-in fields use all uppercase letters: for example, to access the value of U1, use \${U1:VALUE}. Built-in symbol fields are DATASHEET, DESCRIPTION, FOOTPRINT, FOOTPRINT_LIBRARY, FOOTPRINT_NAME, NET_CLASS(<pin_number>), NET_NAME(<pin_number>), OP, PIN_NAME(<pin_number>), REFERENCE,

Variable name	Description
	SHORT_NET_NAME(<pin_number>), SYMBOL_DESCRIPTION, SYMBOL_KEYWORDS, SYMBOL_LIBRARY, SYMBOL_NAME, UNIT, VALUE. Built-in symbol attributes are DNP, EXCLUDE_FROM_BOARD, EXCLUDE_FROM_BOM, and EXCLUDE_FROM_SIM. These attributes expand to the friendly name of the attribute if the attribute is set (e.g. Excluded from board for EXCLUDE_FROM_BOARD and DNP for DNP), or to an empty string if the attribute is not set.
ERC_ERROR <errorname>	Generates an ERC error named <errorname>. Everything inside the braces resolves to an empty string, while everything after the braces is included in the descriptive text for the ERC violation. The text variable must be at the beginning of the text item. For example, a text item containing <code>\${ERC_ERROR TODO}Calculate resistor value</code> would display as the text "Calculate resistor value" and generate a ERC error named "TODO" with the description "Calculate resistor value".
ERC_WARNING <warningname>	Generates an ERC warning named <warningname>. This behaves the same as ERC_ERROR, except a warning is generated rather than an error.

11.3. Librerie di database

A database library is a type of KiCad symbol library that holds data about parts in an external SQL database. Database libraries do not contain any symbol or footprint definitions by themselves. Instead, they **reference** symbols and footprints found in other KiCad libraries. Each database library entry maps a KiCad symbol (from another library) to a set of properties (fields) and usually a KiCad footprint (from a footprint library).

Using database libraries allows you to create fully-defined parts (sometimes called **atomic parts**) out of KiCad symbols and footprints without needing to store all the part properties in a symbol library. The external database can be linked to third-party tools for managing part data and lifecycles. Database library workflows are generally more complex than the standard KiCad library workflows, and so this type of library is typically only used in situations where it makes managing a large library of fully-defined parts more efficient (such as in organization or team settings).

KiCad does not provide a GUI for editing a SQL database or defining a database library. It is up to the user to find the most appropriate workflow and toolchain for creating and updating the database itself. Some users may want to directly edit the database through a third-party database client, and some may use other third-party software such as a part lifecycle management (PLM) tool to create and edit data.

In a database library, there are one or more **tables** that generally represent a single type of part (such as Resistors or Capacitors). Each table can have an independent schema, meaning that different types of parts can have different properties that are translated into symbol fields in KiCad. Each table must have a unique ID column which is used as the identifier for a symbol placed from that table. This unique ID will typically be a part number (either a manufacturer's part number, or an internal organization part number). Each table must also have a column that contains a mapping to a KiCad symbol, in the form `LibraryNickname:SymbolName`. The `LibraryNickname` must match a symbol library that is present in the KiCad library tables. Tables may also contain a column containing a

KiCad footprint, in the form `LibraryNickname:FootprintName`. If this column is present, symbols placed from the table will include a footprint mapping.

Tables may also contain arbitrary additional columns that may optionally be mapped to symbol fields in KiCad. The KiCad database library configuration file controls how these fields should be named, whether or not to make the fields visible, and whether or not to include the fields in the data displayed in the Symbol Chooser.

11.3.1. Database Library Configuration Files

To create a database library, you must create a configuration file that contains the necessary information for KiCad to connect to your database and retrieve data from tables. Copy the template below into a new file and save it with a `kicad_dbl` extension. You can then add this file to your global symbol library table using the Configure Symbol Libraries dialog.

```
{
  "meta": {
    "version": 0
  },
  "name": "My Database Library",
  "description": "A database of components",
  "source": {
    "type": "odbc",
    "dsn": "",
    "username": "",
    "password": "",
    "timeout_seconds": 2,
    "connection_string": ""
  },
  "libraries": [
    {
      "name": "Resistors",
      "table": "Resistors",
      "key": "Part ID",
      "symbols": "Symbols",
      "footprints": "Footprints",
      "fields": [
        {
          "column": "MPN",
          "name": "MPN",
          "visible_on_add": false,
          "visible_in_chooser": true,
          "show_name": true,
          "inherit_properties": true
        },
        {
          "column": "Value",
          "name": "Value",
          "visible_on_add": true,
          "visible_in_chooser": true,
          "show_name": false
        }
      ]
    },
    {
      "name": "Capacitors",
      "table": "Capacitors",
      "key": "Part ID",
      "symbols": "Symbols",
      "footprints": "Footprints",
      "fields": [
        {
          "column": "MPN",
          "name": "MPN",
          "visible_on_add": false,
          "visible_in_chooser": true,
          "show_name": true,
          "inherit_properties": true
        },
        {
          "column": "Value",
          "name": "Value",
          "visible_on_add": true,
          "visible_in_chooser": true,
          "show_name": false
        }
      ]
    }
  ],
  "properties": {
    "description": "Description",
    "footprint_filters": "Footprint Filters",
    "keywords": "Keywords",
    "manufacturer": "Manufacturer",
    "part": "Part",
    "value": "Value"
  }
}
```

```
        "exclude_from_bom": "No BOM",  
        "exclude_from_board": "Schematic Only"  
    }  
}  
]  
}
```

Nota

Database library files are in JSON format. Standard JSON syntax rules apply. To check if your file contains syntax errors, you may use a JSON validator or linter (available online).

Configuring the source

KiCad currently only supports ODBC connections to SQL databases. You can either connect with a DSN or a connection string. If a DSN name is supplied, the optional username and password fields will be used to connect to the DSN. If a connection string is supplied, the dsn, username, and password fields are ignored. The connection string will be passed directly to the ODBC driver, so you can include any parameters your ODBC driver supports.

When using a DSN connection, leave the `connection_string` property blank or omit it from the file. When using a connection string, leave the `dsn`, `username`, and `password` fields blank or omit them from the file. Connection strings must start with a `Driver` key indicating to the ODBC manager which driver should be used, and may include other keys that depend on the specific driver. Check the documentation for your ODBC driver for details. You may also find a reference site like [connectionstrings.com](https://www.connectionstrings.com/) [https://www.connectionstrings.com/] useful when configuring a database connection.

KiCad does not recommend or endorse any particular ODBC driver or database server, but has been tested to work with SQLite, MySQL, MariaDB, and PostgreSQL.

Nota

Windows users: the backslash character (`\\`) must be escaped with a second backslash when included in a JSON quoted string. If including a file path in your connection string, make sure to use double backslashes (`\\`).

Nota

Flatpak users: You need to install the corresponding ODBC drivers as Flatpak extensions. You can do this via the "Add-ons" section for KiCad in your software manager (i.e. GNOME Software), or via the command line: Run `flatpak install org.kicad.KiCad.ODBCDriver.sqliteodbc` for SQLite, `flatpak install org.kicad.KiCad.ODBCDriver.mariadb-connector-odbc` for MariaDB or MySQL, or `flatpak install org.kicad.KiCad.ODBCDriver.psycopg2` for PostgreSQL.

Nota

Flatpak users: Due to Flatpak sandboxing, a possible way to connect to database servers running on your local machine is via TCP/IP. Make sure that your database server allows TCP/IP connections, then add the required `Port` parameter to your connection string. For example, add `Port=3306`; for the default TCP port of MySQL/MariaDB, or `Server=localhost;Port=5432`; to force PostgreSQL to use a TCP connection to the

local server. Using the default UNIX domain socket connections for MySQL, MariaDB, or PostgreSQL is only possible when overriding host file system permissions via `flatpak override`.

Configurazione librerie

Each database library can contain "sub-libraries" mapped to a single database table. The `libraries` entry in the configuration file contains a list of objects that each define a single library. The following settings must exist for each library:

name: The name of the sub-library (table) that will be shown in the KiCad UI and included as a prefix in each symbol name placed from this sub-library. This name can include any valid characters for a symbol name except for a forward slash (/) because the slash character is used as a separator between the sub-library name and the symbol name. If this field is left blank, no prefix will be added to symbols in this sub-library.

table: The name of the table in the database.

key: The column name containing a unique key that will be used to identify parts from the table.

symbols: The column name containing KiCad symbol references.

footprints: The column name containing KiCad footprint references.

fields: A list of field definitions. Each field defined here will be added to the symbol when it is placed on the schematic. If a field with a matching name is already defined in the source symbol, the value from the database table will override whatever value was defined in the source symbol. Each field definition may contain:

column: The name of the database table column that should be mapped to a field.

name: The name of the KiCad field to populate from the database.

visible_on_add: If `true`, this field will be visible in the schematic when a symbol is added. If this setting is not specified, it will default to `false`.

visible_in_chooser: If `true`, this field will be shown in the Symbol Chooser as a column. If this setting is not specified, it will default to `false`.

show_name: If `true`, the field's name will be shown in addition to its value in the schematic. If this setting is not specified, it will default to `false`.

inherit_properties: If `true`, and a field with the given name already exists on the source symbol, only the field contents will be updated from the database, and the other properties (`visible_on_add`, `show_name`, etc) will be kept as they were set in the source symbol. If the given field name does not exist in the source symbol, this setting is ignored. If this setting is not specified, it will default to `false`.

properties: A map of symbol properties to database columns. All properties are optional; any that are not specified in the database library configuration will be inherited from the values set for the source symbol. The following properties are supported:

description: The symbol's Description property.

`footprint_filters`: Reserved for future expansion.

`keywords`: The symbol's Keywords property.

`exclude_from_bom`: The symbol's "Exclude from Bill of Materials" setting. The column named here must be a numeric type, and will be taken as a boolean (0 for false, 1 for true).

`exclude_from_board`: The symbol's "Exclude from PCB" setting. The column named here must be a numeric type, and will be taken as a boolean (0 for false, 1 for true).

`exclude_from_sim`: The symbol's "Exclude from simulation" setting. The column named here must be a numeric type, and will be taken as a boolean (0 for false, 1 for true).

Database columns may be mapped to custom (user-defined) fields, or to certain built-in KiCad fields, including `Value` and `Datasheet`.

Nota

KiCad only supports text (string) fields. If you map a database column containing a numeric SQL data type, it will be converted to a string using a general-purpose conversion algorithm that will switch to scientific notation for very large or very small numbers. This format conversion cannot be fine-tuned by the user, so if explicit control over number-to-string conversion is needed, a new column or view should be used to do the conversion in the database.

11.3.2. Using database libraries

After creating your configuration file and adding it to your symbol library table, you can place parts from the database tables using the Symbol Chooser. Parts placed from a database library can be updated using the Update Symbols from Library function, which will update any fields that were changed in the database as well as updating the underlying symbol if it was changed in the source library.

Note that any source library referenced by a database table must also be present in the symbol library table for the database library to function. If you want to use a library only as a source of symbols for a database library, you can hide it from the Symbol Chooser by clearing the "Visible" checkbox in the Manage Symbol Libraries dialog.

11.4. HTTP Libraries

HTTP libraries are a type of KiCad symbol library that sources data about parts for an external source such as an ERP system. They do not contain any symbol or footprint definitions as standard KiCad libraries do. Instead, they **reference** symbols and footprints found in other KiCad libraries.

HTTP libraries are read only and support REST or REST-like APIs.

11.4.1. HTTP Library Configuration Files

To create an HTTP library, you must create a configuration file that contains the necessary information for KiCad to connect to the providing library (API) and to retrieve data from it.

Copy the template below into a new file and save it using the `.kicad_httpplib` file extension. You should then edit this file and replace `root_url` and token values with your own. Once saved, add this file to your global symbol library table using the Configure Symbol Libraries dialog which can be found under **Preferences#Manage Symbol Libraries....**

Users have the option to configure two timeout settings. The `timeout_parts_seconds` setting dictates the validity duration of a part's information, while the `timeout_categories_seconds` setting determines how long categories remain valid. The default values are set to 60 seconds and 600 seconds respectively, but if the data for either setting is anticipated to remain unchanged, users can opt for higher values. This will significantly speed up the opening of the symbol chooser. It's important to note that KiCad will re-cache the data on the initial startup regardless of these timeout settings.

```
``` { "meta": { "version": 1.0 }, "name": "KiCad HTTP Library", "description": "A KiCad library sourced from a REST API", "source": { "type": "REST_API", "api_version": "v1", "root_url": "http://localhost:8000/kicad-api", "token": "usertokendatastring", "timeout_parts_seconds": 60, "timeout_categories_seconds": 600 } } ```
```

## 11.4.2. Authentication

Authentication is done via an **Access Token** only. Users need to ask their administrators to get a valid token issued if the HTTP library is maintained externally.

## 11.4.3. Caching Behaviour for Categories

KiCad caches all available Categories once when opening the Symbol Chooser Dialog. Subsequently, any alterations made to the categories on the server side will remain undetected by KiCad until the user performs a program restart. This implementation is intentionally designed to conserve bandwidth resources, as it prevents KiCad from attempting to retrieve data from the API every time the user opens the Symbol Chooser Dialog. Such continuous data fetching, especially under constrained bandwidth conditions, would severely impede KiCad's performance.

## 11.4.4. Server Response Codes

If KiCad receives an API error, it will display an error message to the user. For more information about API errors and server responses, see the APIs and Bindings section at [dev-docs.kicad.org](https://dev-docs.kicad.org).

# 11.5. Custom Netlist and BOM Formats


KiCad can output netlists and BOMs in various formats, and users can define new formats if desired.

The process of exporting a netlist is described in the netlist export section. BOM output is described in the BOM export section.

The following section describes how to create an exporter for a new output format.

## 11.5.1. Adding new netlist generators

New netlist generators are added to the **Export Netlist** dialog by clicking the **Add Generator...** button.

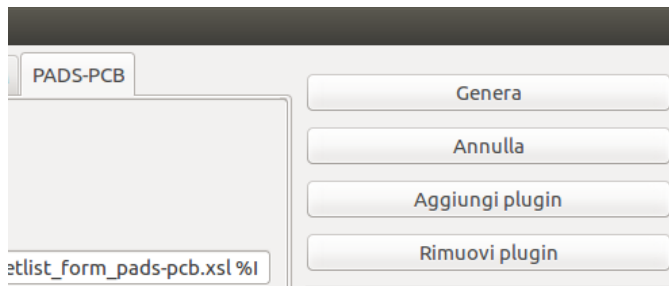

New generators require a name and a command. The name is shown in the tab label, and the command is run whenever the **Export Netlist** button is clicked.


When the netlist is generated, KiCad creates an intermediate XML file which contains all of the netlist information from the schematic. The generator command is then run in order to transform the intermediate netlist into the desired netlist format.

The netlist command must be set up properly so that the netlist generator script takes the intermediate netlist file as input and outputs the desired netlist file. The exact netlist command will depend on the generator script used. The command format is described below.

Python and XSLT are commonly used tools to create custom netlist generators.

## 11.5.2. Adding a new BOM generator

KiCad also uses the intermediate netlist file to generate BOMs with the Generate BOM tool.

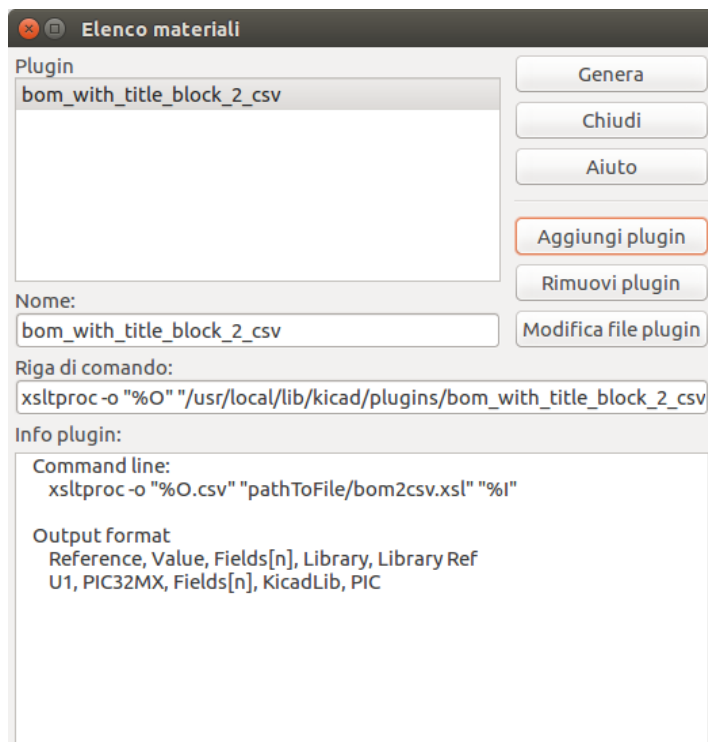

Additional scripts can be added to the list of BOM generator scripts by clicking the  button. Scripts can be removed by clicking the  button. The  button opens the selected script in a text editor.

Generator scripts written in Python and XSLT can contain a header comment that describes the generator's functionality and usage. This header comment is displayed in the BOM dialog as the description for each generator. The header comment must contain the string @package. Everything following that string until the end of the comment is used as the description for the generator.

KiCad automatically fills the command line field when a new generator script is added, but the command line might need to be adjusted by hand depending on the generator script. KiCad attempts to automatically determine the output file extension from the example command line in the generator script's header.

### 11.5.3. Generator command line format

The command line for a netlist or BOM exporter defines the command that KiCad will run to generate the selected output file.

For a netlist exporter using xsltproc, an example is:

```
xsltproc -o %0.net /usr/share/kicad/plugins/netlist_form_pads-pcb.asc.xsl %I
```

For a BOM exporter using Python, an example is:

```
/usr/bin/python3 /usr/share/kicad/plugins/bom_csv_grouped_by_value.py "%I"
"%0.csv"
```

#### Nota

It is recommended to surround arguments in the command line with quotes (") in case they contain spaces or other special characters.

Some character sequences like %I and %0 have a special meaning in the command line, because KiCad replaces them with a filename or path before executing the command.

Parameter	Replaced with...	Description
%I	<project path>/<project name>.xml	Absolute path and filename of the intermediate netlist file, which is the input to the BOM or netlist generator plugin
%O	<project path>/<project name>	Absolute path and filename of the output BOM or netlist file (without file extension). An appropriate file extension may need to be specified after the %O sequence.
%B	<project name>	Base filename of the output BOM or netlist file (without path or file extension). An appropriate file extension may need to be specified after the %B sequence.
%P	<project path>	Absolute path of the project directory, without trailing slash.

### 11.5.4. File di netlist intermedio

When exporting BOM files and netlists, KiCad creates an intermediate netlist file and then runs a separate tool which post-processes the intermediate netlist into the desired netlist or BOM format.

The intermediate netlist uses XML syntax. It contains a large amount of data about the design. Depending on the output (BOM or netlist), different subsets of the complete intermediate netlist file will be included in the final output file.

The structure of the intermediate netlist file is described in detail below.

Because the conversion from intermediate netlist file to output netlist or BOM is a text-to-text transformation, the post-processing filter can be written using Python, XSLT, or any other tool capable of taking XML as input.

### Nota

XSLT is not recommended for new netlist or BOM exporters; Python or another tool should be used instead. Beginning with KiCad 7, `xsltproc` is no longer installed with KiCad, although it can be installed separately. Nevertheless, several examples of netlist exporters using XSLT are included below.

## 11.5.5. Struttura etlist intermedia

Questo campione dà un'idea del formato del file netlist.

```
<?xml version="1.0" encoding="utf-8"?>
<export version="D">
 <design>
 <source>F:\kicad_aux\netlist_test\netlist_test.sch</source>
 <date>29/08/2010 21:07:51</date>
 <tool>eeschema (2010-08-28 BZR 2458)-unstable</tool>
 </design>
 <components>
 <comp ref="P1">
 <value>CONN_4</value>
 <libsource lib="conn" part="CONN_4"/>
 <sheetpath names="/" tstamps="/" />
 <tstamps>4C6E2141</tstamps>
 </comp>
 <comp ref="U2">
 <value>74LS74</value>
 <libsource lib="74xx" part="74LS74"/>
 <sheetpath names="/" tstamps="/" />
 <tstamps>4C6E20BA</tstamps>
 </comp>
 <comp ref="U1">
 <value>74LS04</value>
 <libsource lib="74xx" part="74LS04"/>
 <sheetpath names="/" tstamps="/" />
 <tstamps>4C6E20A6</tstamps>
 </comp>
 <comp ref="C1">
 <value>CP</value>
 <libsource lib="device" part="CP"/>
 <sheetpath names="/" tstamps="/" />
 <tstamps>4C6E2094</tstamps>
 </comp>
 <comp ref="R1">
 <value>R</value>
 <libsource lib="device" part="R"/>
```

```

 <sheetpath names="/" tstamp="/" />
 <tstamp>4C6E208A</tstamp>
 </comp>
</components>
<libparts/>
<libraries/>
<nets>
 <net code="1" name="GND">
 <node ref="U1" pin="7" />
 <node ref="C1" pin="2" />
 <node ref="U2" pin="7" />
 <node ref="P1" pin="4" />
 </net>
 <net code="2" name="VCC">
 <node ref="R1" pin="1" />
 <node ref="U1" pin="14" />
 <node ref="U2" pin="4" />
 <node ref="U2" pin="1" />
 <node ref="U2" pin="14" />
 <node ref="P1" pin="1" />
 </net>
 <net code="3" name="">
 <node ref="U2" pin="6" />
 </net>
 <net code="4" name="">
 <node ref="U1" pin="2" />
 <node ref="U2" pin="3" />
 </net>
 <net code="5" name="/SIG_OUT">
 <node ref="P1" pin="2" />
 <node ref="U2" pin="5" />
 <node ref="U2" pin="2" />
 </net>
 <net code="6" name="/CLOCK_IN">
 <node ref="R1" pin="2" />
 <node ref="C1" pin="1" />
 <node ref="U1" pin="1" />
 <node ref="P1" pin="3" />
 </net>
</nets>
</export>

```

## Struttura generale del file netlist

La netlist intermedia consta di cinque sezioni.

- La sezione intestazione.
- La sezione componenti.
- La sezione librerie di parti.
- La sezione librerie.
- La sezione collegamenti.

The file content has the delimiter <export>

```
<export version="D">
...
</export>
```

## Sezione intestazione

The header has the delimiter <design>

```
<design>
<source>F:\kicad_aux\netlist_test\netlist_test.sch</source>
<date>21/08/2010 08:12:08</date>
<tool>eeschema (2010-08-09 BZR 2439)-unstable</tool>
</design>
```

Questa sezione può essere considerata una sezione di commento.

## La sezione componenti

The component section has the delimiter <components>

```
<components>
<comp ref="P1">
<value>CONN_4</value>
<libsource lib="conn" part="CONN_4"/>
<sheetpath names="/" tstamps="/">
<tstamps>4C6E2141</tstamps>
</comp>
</components>
```

Questa sezione contiene l'elenco dei componente nello schema. Ogni componente viene descritto in questo modo:

```
<comp ref="P1">
<value>CONN_4</value>
<libsource lib="conn" part="CONN_4"/>
<sheetpath names="/" tstamps="/">
<tstamps>4C6E2141</tstamps>
</comp>
```

Element name	Element description
libsource	name of the lib where this component was found.
part	component name inside this library.
sheetpath	path of the sheet inside the hierarchy: identify the sheet within the full schematic hierarchy.
tstamps	timestamp of the component.

===== Note about time stamps for components

To identify a component in a netlist and therefore on a board, the timestamp reference is used as unique for each component. However KiCad provides an auxiliary way to identify a component which is the corresponding footprint on the board. This allows the re-annotation of components in a schematic project and does not lose the link between the component and its footprint.

Un marcatore temporale è un identificatore univoco per ogni componente o foglio in un progetto di schema elettrico. Ma in caso di gerarchie complesse, lo stesso foglio viene usato più di una volta, perciò il foglio contiene componenti aventi la stessa marcatura temporale.

A given sheet inside a complex hierarchy has an unique identifier: its sheetpath. A given component (inside a complex hierarchy) has a unique identifier: the sheetpath and its timestamp.

## La sezione libparts

The libparts section has the delimiter `<libparts>`, and the content of this section is defined in the schematic libraries.

```
<libparts>
<libpart lib="device" part="CP">
 <description>Condensateur polarise</description>
 <footprints>
 <fp>CP*</fp>
 <fp>SM*</fp>
 </footprints>
 <fields>
 <field name="Reference">C</field>
 <field name="Valeur">CP</field>
 </fields>
 <pins>
 <pin num="1" name="1" type="passive"/>
 <pin num="2" name="2" type="passive"/>
 </pins>
</libpart>
</libparts>
```

Element name	Element description
<code>&lt;footprints&gt;</code>	The symbol's footprint filters. Each footprint filter is in a separate <code>&lt;fp&gt;</code> tag.
<code>&lt;fields&gt;</code>	The symbol's fields. Each field's name and value is given in a separate <code>&lt;field name="fieldname"&gt;...&lt;/field&gt;</code> tag.
<code>&lt;pins&gt;</code>	The symbol's pins. Each pin is given in a separate <code>&lt;pin num="pinnum" type="pintype"/&gt;</code> tag. Possible pintypes are described below.

Possible electrical pin types are:

Pintype	Description
Input	Usual input pin
Output	Usual output
Bidirectional	Input or Output
Tri-state	Bus input/output
Passive	Usual ends of passive components
Unspecified	Unknown electrical type

Power input	Power input of a component
Power output	Power output like a regulator output
Open collector	Open collector often found in analog comparators
Open emitter	Open emitter sometimes found in logic
Not connected	Must be left open in schematic

## La sezione librerie

The libraries section has the delimiter `<libraries>`. This section contains the list of schematic libraries used in the project.

```
<libraries>
 <library logical="device">
 <uri>F:\kicad\share\library\device.lib</uri>
 </library>
 <library logical="conn">
 <uri>F:\kicad\share\library\conn.lib</uri>
 </library>
</libraries>
```

## La sezione collegamenti

The nets section has the delimiter `<nets>`. This section describes the connectivity of the schematic by listing all nets and the pins connected to each net.

```
<nets>
 <net code="1" name="GND">
 <node ref="U1" pin="7"/>
 <node ref="C1" pin="2"/>
 <node ref="U2" pin="7"/>
 <node ref="P1" pin="4"/>
 </net>
 <net code="2" name="VCC">
 <node ref="R1" pin="1"/>
 <node ref="U1" pin="14"/>
 <node ref="U2" pin="4"/>
 <node ref="U2" pin="1"/>
 <node ref="U2" pin="14"/>
 <node ref="P1" pin="1"/>
 </net>
</nets>
```

Un tipico collegamento contiene i seguenti elementi.

```
<net code="1" name="GND">
 <node ref="U1" pin="7"/>
 <node ref="C1" pin="2"/>
 <node ref="U2" pin="7"/>
 <node ref="P1" pin="4"/>
</net>
```

Element name	Element Description
net code	an internal identifier for this net

name	the net name
node	the pin (identified by pin) of a symbol (identified by ref) which is connected to the net

## 11.5.6. Example netlist exporters

Some example netlist exporters using XSLT are included below.

XSLT itself is an XML language very suitable for XML transformations. The `xsltproc` program [<http://xmlsoft.org/XSLT/xsltproc.html>] can be used to read the Intermediate XML netlist input file, apply a style-sheet to transform the input, and save the results in an output file. Use of `xsltproc` requires a style-sheet file using XSLT conventions. The full conversion process is handled by KiCad, after it is configured once to run `xsltproc` in a specific way.

The document that describes XSL Transformations (XSLT) is available here: <http://www.w3.org/TR/xslt>

### Nota

When writing a new netlist exporter, consider using Python or another tool rather than XSLT.

## PADS netlist example using XSLT

The following example shows how to create an exporter for the PADS netlist format using `xsltproc`.

The PADS netlist format is comprised of two sections:

- A list of footprints
- A list of nets, together with the pads connected to each net.

Below is an XSL style-sheet which converts the intermediate netlist file to the PADS netlist format.

```
<?xml version="1.0" encoding="ISO-8859-1"?>
<!--XSL style sheet to Eeschema Generic Netlist Format to PADS netlist format
 Copyright (C) 2010, SoftPLC Corporation.
 GPL v2.

 How to use:
 https://lists.launchpad.net/kicad-developers/msg05157.html
-->

<!DOCTYPE xsl:stylesheet [
 <!ENTITY nl "
"> <!--new line CR, LF -->
]>

<xsl:stylesheet version="1.0" xmlns:xsl="http://www.w3.org/1999/XSL/Transform">
<xsl:output method="text" omit-xml-declaration="yes" indent="no"/>

<xsl:template match="/export">
 <xsl:text>*PADS-PCB*&nl;*PART*&nl;</xsl:text>
 <xsl:apply-templates select="components/comp"/>
 <xsl:text>&nl;*NET*&nl;</xsl:text>
```

```

 <xsl:apply-templates select="nets/net"/>
 <xsl:text>*END*&nl;</xsl:text>
</xsl:template>

<!-- for each component -->
<xsl:template match="comp">
 <xsl:text> </xsl:text>
 <xsl:value-of select="@ref"/>
 <xsl:text> </xsl:text>
 <xsl:choose>
 <xsl:when test = "footprint != ' ' ">
 <xsl:apply-templates select="footprint"/>
 </xsl:when>
 <xsl:otherwise>
 <xsl:text>unknown</xsl:text>
 </xsl:otherwise>
 </xsl:choose>
 <xsl:text>&nl;</xsl:text>
</xsl:template>

<!-- for each net -->
<xsl:template match="net">
 <!-- nets are output only if there is more than one pin in net -->
 <xsl:if test="count(node)>1">
 <xsl:text>*SIGNAL* </xsl:text>
 <xsl:choose>
 <xsl:when test = "@name != ' ' ">
 <xsl:value-of select="@name"/>
 </xsl:when>
 <xsl:otherwise>
 <xsl:text>N-</xsl:text>
 <xsl:value-of select="@code"/>
 </xsl:otherwise>
 </xsl:choose>
 <xsl:text>&nl;</xsl:text>
 <xsl:apply-templates select="node"/>
 </xsl:if>
</xsl:template>

<!-- for each node -->
<xsl:template match="node">
 <xsl:text> </xsl:text>
 <xsl:value-of select="@ref"/>
 <xsl:text>.</xsl:text>
 <xsl:value-of select="@pin"/>
 <xsl:text>&nl;</xsl:text>
</xsl:template>

</xsl:stylesheet>

```

And here is the PADS netlist output file after running xsltproc:

```

PADS-PCB
PART
P1 unknown
U2 unknown
U1 unknown
C1 unknown
R1 unknown

```

```

NET
SIGNAL GND
U1.7
C1.2
U2.7
P1.4
SIGNAL VCC
R1.1
U1.14
U2.4
U2.1
U2.14
P1.1
SIGNAL N-4
U1.2
U2.3
SIGNAL /SIG_OUT
P1.2
U2.5
U2.2
SIGNAL /CLOCK_IN
R1.2
C1.1
U1.1
P1.3

END

```

La riga di comando per effettuare questa conversione è:

```

kicad\\bin\\xsltproc.exe -o test.net kicad\\bin\\plugins\\netlist_form_pads-
pcb.xsl test.tmp

```

## Cadstar netlist example using XSLT

The following example shows how to create an exporter for the Cadstar netlist format using `xlstproc`.

The Cadstar format is comprised of two sections:

- The footprint list
- The Nets list: grouping pads references by nets

Below is an XSL style-sheet which converts the intermediate netlist file to the Cadstar netlist format.

```

<?xml version="1.0" encoding="ISO-8859-1"?>
<!--XSL style sheet to Eeschema Generic Netlist Format to CADSTAR netlist format
 Copyright (C) 2010, Jean-Pierre Charras.
 Copyright (C) 2010, SoftPLC Corporation.
 GPL v2. -->

<!DOCTYPE xsl:stylesheet [
 <!ENTITY nl "
"> <!--new line CR, LF -->
]>

<xsl:stylesheet version="1.0" xmlns:xsl="http://www.w3.org/1999/XSL/Transform">
<xsl:output method="text" omit-xml-declaration="yes" indent="no"/>

```

```

<!-- Netlist header -->
<xsl:template match="/export">
 <xsl:text>.HEA&nl;</xsl:text>
 <xsl:apply-templates select="design/date"/> <!-- Generate line .TIM <time> -->
 <xsl:apply-templates select="design/tool"/> <!-- Generate line .APP <eeschema version> -->
 <xsl:apply-templates select="components/comp"/> <!-- Generate list of components -->
 <xsl:text>&nl;&nl;</xsl:text>
 <xsl:apply-templates select="nets/net"/> <!-- Generate list of nets and components -->
 <xsl:text>&nl;.END&nl;</xsl:text>
</xsl:template>

 <!-- Generate line .TIM 20/08/2010 10:45:33 -->
<xsl:template match="tool">
 <xsl:text>.APP "</xsl:text>
 <xsl:apply-templates/>
 <xsl:text>"&nl;</xsl:text>
</xsl:template>

 <!-- Generate line .APP "eeschema (2010-08-17 BZR 2450)-unstable" -->
<xsl:template match="date">
 <xsl:text>.TIM </xsl:text>
 <xsl:apply-templates/>
 <xsl:text>&nl;</xsl:text>
</xsl:template>

<!-- for each component -->
<xsl:template match="comp">
 <xsl:text>.ADD_COM </xsl:text>
 <xsl:value-of select="@ref"/>
 <xsl:text> </xsl:text>
 <xsl:choose>
 <xsl:when test = "value != '' ">
 <xsl:text>"</xsl:text> <xsl:apply-templates select="value"/> <xsl:text>"</xsl:text>
 </xsl:when>
 <xsl:otherwise>
 <xsl:text>"</xsl:text>
 </xsl:otherwise>
 </xsl:choose>
 <xsl:text>&nl;</xsl:text>
</xsl:template>

<!-- for each net -->
<xsl:template match="net">
 <!-- nets are output only if there is more than one pin in net -->
 <xsl:if test="count(node)>1">
 <xsl:variable name="netname">
 <xsl:text>"</xsl:text>
 <xsl:choose>
 <xsl:when test = "@name != '' ">
 <xsl:value-of select="@name"/>
 </xsl:when>
 <xsl:otherwise>
 <xsl:text>N-</xsl:text>
 <xsl:value-of select="@code"/>
 </xsl:otherwise>
 </xsl:choose>
 <xsl:text>"&nl;</xsl:text>
 </xsl:variable>
 <xsl:apply-templates select="node" mode="first"/>
 </xsl:if>
</xsl:template>

```

```

 <xsl:value-of select="$netname"/>
 <xsl:apply-templates select="node" mode="others"/>
 </xsl:if>
</xsl:template>

<!-- for each node -->
<xsl:template match="node" mode="first">
 <xsl:if test="position()=1">
 <xsl:text>.ADD_TER </xsl:text>
 <xsl:value-of select="@ref"/>
 <xsl:text>.</xsl:text>
 <xsl:value-of select="@pin"/>
 <xsl:text> </xsl:text>
 </xsl:if>
</xsl:template>

<xsl:template match="node" mode="others">
 <xsl:choose>
 <xsl:when test='position()=1'>
 </xsl:when>
 <xsl:when test='position()=2'>
 <xsl:text>.TER </xsl:text>
 </xsl:when>
 <xsl:otherwise>
 <xsl:text> </xsl:text>
 </xsl:otherwise>
 </xsl:choose>
 <xsl:if test="position()>1">
 <xsl:value-of select="@ref"/>
 <xsl:text>.</xsl:text>
 <xsl:value-of select="@pin"/>
 <xsl:text>&nl;</xsl:text>
 </xsl:if>
</xsl:template>

</xsl:stylesheet>

```

Ecco il file Cadstar in uscita.

```

.HEA
.TIM 21/08/2010 08:12:08
.APP "eeschema (2010-08-09 BZR 2439)-unstable"
.ADD_COM P1 "CONN_4"
.ADD_COM U2 "74LS74"
.ADD_COM U1 "74LS04"
.ADD_COM C1 "CP"
.ADD_COM R1 "R"

.ADD_TER U1.7 "GND"
.TER C1.2
 U2.7
 P1.4
.ADD_TER R1.1 "VCC"
.TER U1.14
 U2.4
 U2.1
 U2.14
 P1.1

```

```
.ADD_TER U1.2 "N-4"
.TER U2.3
.ADD_TER P1.2 "/SIG_OUT"
.TER U2.5
 U2.2
.ADD_TER R1.2 "/CLOCK_IN"
.TER C1.1
 U1.1
 P1.3

.END
```

## OrcadPCB2 netlist example using XSLT

This format has only one section which is the footprint list. Each footprint includes a list of its pads with reference to a net.

Below is an XSL style-sheet which converts the intermediate netlist file to the Orcad netlist format.

```
<?xml version="1.0" encoding="ISO-8859-1"?>
<!--XSL style sheet to Eeschema Generic Netlist Format to CADSTAR netlist format
 Copyright (C) 2010, SoftPLC Corporation.
 GPL v2.

 How to use:
 https://lists.launchpad.net/kicad-developers/msg05157.html
-->

<!DOCTYPE xsl:stylesheet [
 <!ENTITY nl "
"> <!--new line CR, LF -->
]>

<xsl:stylesheet version="1.0" xmlns:xsl="http://www.w3.org/1999/XSL/Transform">
<xsl:output method="text" omit-xml-declaration="yes" indent="no"/>

<!--
 Netlist header
 Creates the entire netlist
 (can be seen as equivalent to main function in C
-->
<xsl:template match="/export">
 <xsl:text>({ Eeschema Netlist Version 1.1 </xsl:text>
 <!-- Generate line .TIM <time> -->
<xsl:apply-templates select="design/date"/>
<!-- Generate line eeschema version ... -->
<xsl:apply-templates select="design/tool"/>
<xsl:text>}
</xsl:text>

<!-- Generate the list of components -->
<xsl:apply-templates select="components/comp"/> <!-- Generate list of components -->

<!-- end of file -->
<xsl:text>)
*
</xsl:text>
</xsl:template>

<!--
 Generate id in header like "eeschema (2010-08-17 BZR 2450)-unstable"
-->
<xsl:template match="tool">
```

```

 <xsl:apply-templates/>
</xsl:template>

<!--
 Generate date in header like "20/08/2010 10:45:33"
-->
<xsl:template match="date">
 <xsl:apply-templates/>
 <xsl:text>&nl;</xsl:text>
</xsl:template>

<!--
 This template read each component
 (path = /export/components/comp)
 creates lines:
 (3EBF7DBD $noname U1 74LS125
 ... pin list ...
)
 and calls "create_pin_list" template to build the pin list
-->
<xsl:template match="comp">
 <xsl:text> (</xsl:text>
 <xsl:choose>
 <xsl:when test = "tstamp != '' ">
 <xsl:apply-templates select="tstamp"/>
 </xsl:when>
 <xsl:otherwise>
 <xsl:text>00000000</xsl:text>
 </xsl:otherwise>
 </xsl:choose>
 <xsl:text> </xsl:text>
 <xsl:choose>
 <xsl:when test = "footprint != '' ">
 <xsl:apply-templates select="footprint"/>
 </xsl:when>
 <xsl:otherwise>
 <xsl:text>$noname</xsl:text>
 </xsl:otherwise>
 </xsl:choose>
 <xsl:text> </xsl:text>
 <xsl:value-of select="@ref"/>
 <xsl:text> </xsl:text>
 <xsl:choose>
 <xsl:when test = "value != '' ">
 <xsl:apply-templates select="value"/>
 </xsl:when>
 <xsl:otherwise>
 <xsl:text>"~"</xsl:text>
 </xsl:otherwise>
 </xsl:choose>
 <xsl:text>&nl;</xsl:text>
 <xsl:call-template name="Search_pin_list" >
 <xsl:with-param name="cmplib_id" select="libsource/@part"/>
 <xsl:with-param name="cmp_ref" select="@ref"/>
 </xsl:call-template>
 <xsl:text>)&nl;</xsl:text>
</xsl:template>

<!--

```

```

This template search for a given lib component description in list
lib component descriptions are in /export/libparts,
and each description start at ./libpart
We search here for the list of pins of the given component
This template has 2 parameters:
 "cmplib_id" (reference in libparts)
 "cmp_ref" (schematic reference of the given component)
-->
<xsl:template name="Search_pin_list" >
 <xsl:param name="cmplib_id" select="0" />
 <xsl:param name="cmp_ref" select="0" />
 <xsl:for-each select="/export/libparts/libpart">
 <xsl:if test = "@part = $cmplib_id">
 <xsl:apply-templates name="build_pin_list" select="pins/pin">
 <xsl:with-param name="cmp_ref" select="$cmp_ref"/>
 </xsl:apply-templates>
 </xsl:if>
 </xsl:for-each>
</xsl:template>

<!--
 This template writes the pin list of a component
 from the pin list of the library description
 The pin list from library description is something like
 <pins>
 <pin num="1" type="passive"/>
 <pin num="2" type="passive"/>
 </pins>
 Output pin list is (<pin num> <net name>)
 something like
 (1 VCC)
 (2 GND)
-->
<xsl:template name="build_pin_list" match="pin">
 <xsl:param name="cmp_ref" select="0" />

 <!-- write pin numner and separator -->
 <xsl:text> (</xsl:text>
 <xsl:value-of select="@num"/>
 <xsl:text> </xsl:text>

 <!-- search net name in nets section and write it: -->
 <xsl:variable name="pinNum" select="@num" />
 <xsl:for-each select="/export/nets/net">
 <!-- net name is output only if there is more than one pin in net
 else use "?" as net name, so count items in this net
 -->
 <xsl:variable name="pinCnt" select="count(node)" />
 <xsl:apply-templates name="Search_pin_netname" select="node">
 <xsl:with-param name="cmp_ref" select="$cmp_ref"/>
 <xsl:with-param name="pin_cnt_in_net" select="$pinCnt"/>
 <xsl:with-param name="pin_num"> <xsl:value-of select="$pinNum"/>
 </xsl:with-param>
 </xsl:apply-templates>
 </xsl:for-each>

 <!-- close line -->
 <xsl:text>)&nl;</xsl:text>

```

```

</xsl:template>

<!--
 This template writes the pin netname of a given pin of a given component
 from the nets list
 The nets list description is something like
 <nets>
 <net code="1" name="GND">
 <node ref="J1" pin="20"/>
 <node ref="C2" pin="2"/>
 </net>
 <net code="2" name="">
 <node ref="U2" pin="11"/>
 </net>
 </nets>
 This template has 2 parameters:
 "cmp_ref" (schematic reference of the given component)
 "pin_num" (pin number)
-->

<xsl:template name="Search_pin_netname" match="node">
 <xsl:param name="cmp_ref" select="0" />
 <xsl:param name="pin_num" select="0" />
 <xsl:param name="pin_cnt_in_net" select="0" />

 <xsl:if test = "@ref = $cmp_ref">
 <xsl:if test = "@pin = $pin_num">
 <!-- net name is output only if there is more than one pin in net
 else use "?" as net name
 -->
 <xsl:if test = "$pin_cnt_in_net>1">
 <xsl:choose>
 <!-- if a net has a name, use it,
 else build a name from its net code
 -->
 <xsl:when test = "../@name != ''">
 <xsl:value-of select="../@name"/>
 </xsl:when>
 <xsl:otherwise>
 <xsl:text>$N-0</xsl:text><xsl:value-of select="../@code"/>
 </xsl:otherwise>
 </xsl:choose>
 </xsl:if>
 <xsl:if test = "$pin_cnt_in_net < 2">
 <xsl:text>?</xsl:text>
 </xsl:if>
 </xsl:if>
 </xsl:if>
</xsl:template>

</xsl:stylesheet>

```

Ecco il file OrcadPCB2 risultante.

```

({ Eeschema Netlist Version 1.1 29/08/2010 21:07:51
eeschema (2010-08-28 BZR 2458)-unstable}
(4C6E2141 $noname P1 CONN_4
(1 VCC)

```

```
(2 /SIG_OUT)
(3 /CLOCK_IN)
(4 GND)
)
(4C6E20BA $noname U2 74LS74
(1 VCC)
(2 /SIG_OUT)
(3 N-04)
(4 VCC)
(5 /SIG_OUT)
(6 ?)
(7 GND)
(14 VCC)
)
(4C6E20A6 $noname U1 74LS04
(1 /CLOCK_IN)
(2 N-04)
(7 GND)
(14 VCC)
)
(4C6E2094 $noname C1 CP
(1 /CLOCK_IN)
(2 GND)
)
(4C6E208A $noname R1 R
(1 VCC)
(2 /CLOCK_IN)
)
)
*
```

---

# Capitolo 12. Riferimento azioni

Di seguito è riportato l'elenco di ogni **azione** disponibile nell'editor di schemi elettrici di KiCad: un comando che può essere assegnato a un tasto di scelta rapida.

## 12.1. Editor degli schemi elettrici

The actions below are available in the Schematic Editor. Hotkeys can be assigned to any of these actions in the **Hotkeys** section of the preferences.

Action	Default Hotkey	Description
Align Items to Grid		
Annotate Schematic...		Fill in schematic symbol reference designators
Annotate Automatically		Toggle automatic annotation of new symbols
Assign Footprints...		Run footprint assignment tool
Clear Net Highlighting	kbd:[~]	Clear any existing net highlighting
Export Drawing to Clipboard		Export drawing of current sheet to clipboard
Edit Library Symbol...	kbd:[Ctrl+Shift+E]	Open the library symbol in the Symbol Editor
Edit Sheet Page Number...		Edit the page number of the current or selected sheet
Edit Symbol Fields...		Bulk-edit fields of all symbols in schematic
Edit Symbol Library Links...		Edit links between schematic and library symbols
Edit with Symbol Editor	kbd:[Ctrl+E]	Open the selected symbol in the Symbol Editor
Export Netlist...		Export file containing netlist in one of several formats
Export Symbols to Library...		Add symbols used in schematic to an existing symbol library (does not remove other symbols from this library)
Export Symbols to New Library...		Create a new symbol library using the symbols used in the schematic (if the library already exists it will be replaced)
Generate Bill of Materials...		Generate a bill of materials for the current schematic

Action	Default Hotkey	Description
Generate Bill of Materials (External)...		Generate a bill of materials for the current schematic using external generator
Generate Legacy Bill of Materials...		Generate a bill of materials for the current schematic (Legacy Generator)
Highlight Net	kbd:[`] ]	Highlight net under cursor
Highlight Nets		Highlight wires and pins of a net
Import Footprint Assignments...		Import symbol footprint assignments from .cmp file created by board editor
Import Graphics...	kbd:[Ctrl +Shift+F]	Import 2D drawing file
Increment Annotations From...		Increment a subset of reference designators starting at a particular symbol
Line Mode for Wires and Buses		Constrain drawing and dragging to horizontal, vertical, or 45-degree angle motions
Line Mode for Wires and Buses		Draw and drag at any angle
Line Mode for Wires and Buses	kbd:[Shift +Space]	Switch to next line mode
Line Mode for Wires and Buses		Constrain drawing and dragging to horizontal or vertical motions
Mark items excluded from simulation		Draw 'X's over items which have been excluded from simulation
Next Symbol Unit		Open the next unit of the symbol
Previous Symbol Unit		Open the previous unit of the symbol
Remap Legacy Library Symbols...		Remap library symbol references in legacy schematics to the symbol library table
Repair Schematic		Run various diagnostics and attempt to repair schematic
Rescue Symbols...		Find old symbols in project and rename/rescue them
Save Current Sheet Copy As...		Save a copy of the current sheet to another location or name
Schematic Setup...		Edit schematic setup including annotation styles and electrical rules
Select on PCB		Select corresponding items in PCB editor
Do not Populate		Set the do not populate attribute

Action	Default Hotkey	Description
Exclude from Bill of Materials		Set the exclude from bill of materials attribute
Exclude from Board		Set the exclude from board attribute
Exclude from Simulation		Set the exclude from simulation attribute
Show Directive Labels		
Show ERC Errors		Show markers for electrical rules checker errors
Show ERC Exclusions		Show markers for excluded electrical rules checker violations
Show ERC Warnings		Show markers for electrical rules checker warnings
Show Hidden Fields		
Show Hidden Pins		
Net Navigator		Show/hide the net navigator
Show OP Currents		Show operating point current data from simulation
Show OP Voltages		Show operating point voltage data from simulation
Switch to PCB Editor		Open PCB in board editor
Simulator		Show simulation window for running SPICE or IBIS simulations.
Show Pin Alternate Icons		Show indicator icons for pins with alternate modes
Hierarchy Navigator	kbd:[Ctrl+H]	Show/hide the schematic sheet hierarchy navigator
Symbol Checker		Show the symbol checker window
Compare Symbol with Library		Show differences between schematic symbol and its library equivalent
Electrical Rules Checker		Show the electrical rules checker window
Show Bus Syntax Help		
Decrement Primary		Decrement the primary field of the selected item(s)
Decrement Secondary		Decrement the secondary field of the selected item(s)
Increment		Increment the selected item(s)

Action	Default Hotkey	Description
Increment Primary		Increment the primary field of the selected item(s)
Increment Secondary		Increment the secondary field of the selected item(s)
Close Outline		Close the in-progress outline
Delete Last Point		Delete the last point added to the current item
Draw Arcs		
Draw Bezier Curve		
Draw Circles		
Draw Rectangles		
Draw Rule Areas		
Draw Hierarchical Sheets	kbd:[S]	
Draw Sheet from Design Block		Copy design block into project as a sheet on current sheet
Draw Sheet from File		Copy sheet into project and draw on current sheet
Draw Tables		
Draw Text Boxes		
Import Sheet		Import sheet into project
Place Wire to Bus Entries	kbd:[Z]	
Place Directive Labels		
Place Design Block	kbd:[Shift+B]	Add selected design block to current sheet
Place Global Labels	kbd:[Ctrl+L]	
Place Hierarchical Labels	kbd:[H]	
Place Images		
Place Junctions	kbd:[J]	
Place Net Labels	kbd:[L]	
Place Next Symbol Unit		Place the next unit of the current symbol that is missing from the schematic
Place No Connect Flags	kbd:[Q]	

Action	Default Hotkey	Description
Place Power Symbols	kbd:[P]	
Draw Text	kbd:[T]	
Place Sheet Pins		
Place Symbols	kbd:[A]	
Sync Sheet Pins		Synchronize sheet pins and hierarchical labels
Sync Sheet Pins		Synchronize sheet pins and hierarchical labels
Draw Buses	kbd:[B]	
Draw Lines	kbd:[I]	
Draw Wires	kbd:[W]	
Switch Segment Posture	kbd:[/]	Switches posture of the current segment.
Undo Last Segment	kbd:[Back]	Walks the current line back one segment.
Unfold from Bus	kbd:[C]	Break a wire out of a bus
Assign Netclass...		Assign a netclass to nets matching a pattern
Autoplace Fields	kbd:[O]	Runs the automatic placement algorithm on the symbol's (or sheet's) fields
Break		Divide into connected segments
Change Symbol...		Assign a different symbol from the library
Change Symbols...		Assign different symbols from the library
Cleanup Sheet Pins		Delete unreferenced sheet pins
Edit Footprint...	kbd:[F]	
Edit Reference Designator...	kbd:[U]	
Edit Text & Graphics Properties...		Edit text and graphics properties globally across schematic
Edit Value...	kbd:[V]	
Mirror Horizontally	kbd:[X]	Flips selected item(s) from left to right
Mirror Vertically	kbd:[Y]	Flips selected item(s) from top to bottom
Pin Table...		Displays pin table for bulk editing of pins
Properties...	kbd:[E]	
Repeat Last Item	kbd:[Ins]	Duplicates the last drawn item

Action	Default Hotkey	Description
Rotate Counterclockwise	kbd:[R]	
Rotate Clockwise		
De Morgan Alternate		Switch to alternate De Morgan representation
De Morgan Standard		Switch to standard De Morgan representation
Slice		Divide into unconnected segments
Swap	kbd:[Alt+S]	Swap positions of selected items
Symbol Properties...		
Change to Directive Label		Change existing item to a directive label
Change to Global Label		Change existing item to a global label
Change to Hierarchical Label		Change existing item to a hierarchical label
Change to Label		Change existing item to a label
Change to Text		Change existing item to a text comment
Change to Text Box		Change existing item to a text box
De Morgan Conversion		Switch between De Morgan representations
Update Symbol...		Update symbol to include any changes from the library
Update Symbols from Library...		Update symbols to include any changes from the library
Drag	kbd:[G]	Move items while keeping their connections
Move	kbd:[M]	
Select Connection	kbd:[Ctrl+4]	Select a complete connection
Select Node	kbd:[Alt+3]	Select a connection item under the cursor
Navigate Back	kbd:[Alt+Left]	Move backward in sheet navigation history
Change Sheet		Change to provided sheet's contents in the schematic editor
Enter Sheet		Display the selected sheet's contents in the schematic editor
Navigate Forward	kbd:[Alt+Right]	Move forward in sheet navigation history
Leave Sheet	kbd:[Alt+Back]	Display the parent sheet in the schematic editor

Action	Default Hotkey	Description
Next Sheet	kbd:[PgDn]	Move to next sheet by number
Previous Sheet	kbd:[PgUp]	Move to previous sheet by number
Navigate Up	kbd:[Alt+Up]	Navigate up one sheet in the hierarchy
Push Pin Length		Copy pin length to other pins in symbol
Push Pin Name Size		Copy pin name size to other pins in symbol
Push Pin Number Size		Copy pin number size to other pins in symbol
Create Corner		
Remove Corner		
Properties...		Edit properties of design block
Delete Design Block		Remove the selected design block from its library
Save Selection as Design Block...		Create a new design block from the current selection
Save Current Sheet as Design Block...		Create a new design block from the current sheet
Design Blocks		Show/hide design blocks library
User-defined Signals...		Add, edit or delete user-defined simulation signals
New Analysis Tab...	kbd:[Ctrl+N]	Create a new tab containing a simulation analysis
Open Workbook...	kbd:[Ctrl+O]	Open a saved set of analysis tabs and settings
Probe Schematic...	kbd:[P]	Add a simulator probe
Run Simulation	kbd:[R]	
Save Workbook	kbd:[Ctrl+S]	Save the current set of analysis tabs and settings
Save Workbook As...	kbd:[Ctrl+Shift+S]	Save the current set of analysis tabs and settings to another location
Show SPICE Netlist		
Edit Analysis Tab...		Edit the current analysis tab's SPICE command and plot setup
Stop Simulation		
Add Tuned Value...	kbd:[T]	Select a value to be tuned
Export Current Plot as CSV...		

Action	Default Hotkey	Description
Export Current Plot as PNG...		
Export Current Plot to Schematic		
Export Current Plot to Clipboard		
Dark Mode Plots		Draw plots with a black background
Dotted Current/Phase		Draw secondary signal trace (current or phase) with a dotted line
Show Legend		
Draw Lines		Draw connected graphic lines
Draw Polygons		
Draw Text Boxes		
Move Symbol Anchor		
Draw Pins	kbd:[P]	
Draw Text		
Add Symbol to Schematic		Add the current symbol to the schematic
Copy		
Cut		
Delete Symbol		Remove the selected symbol from its library
Derive from Existing Symbol...		Create a new symbol, derived from an existing symbol
Duplicate Symbol		
Edit Symbol		Show selected symbol on editor canvas
Export Symbol as SVG...		Create SVG file from the current symbol
Export View as PNG...		Create PNG file from the current view
Import Symbol...		Import a symbol to the current library
New Symbol...	kbd:[Ctrl+N]	Create a new symbol in an existing library
Paste Symbol		
Rename Symbol...		
Save Library As...	kbd:[Ctrl+Shift+S]	Save the current library to a new file
Save As...		Save the current symbol to a different library or name

Action	Default Hotkey	Description
Save Copy As...		Save a copy of the current symbol to a different library or name
Set Unit Display Name...		Set the display name for a particular unit in a multi-unit symbol
Show Pin Electrical Types		Annotate pins with their electrical types
Show Hidden Fields		
Show Hidden Pins		
Show Pin Numbers		Annotate pins with their numbers
Synchronized Pins Mode		Synchronized Pins Mode When enabled propagates all changes (except pin numbers) to other units. Enabled by default for multiunit parts with interchangeable units.
Update Symbol Fields...		Update symbol to match changes made in parent symbol

## 12.2. Comuni

The actions below are available across KiCad, including in the Schematic Editor. Hotkeys can be assigned to any of these actions in the **Hotkeys** section of the preferences.

Action	Default Hotkey	Description
Refresh Plugins		Reload all python plugins and refresh plugin menus
Exclude Marker		Mark current violation in Checker window as an exclusion
Next Marker		
Previous Marker		
Add Library...		Add an existing library folder
Center Justify		Center-justify fields and text items
Pan to Center Selected Objects		
Collapse All		
Click	kbd:[Return]	Performs left mouse button click
Double-click	kbd:[End]	Performs left mouse button double-click
Cursor Down	kbd:[Down]	
Cursor Down Fast	kbd:[Ctrl +Down]	
Cursor Left	kbd:[Left]	

Action	Default Hotkey	Description
Cursor Left Fast	kbd:[Ctrl+Left]	
Cursor Right	kbd:[Right]	
Cursor Right Fast	kbd:[Ctrl+Right]	
Cursor Up	kbd:[Up]	
Cursor Up Fast	kbd:[Ctrl+Up]	
Grid Origin...		Set the grid origin point
Edit Grids...		Edit grid definitions
Expand All		
Switch to Fast Grid 1	kbd:[Alt+1]	
Switch to Fast Grid 2	kbd:[Alt+2]	
Cycle Fast Grid	kbd:[Alt+4]	
Switch to Next Grid	kbd:[N]	
Switch to Previous Grid	kbd:[Shift+N]	
Reset Grid Origin		
Grid Origin		Place the grid origin point
Hide Library Tree		
Inactive Layer View Mode		Toggle inactive layers between normal and dimmed
Inactive Layer View Mode (3-state)	kbd:[H]	Cycle inactive layers between normal, dimmed, and hidden
Inches		
Left Justify		Left-justify fields and text items
Focus Library Tree Search Field	kbd:[Ctrl+L]	
Snap to Objects on the Active Layer Only		Enables snapping to objects on the active layer only
Snap to Objects on All Layers		Enables snapping to objects on all visible layers

Action	Default Hotkey	Description
Toggle Snapping Between Active and All Layers	kbd:[Shift+S]	Toggles between snapping on all visible layers and only the active area
Millimeters		
Mils		
New...	kbd:[Ctrl+N]	Create a new document in the editor
New Library...		Create a new library folder
Open...	kbd:[Ctrl+O]	Open existing document
Open in file explorer...		Open a library file with system file explorer
Edit in a Text Editor...		Open a library file with a text editor
Page Settings...		Settings for paper size and title block info
Pan Down	kbd:[Shift+Down]	
Pan Left	kbd:[Shift+Left]	
Pan Right	kbd:[Shift+Right]	
Pan Up	kbd:[Shift+Up]	
Pin Library		Keep the library at the top of the list
Plot...		
Print...	kbd:[Ctrl+P]	
Quit		Close the current editor
Redo Last Zoom		Return zoom to level prior to last zoom undo
Reset Local Coordinates	kbd:[Space]	
Revert		Throw away changes
Right Justify		Right-justify fields and text items
Save	kbd:[Ctrl+S]	Save changes
Save All		Save all changes
Save As...	kbd:[Ctrl+Shift+S]	Save current document to another location
Save a Copy...		Save a copy of the current document to another location
Select Columns...		
3D Viewer	kbd:[Alt+3]	Show 3D viewer window

Action	Default Hotkey	Description
Show Context Menu		Perform the right-mouse-button action
Show Datasheet	kbd:[D]	Open the datasheet in a browser
Footprint Library Browser		
Footprint Editor		Create, delete and edit board footprints
Library Tree		
Switch to Project Manager		Show project window
Properties		Show/hide the properties manager
Symbol Library Browser		
Symbol Editor		Create, delete and edit schematic symbols
Draw Bounding Boxes		
Always Show Crosshairs	kbd:[Ctrl+Shift+X]	Display crosshairs even when not drawing objects
Full-Window Crosshairs		Switch display of full-window crosshairs
Show Grid		Display background grid in the edit window
Grid Overrides	kbd:[Ctrl+Shift+G]	Enables item-specific grids that override the current grid
Polar Coordinates		Switch between polar and cartesian coordinate systems
Switch units	kbd:[Ctrl+U]	Switch between imperial and metric units
Undo Last Zoom		Return zoom to level prior to last zoom action
Unpin Library		No longer keep the library at the top of the list
Update PCB from Schematic...	kbd:[F8]	Update PCB with changes made to schematic
Update Schematic from PCB...		Update schematic with changes made to PCB
Center on Cursor	kbd:[F4]	
Zoom to Objects	kbd:[Ctrl+Home]	
Zoom to Fit	kbd:[Home]	
Zoom to Selected Objects		
Zoom In at Cursor	kbd:[F1]	
Zoom In		

Action	Default Hotkey	Description
Zoom In Horizontally		Zoom in horizontally the plot area
Zoom In Vertically		Zoom in vertically the plot area
Zoom Out at Cursor	kbd:[F2]	
Zoom Out		
Zoom Out Horizontally		Zoom out horizontally the plot area
Zoom Out Vertically		Zoom out vertically the plot area
Refresh	kbd:[F5]	
Zoom to Selection	kbd:[Ctrl+F5]	
Embedded Files		Manage embedded files
Extract File		Extract an embedded file
Remove File		Remove an embedded file
Cancel		Cancel current tool
Copy	kbd:[Ctrl+C]	Copy selected item(s) to clipboard
Copy as Text	kbd:[Ctrl+Shift+C]	Copy selected item(s) to clipboard as text
Cut	kbd:[Ctrl+X]	Cut selected item(s) to clipboard
Cycle Arc Editing Mode	kbd:[Ctrl+Space]	Switch to a different method of editing arcs
Delete	kbd:[Del]	Delete selected item(s)
Interactive Delete Tool		Delete clicked items
Duplicate	kbd:[Ctrl+D]	Duplicates the selected item(s)
Find	kbd:[Ctrl+F]	
Find and Replace	kbd:[Ctrl+Alt+F]	
Find Next	kbd:[F3]	
Find Next Marker	kbd:[Ctrl+Shift+F3]	
Find Previous	kbd:[Shift+F3]	
Finish	kbd:[End]	Finish current tool
Measure Tool	kbd:[Ctrl+Shift+M]	Interactively measure distance between points

Action	Default Hotkey	Description
Paste	kbd:[Ctrl+V]	Paste item(s) from clipboard
Paste Special...		Paste item(s) from clipboard with options
Redo	kbd:[Ctrl+Y]	
Replace All		
Replace and Find Next		
Search	kbd:[Ctrl+G]	Show/hide the search panel
Select All	kbd:[Ctrl+A]	Select all items on screen
Undo	kbd:[Ctrl+Z]	
Unselect All	kbd:[Ctrl+Shift+A]	Unselect all items on screen
Select Row(s)		Select complete row(s) containing the current selected cell(s)
Select Column(s)		Select complete column(s) containing the current selected cell(s)
Select Table		Select parent table of selected cell(s)
Select item(s)		
About KiCad		
Configure Paths...		Edit path configuration environment variables
Donate		Open "Donate to KiCad" in a web browser
Get Involved		Open "Contribute to KiCad" in a web browser
Getting Started with KiCad		Open "Getting Started in KiCad" guide for beginners
Help		Open product documentation in a web browser
List Hotkeys...	kbd:[Ctrl+F1]	Displays current hotkeys table and corresponding commands
Preferences...	kbd:[Ctrl+,]	Show preferences for all open tools
Report Bug		Report a problem with KiCad
Manage Design Block Libraries...		Edit the global and project design block library lists
Manage Footprint Libraries...		Edit the global and project footprint library lists
Manage Symbol Libraries...		Edit the global and project symbol library lists
Add Column After		Insert a new table column after the selected cell(s)
Add Column Before		Insert a new table column before the selected cell(s)
Add Row Above		Insert a new table row above the selected cell(s)
Add Row Below		Insert a new table row below the selected cell(s)

Action	Default Hotkey	Description
Delete Column(s)		Delete columns containing the currently selected cell(s)
Delete Row(s)		Delete rows containing the currently selected cell(s)
Merge Cells		Turn selected table cells into a single cell
Unmerge Cells		Turn merged table cells back into separate cells.